

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [AEG](#) /

> [AEG CX7-2-45AN Ergorapido Cordless 2-in-1 Vacuum Cleaner User Manual](#)

AEG CX7-2-45AN

AEG CX7-2-45AN Ergorapido Cordless 2-in-1 Vacuum Cleaner

User Instruction Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your AEG CX7-2-45AN Ergorapido Cordless 2-in-1 Vacuum Cleaner. Please read this manual thoroughly before operating the appliance and retain it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your vacuum cleaner.



Image: The AEG CX7-2-45AN Ergorapido Cordless 2-in-1 Vacuum Cleaner, showcasing its sleek design and dual functionality as a stick vacuum and a detachable handheld unit.

IMPORTANT SAFETY INSTRUCTIONS

- Always disconnect the charger from the power supply before cleaning or performing maintenance.
- This appliance is for household use only. Do not use it outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Supervise children and pets when the appliance is in use.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and/or filters in place.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Store the vacuum cleaner indoors in a dry place.

SETUP AND INITIAL USE

1. Assembly

Your AEG Ergorapido vacuum cleaner comes partially assembled. To complete assembly:

1. Insert the handheld unit into the main body of the stick vacuum until it clicks securely into place.
2. Attach the floor nozzle to the bottom of the stick vacuum. Ensure it is firmly connected.

2. Charging the Battery

Before first use, fully charge the vacuum cleaner for approximately 4 hours. The charging indicator lights will show the charging status.

- Place the vacuum cleaner on its charging stand or connect the charger directly to the charging port.
- Plug the charger into a wall outlet.
- The indicator lights will illuminate during charging and turn off or change color when fully charged.

OPERATING INSTRUCTIONS

1. Power On/Off and Suction Control

- To turn on the vacuum cleaner, press the power button located on the handle.
- Press the power button again to turn it off.
- Some models may feature a power level selector to adjust suction strength for different surfaces. Refer to the specific controls on your unit.

2. Using as a Stick Vacuum

For general floor cleaning, use the appliance in its upright stick vacuum configuration. The motorized brush roll is ideal for carpets and hard floors.

3. Using as a Handheld Vacuum

To detach the handheld unit for spot cleaning, furniture, or car interiors:

1. Press the release button located on the main body of the stick vacuum.
2. Gently pull the handheld unit upwards to remove it.
3. Attach desired accessories (e.g., crevice tool, brush nozzle) to the handheld unit's suction opening.

- To reattach, align the handheld unit with the stick vacuum body and push down until it clicks into place.

MAINTENANCE

Regular maintenance ensures your vacuum cleaner operates at peak efficiency.

1. Emptying the Dustbin

- It is recommended to empty the dustbin after each use or when the MAX fill line is reached.
- Press the dustbin release button and remove the dustbin from the handheld unit.
- Open the dustbin lid and empty contents into a waste bin.
- Reattach the dustbin securely.

2. Cleaning the Filters

- The filters should be cleaned regularly, ideally every 2-4 weeks depending on usage.
- Remove the dustbin and then carefully pull out the filters.
- Tap the filters over a waste bin to remove loose dirt.
- For a deeper clean, rinse the filters under lukewarm running water. Ensure they are completely dry before reinserting. Do not use a washing machine or dryer.

3. Cleaning the Brush Roll

- Hair and debris can get tangled in the brush roll. Periodically check and clean it.
- Turn off the vacuum cleaner.
- Locate the brush roll access cover on the floor nozzle and open it.
- Remove the brush roll and carefully cut away any tangled hair or fibers using scissors.
- Reinsert the brush roll and close the cover securely.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged.	Charge the battery fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Reduced suction power.	Dustbin is full.	Empty the dustbin.
	Filters are clogged.	Clean or replace the filters.
	Nozzle or hose is blocked.	Check for and remove any blockages.
Brush roll not spinning.	Hair or debris tangled in brush roll.	Clean the brush roll as described in the Maintenance section.
	Brush roll access cover not closed properly.	Ensure the brush roll cover is securely latched.

SPECIFICATIONS

Model: AEG CX7-2-45AN Ergorapido

Type: Cordless 2-in-1 Stick and Handheld Vacuum Cleaner

Brand: AEG

Noise Level: 75 Decibels

Manufacturer Reference: 900940731

ASIN: B09J1RRRNN

Power: 18 V

Note: Specifications are subject to change without notice for product improvement.

WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please refer to the warranty card included with your product or visit the official AEG website. Do not attempt to repair the appliance yourself, as this may void your warranty and pose safety risks. Always contact authorized service personnel for repairs.

Keep your proof of purchase for warranty claims.