

- Manuals.plus /
- > CERA+ /
 - > CERA+ Portable Espresso Maker PCM01 User Manual

CERA+ PCM01 Black

CERA+ Portable Espresso Maker PCM01 User Manual

Model: PCM01 Black | Brand: CERA+

1. PRODUCT OVERVIEW

The CERA+ PCM01 is a compact and portable electric espresso maker designed for convenience and ease of use, especially for travel, camping, and office environments. It is compatible with both Nespresso-compatible pods and ground coffee. This model does not include a water heating function, requiring pre-heated water for hot beverages.



Image: The CERA+ PCM01 Portable Espresso Maker in black, shown alongside coffee grounds, Nespresso-compatible pods, and a glass of freshly brewed espresso.

Portable



Lightweight



Rechargeable



Easy to Use



15 Bar Electric



**Rich Smooth
Espresso**




**Anywhere.
Anytime.**

Image: A visual summary of the PCM01's key features, including its portability, lightweight design, rechargeable battery, ease of use, 15-bar electric pump, and ability to produce rich, smooth espresso.



Image: A man enjoying coffee outdoors, demonstrating the portable nature of the CERA+ espresso maker for travel and camping.

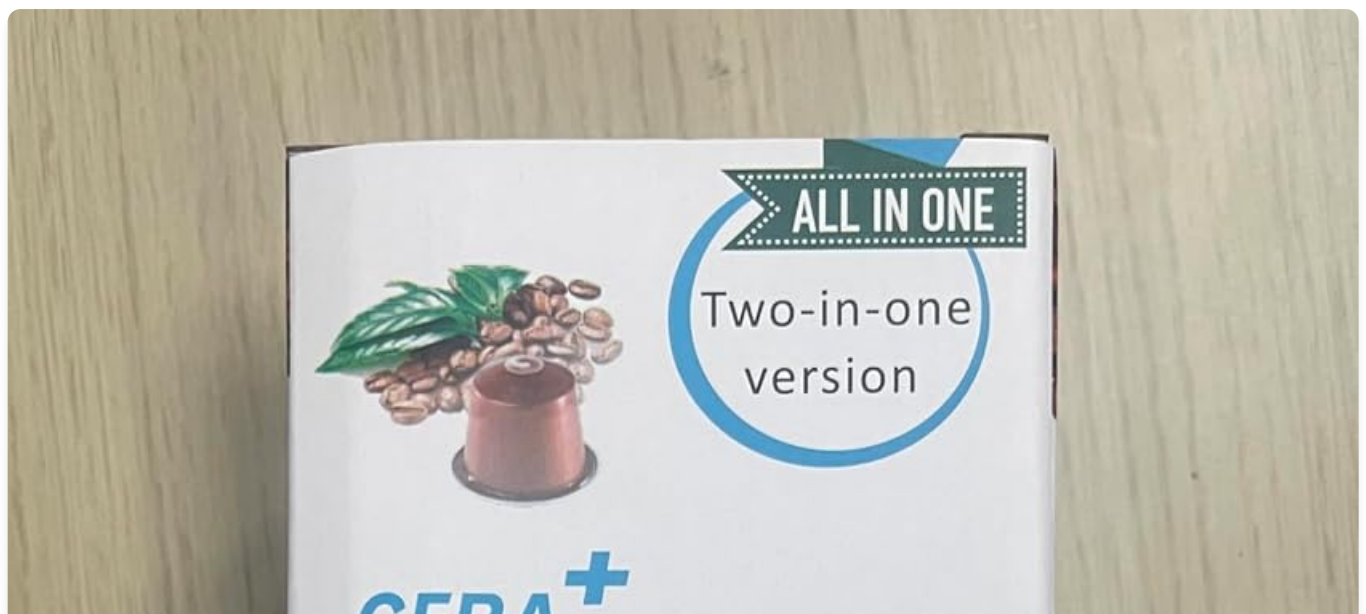

CERA

PORTABLE ESPRESSO COFFEE MACHINE

COMPATIBLE WITH COFFEE CAPSULE/
GROUND COFFEE

One-key extraction makes
life easier and be your own
coffer maker

Golden pressure extraction
rebuilds pure Italian cream

Multiple models ,
meet your different
requirements

Home-sweet home

Camping

Perfect presents

In the car drink holder

Beach-outdoor fun

when traveling

Backpacking

Every where



AUTHENTIC ESPRESSO
WITH DENSE CREMA

PERFECT EXTRACTION
WITH INTENSE FLAVORS

Image: The compact CERA+ espresso maker easily fitting into a bag, highlighting its portability for daily commutes or travel.

2. PACKAGE CONTENTS

Before first use, please ensure all components are present and in good condition.



Image: An illustration detailing the various parts and accessories included with the CERA+ PCM01, such as the main espresso machine body, cover, coffee cup, USB Type-C charging cable, ground coffee filter basket, capsule adapter, cleaning brush, locking chamber, and coffee powder spoon.

- Espresso Machine Body
- Cover
- Coffee Cup
- Type-C USB Charging Cable
- Ground Coffee Filter Basket
- Capsule Adapter
- Cleaning Brush
- Locking Chamber
- Coffee Powder Spoon
- User Guide (this manual)

3. SETUP AND INITIAL USE

3.1 Charging the Device

The PCM01 features a built-in rechargeable battery. Before initial use, ensure the device is fully charged.

1. Connect the provided USB Type-C charging cable to the machine.
2. Connect the other end of the cable to a 10W or 15W power adapter (not included). Do not use a 5W adapter as it may not provide sufficient power for charging.
3. A full charge typically takes approximately 1.5 hours.
4. Once fully charged, the machine can brew up to 100 cups of espresso.

3.2 Preparing for First Use

It is recommended to run a cycle with just water before brewing coffee for the first time to clean the internal components.

1. Ensure the machine is charged.
2. Fill the water tank with clean water (cold or hot, depending on desired cleaning temperature).
3. Press the power button twice quickly to initiate a brewing cycle with water only.
4. Discard the water after the cycle is complete.

4. OPERATING INSTRUCTIONS

The CERA+ PCM01 supports both Nespresso-compatible pods and ground coffee. This model does not heat water; hot water must be added manually for hot beverages.

▲PCM01 NO HEAT WATER FUNCTION

Simple Brewing



1. Add Nespresso pods or ground coffee into adapter



2. Pour hot boiling water



3. Press the button two times quickly to extraction. Enjoy it!

▲ONE FULL CHARGED CAN MAKE 100 CUPS

Image: A visual guide demonstrating the three simple steps for brewing coffee with the PCM01: inserting the coffee, adding water, and pressing the button for extraction.

4.1 Brewing with Nespresso-Compatible Pods

1. Insert a Nespresso-compatible coffee pod into the capsule adapter.
2. Place the capsule adapter into the machine's brewing chamber.
3. Fill the water tank with up to 120ml of water. For hot espresso, use hot boiling water. For cold brew, use cold water.
4. Ensure the locking chamber is securely tightened to prevent leaks.
5. Press the power button twice quickly to begin extraction. The machine will automatically brew the espresso.
6. The brewing process takes approximately 30 seconds.

4.2 Brewing with Ground Coffee

1. Add your desired amount of ground coffee into the ground coffee filter basket using the provided coffee powder spoon. Do not overfill.
2. Place the ground coffee filter basket into the machine's brewing chamber.
3. Fill the water tank with up to 120ml of water. For hot espresso, use hot boiling water. For cold brew, use cold water.
4. Ensure the locking chamber is securely tightened to prevent leaks.
5. Press the power button twice quickly to begin extraction. The machine will automatically brew the espresso.
6. The brewing process takes approximately 30 seconds.

FEATURES



COMPATIBILITY

Nespresso Pods &
Ground Coffee



ONE BUTTON

Quickly Press the Button
Twice Starts Extraction



Fast Brew

30 Seconds
20 Bar Max



BATTERY OPERATED

USB-C Rechargeable
Make 100 Cups



120ML WATER TANK

△No Heat Water Function△



EASY TO CLEAN

Disassemble Accessories

Image: A visual demonstration of the brewing steps: pouring hot water into the machine and then pressing the button twice to initiate the espresso extraction.

MAKE YOUR FAVORITE COFFEE

HOT BREW & COLD BREW



ESPRESSO



LATTE



CAPPUCCINO



ICE COFFEE



AMERICANO



Image: An illustration showcasing the versatility of the machine to create various coffee beverages, including hot and cold options like Espresso, Latte, Cappuccino, Ice Coffee, and Americano.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your espresso maker. The machine's accessories are designed for easy disassembly for cleaning.

- After each use, disassemble the brewing chamber, filter basket/capsule adapter, and coffee cup.
- Rinse all removable parts under running water.
- Use the provided cleaning brush to remove any residual coffee grounds from the filter basket or brewing chamber.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- Ensure all parts are completely dry before reassembling or storing the machine.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on or brew.	Low battery or no charge.	Charge the machine fully using a 10W/15W adapter.
Water leakage during brewing.	Brewing chamber/locking chamber not tightened properly.	Ensure all parts are securely assembled and tightened before brewing.
Weak or no espresso extraction.	Insufficient water, clogged filter, or incorrect coffee grind/pod.	Check water level. Clean filter basket/adapter. Use appropriate grind size for espresso or ensure pod is correctly inserted.

Problem	Possible Cause	Solution
Machine stops mid-brew.	Battery low.	Recharge the machine.

7. SPECIFICATIONS

Feature	Detail
Model	PCM01 Black
Brand	CERA+
Dimensions (Product)	6.9 cm (D) x 6.9 cm (W) x 20.3 cm (H)
Weight (Package)	0.8 kg
Material	Plastic
Color	Black
Voltage	5 Volts
Battery Type	Lithium Ion (Built-in)
Water Tank Capacity	120 ml
Brewing Pressure	Up to 20 Bar (Max)
Brewing Time	Approx. 30 seconds
Compatibility	Nespresso-compatible pods, Ground Coffee
Heating Function	None (requires pre-heated water for hot beverages)

8. WARRANTY AND SUPPORT

CERA+ provides a 1-year warranty against manufacturer defects for the PCM01 Portable Espresso Maker. For warranty claims or technical support, please contact CERA+ customer service through the retailer where the product was purchased or refer to the contact information provided in the original product packaging.

If you are not satisfied with the machine, a full refund may be provided as per the retailer's return policy.

Note: This model (PCM01) does not have a water heating function. If you require a portable espresso machine with a heating function, please search for model B0CHP1Y1LJ on Amazon.

© 2024 CERA+. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09J1VYPYZ>

More documents and user manuals: **<https://manuals.plus/>**