

YIKA RST-808HB

YIKA RST-808HB Travel Clothes Steamer Instruction Manual

Model: RST-808HB

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the YIKA RST-808HB Travel Clothes Steamer. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always ensure the voltage matches your power supply.
- Do not immerse the steamer in water or other liquids.
- Keep the steamer away from children and pets.
- Do not touch the hot steam nozzle during operation or immediately after use.
- Only use distilled or demineralized water to prevent mineral buildup.
- Unplug the steamer when not in use and before cleaning.
- Never pull the cord to disconnect from the outlet; grasp the plug.

2. PRODUCT OVERVIEW

The YIKA RST-808HB is a compact and lightweight handheld garment steamer designed for efficient wrinkle removal. It features a stainless steel steam nozzle and a 120ml integrated water reservoir.

Stainless steel Panel

Triangle design faceplate offers larger contact area to reach better steaming result

Large vent on center

Put out more steam to reach and release deeper wrinkles quickly

Small vents around

Produce finer steam for light wrinkles to enhance the performance



Figure 2.1: Overview of the YIKA RST-808HB Travel Clothes Steamer, highlighting its main parts including the stainless steel panel, large central vent, and small surrounding vents for steam distribution.

LIGHTWEIGHT

compact and powerful
easy to carry and pack



Figure 2.2: Detailed view of the steamer's stainless steel faceplate, featuring a triangular design for increased contact area and multiple steam vents for effective wrinkle removal.

3. SETUP

Before first use, ensure all packaging materials are removed. Follow these steps to prepare your steamer:

1. **Open the Water Reservoir:** Locate the silicone water stopper on top of the steamer and open it.
2. **Fill with Water:** Using the provided measuring cup, fill the 120ml integrated reservoir with distilled or demineralized water. Do not overfill past the MAX line.
3. **Close the Reservoir:** Securely close the silicone water stopper to prevent leakage.



Figure 3.1: Illustrates the process of filling the steamer's built-in water reservoir. The silicone stopper ensures a secure seal to prevent leaks.

Video 3.1: A demonstration video showing the setup and operation of the YIKA portable steamer. This video includes steps for filling the water tank and using the steamer on various garments.

4. OPERATING INSTRUCTIONS

Once the steamer is filled and ready, follow these steps to remove wrinkles from your garments:

1. **Power On:** Plug the steamer into a suitable electrical outlet. Press the power button. The indicator light will illuminate.
2. **Heat-Up:** Allow approximately 45 seconds for the steamer to heat up and produce continuous steam.
3. **Prepare Garment:** Hang your garment on a hanger or hold it taut. For best results, steam from top to bottom.
4. **Steam Application:** Hold the steamer upright, keeping the nozzle a few inches away from the fabric. Gently glide the steamer over the wrinkled areas. For stubborn wrinkles, you may lightly press the nozzle against the fabric.
5. **Power Off:** When finished, press the power button to turn off the steamer and unplug it from the outlet.

STEAM FLOW 20G/MIN

refresh fibers easily remove
wrinkle quickly

ONE BODY DESIGN

non-detachable water tank
enhance performance & safety



Figure 4.1: The YIKA steamer in action, demonstrating fast steam with strong penetration to effectively remove wrinkles from clothing.



Figure 4.2: The steamer's well-balanced design allows for comfortable holding during extended use, making it easy to de-wrinkle fabrics conveniently.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your steamer:

1. **Empty Water Tank:** After each use, ensure the steamer has cooled down, then open the water stopper and empty any remaining water from the reservoir.
2. **Clean Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners.
3. **Descaling (Monthly):** If you notice reduced steam output or mineral residue, mix equal parts white vinegar and distilled water. Fill the reservoir with this solution and run the steamer until half the solution is used. Unplug, let it cool, then empty. Rinse thoroughly with distilled water.
4. **Storage:** Store the steamer in a cool, dry place, away from direct sunlight and moisture.

6. TROUBLESHOOTING

If you encounter issues with your YIKA RST-808HB steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; Mineral buildup; Steamer not fully heated.	Refill water tank; Perform descaling procedure; Allow 45 seconds for heat-up.
Water leakage	Water stopper not securely closed; Overfilled water tank.	Ensure stopper is tight; Do not fill past MAX line.
Steamer not turning on	Not plugged in; Power outlet issue; Faulty unit.	Check power connection; Try a different outlet; Contact customer support if issue persists.

7. SPECIFICATIONS

- **Brand:** YIKA
- **Model Number:** RST-808HB
- **Color:** Stainless Steel
- **Product Dimensions:** 5"L x 3.15"W x 9.8"H
- **Item Weight:** 1.5 Pounds
- **Style:** Portable
- **Capacity:** 120 Milliliters
- **Heat-up Time:** Approximately 45 seconds
- **Continuous Steam Time:** Up to 10 minutes (with full reservoir)

8. WARRANTY AND SUPPORT

Specific warranty details are not provided in the product information. For any product inquiries, technical support, or warranty claims, please refer to the contact information provided with your purchase or visit the official YIKA website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question