

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [AEGIS](#) /
- › [AEGIS 5-Gun Rifle Security Safe Instruction Manual](#)

AEGIS 5-Gun Rifle Security Safe

AEGIS 5-Gun Rifle Security Safe Instruction Manual

Model: 5-Gun Rifle Security Safe

Brand: AEGIS

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

1. PRODUCT OVERVIEW

The AEGIS 5-Gun Rifle Security Safe is designed to provide secure storage for up to five long guns, along with a separate lock box for ammunition, pistols, and other valuables. Constructed from reinforced solid steel, it features a digital keypad for quick access and multiple locking bolts for enhanced security. This safe is suitable for home or office use, helping to keep firearms and valuables protected from unauthorized access.



Image 1.1: Overview of the AEGIS Digital Gun Security Cabinet, highlighting its key features including spare keys, solid construction, quick access, theft alert alarm, mounting bolts, and pre-drilled mounting holes.

2. SETUP INSTRUCTIONS

2.1 Unpacking and Inspection

Carefully remove the safe from its packaging. Inspect the safe for any signs of damage. Report any damage to the retailer immediately.

2.2 Battery Installation

The safe requires 4x 1.5V AA batteries (not included) for the digital keypad. These batteries power the electronic lock system.

1. Open the safe using the emergency key (refer to Section 3.2).
2. Locate the battery compartment on the inside of the safe door.
3. Remove the battery cover.
4. Insert four (4) 1.5V AA batteries, ensuring correct polarity (+/-) as indicated in the compartment.
5. Replace the battery cover.

Your browser does not support the video tag.

Video 2.1: This video demonstrates the process of installing the batteries into the AEGIS Rifle Gun Safe's electronic keypad. It shows how to access the battery compartment and correctly insert the 4x AA batteries.

2.3 Mounting the Safe

For optimal security, it is recommended to securely mount the safe to a wall or floor. Mounting hardware is included.

1. Identify a suitable location for the safe, such as a closet or against a sturdy wall.
2. Locate the pre-drilled mounting holes on the back and bottom of the safe.
3. Position the safe and mark the drilling points on the wall or floor.
4. Drill pilot holes at the marked locations.
5. Align the safe with the drilled holes and secure it using the provided mounting bolts.

Mount in Your Closet



Image 2.2: The AEGIS gun safe securely mounted within a closet, demonstrating a recommended installation location.



Image 2.3: A detailed view of a pre-drilled mounting hole, indicating where to secure the safe to a wall or floor.

3. OPERATING INSTRUCTIONS

3.1 Initial Opening and Code Setting

Upon first use, the safe can be opened using the factory default code. It is crucial to change this code

immediately for security.

1. **Open with Factory Code:** Enter the factory code **1-5-9** on the digital keypad. Press the "CLEAR/LOCK" button to confirm. Two beeps and a green "OK" light will indicate successful entry.
2. **Rotate Handle:** Rotate the handle clockwise to open the safe door.
3. **Set New Code:** With the door open, press the red reset button located on the inside of the door. The keypad will beep once.
4. Enter your new 3-8 digit code. Press the "CLEAR/LOCK" button to confirm. The safe will beep twice, indicating the new code is set.
5. Test the new code with the door open before closing it.

Your browser does not support the video tag.

Video 3.1: This video demonstrates how to open the AEGIS Rifle Gun Safe using the factory code and how to set a new personal access code for the electronic keypad.

3.2 Emergency Key Access

In case of forgotten code or battery failure, the safe can be opened using the emergency key.

1. Locate the emergency keyhole, usually concealed behind a cap on the keypad panel.
2. Remove the cap.
3. Insert the emergency key and turn it clockwise.
4. While holding the key turned, rotate the handle clockwise to open the safe.

Your browser does not support the video tag.

Video 3.2: This video illustrates the procedure for opening the AEGIS Rifle Gun Safe using the emergency key, which is useful if the digital code is forgotten or batteries are depleted.

3.3 Using the Separate Lock Box

The safe includes an internal lock box for smaller items, secured by a separate key.

1. Open the main safe door.
2. Locate the internal lock box at the top of the safe.
3. Insert the small emergency key into the lock box keyhole and turn clockwise to open.
4. Store items such as ammunition, pistols, or documents inside.
5. Turn the key counter-clockwise to lock the internal box.



Image 3.3: A close-up view of the separate lockable box located inside the safe, demonstrating its key-operated locking mechanism for securing smaller valuables.

3.4 Locking the Safe

To lock the safe, simply close the door and rotate the handle counter-clockwise. The electronic lock will automatically engage.

Your browser does not support the video tag.

Video 3.4: This video shows the final step of securing the AEGIS Rifle Gun Safe by closing the door and rotating the handle counter-clockwise to engage the locking mechanism.

3.5 Adjustable Gun Rack

The safe is equipped with an adjustable and removable foam gun rack. This allows for customization based on the length and configuration of your firearms.



Image 3.5: A close-up view of the adjustable foam gun rack, designed to accommodate various firearm sizes and configurations.

4. MAINTENANCE

To ensure the longevity and proper functioning of your AEGIS 5-Gun Rifle Security Safe, follow these maintenance guidelines:

- **Cleaning:** Wipe the exterior and interior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Lock Mechanism:** Periodically check the locking bolts and hinges for smooth operation. Apply a small amount of lubricant if necessary.
- **Battery Replacement:** Replace the AA batteries annually, or immediately when the low battery warning is indicated (red battery light).
- **Key Storage:** Store emergency keys in a secure location away from the safe and out of reach of unauthorized individuals.

5. TROUBLESHOOTING

5.1 Alarm System and Lockout

The safe features an anti-theft alarm system:

- **3 Wrong Entries:** If three incorrect codes are entered consecutively, the safe will emit a warning sound and lock the user out for 20 seconds.
- **Additional Wrong Entries:** If another three invalid code attempts are made after the initial lockout, the safe will trigger a longer warning and lock the user out for 5 minutes.
- **Bypassing Lockout:** You can always use the emergency key to open the safe, even during a lockout period.

Smart Alarm System

The rifle safe will beep and the keypad will be locked when input wrong code for 3 times consecutively



Image 5.1: Illustration of the smart alarm system, showing the safe activating an alarm when an unauthorized attempt is made to open it.

5.2 Low Battery Warning

If the red battery light on the keypad illuminates, it indicates that the batteries are low. Replace the batteries immediately to ensure continued functionality of the electronic lock. Refer to Section 2.2 for battery installation instructions.

6. PRODUCT SPECIFICATIONS

| Feature | Detail |
|---------|---------------------------|
| Brand | AEGIS |
| Model | 5-Gun Rifle Security Safe |

| | |
|--------------------------------|--|
| Exterior Dimensions (D*W*H) | 13.8" x 11.8" x 57.1" |
| Interior Dimensions (D*W*H) | 13.5" x 11" x 50.4" |
| Separate Lock Box Size (D*W*H) | 13.5" x 7.9" x 6.7" |
| Capacity | Up to 5 long guns (up to 49" long) |
| Material | Alloy Steel |
| Lock Type | Digital Keypad, Emergency Key |
| Alarm | Anti-theft (triggered by incorrect code entries) |
| Mounting Type | Floor Mount, Wall Mount (pre-drilled holes) |
| Included Components | Mounting Bolts, Keys |
| Batteries Required | 4x 1.5V AA (Alkaline, not included) |
| Net Weight | Approximately 86 pounds |

5 GUNS CABINET SIZE

Exterior Dimensions:

L13.8" × W11.8" × H57.1"

Seperate Lock Box Dimensions:

L13.5" × W7.9" × H6.7"

Interior Dimensions:

L13.5" × W11.0" × H50.4"



Image 6.1: Detailed diagram illustrating the exterior, interior, and separate lock box dimensions of the AEGIS 5-Gun Rifle Security Safe.

7. WARRANTY INFORMATION

Specific warranty details are not provided in the product information. Please refer to the product packaging or contact AEGIS customer support for warranty terms and conditions.

8. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your AEGIS 5-Gun Rifle Security Safe, please refer to the contact information provided on the product packaging or the official AEGIS website.

