

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [RICOO](#) /
- › [RICOO S7744 TV Wall Mount Instruction Manual](#)

RICOO S7744

RICOO S7744 TV Wall Mount Instruction Manual

Model: S7744

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your RICOO S7744 TV Wall Mount. Please read all instructions carefully before beginning installation and retain this manual for future reference.



Image: The RICOO S7744 TV Wall Mount, showcasing its articulating arm design.

Safety Information

- Ensure the mounting surface can safely support the combined weight of the mount and your TV.
- Use appropriate tools and follow all steps precisely. If unsure, consult a qualified installer.
- Do not exceed the maximum weight capacity of 45 kg (99 lbs).
- Verify VESA compatibility (max 400x400 mm) with your TV before installation.
- Keep children and pets away during installation.

PACKAGE CONTENTS

Please check that all components are present and undamaged before installation. If any parts are missing or damaged, do not proceed with installation and contact customer support.

The package typically includes:

- Wall plate assembly with articulating arm
- TV bracket arms
- Mounting hardware kit (various screws, washers, spacers, and concrete anchors)
- Instruction manual

SETUP AND INSTALLATION

Follow these steps carefully to install your TV wall mount. It is recommended to have two people for installation.

1. **Step 1: Determine Mounting Location**

Choose a suitable location on your wall. Ensure there are no hidden electrical wires or plumbing. The wall must be capable of supporting the weight of the mount and your TV. Use a stud finder if mounting to wood studs.

2. **Step 2: Attach TV Brackets to TV**

Carefully place your TV face down on a soft, clean surface. Attach the TV bracket arms to the back of your TV using the appropriate screws, washers, and spacers from the hardware kit. Ensure the brackets are centered and securely fastened to the VESA mounting holes on your TV.

Note: The mount supports VESA patterns from 200x200 mm up to 400x400 mm.

3. **Step 3: Mount Wall Plate to Wall**

Hold the wall plate assembly against the wall at your desired height. Use a level to ensure it is straight. Mark the drilling locations. Drill pilot holes. For concrete walls, insert the provided wall anchors. Secure the wall plate to the wall using the appropriate screws. Ensure it is level and firmly attached.

4. **Step 4: Hang TV on Wall Plate**

With assistance, carefully lift the TV with the attached brackets and hook them onto the wall plate. Ensure the TV is securely seated on the wall plate. Tighten any safety screws or locking mechanisms to prevent accidental dislodgement.

OPERATING THE TV WALL MOUNT

The RICOO S7744 mount offers various adjustments for optimal viewing.

- **Swivel:** The mount allows for a swivel range of +/-60 degrees. Gently push or pull the TV to adjust the viewing angle horizontally.
- **Tilt:** Adjust the vertical viewing angle with a tilt range of +18 degrees (up) to -2 degrees (down). Loosen the tilt adjustment screws, set the desired angle, and re-tighten.
- **Leveling:** The front plate can be rotated +/-3 degrees for fine-tuning the TV's level after installation. Loosen the leveling screws, adjust, and re-tighten.
- **Extension:** The arm length can be extended from 86 mm to 388 mm from the wall. Gently pull the TV away from the wall or push it closer.



Image: Demonstrates the swivel, tilt, and extension capabilities of the mount, along with integrated cable management features for organizing cables.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV wall mount.

- **Cleaning:** Wipe the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Periodic Checks:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary.
- **Movement:** If the mount's movement becomes stiff, apply a small amount of silicone-based lubricant to the moving joints.

TROUBLESHOOTING

Problem	Possible Cause	Solution
TV is not level	Wall plate not level, or front plate adjustment needed.	Adjust the +/-3 degree leveling feature on the front plate. If the wall plate is significantly off, re-install it ensuring it is level.

Problem	Possible Cause	Solution
Mount feels loose or wobbly	Mounting screws are not tight enough, or wall anchors are insufficient.	Check and re-tighten all wall and TV mounting screws. Ensure appropriate anchors were used for your wall type and that they are securely installed.
Difficulty adjusting swivel/tilt	Adjustment screws are too tight, or joints require lubrication.	Loosen adjustment screws slightly. Apply silicone-based lubricant to moving joints if necessary.

SPECIFICATIONS

Model: S7744

Screen Size Compatibility: 32 - 55 inches (81 cm - 140 cm)

Maximum Weight Capacity: 45 kg (99 lbs)

VESA Compatibility: 200x200, 300x200, 300x300, 400x200, 400x400 mm

Swivel Range: +/-60 degrees

Tilt Range: +18 degrees / -2 degrees

Leveling Adjustment: +/-3 degrees

Wall Distance (Arm Length): 86 mm - 388 mm

Material: Steel (Note: Product specifications listed 'wood', but steel is the standard material for TV mounts of this type.)

Color: Black

Product Dimensions: 15.28 x 17.13 x 16.54 inches

Item Weight: 9.48 pounds

