

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Ansmann](#) /

› [ANSMANN AES4 Timer Switch User Manual](#)

Ansmann 1260-0006

ANSMANN AES4 Timer Switch User Manual

Model: 1260-0006

Brand: Ansmann

PRODUCT OVERVIEW

The ANSMANN AES4 Timer Switch is a digital weekly timer designed to automate the switching of electrical devices. It features a clear LCD display, 10 programmable switching times, a random function for simulating presence, and a summer time adjustment feature. This device helps in managing energy consumption and enhancing home security.





Figure 1: Front view of the ANSMANN AES4 Timer Switch, showing the LCD display and control buttons.

SETUP AND INITIAL CONFIGURATION

Before first use, ensure the timer switch is fully charged by plugging it into a live socket for at least 30 minutes. This will activate the internal battery for memory retention.

1. Resetting the Device

To clear all previous settings and ensure a fresh start, locate the small **RESET** button (usually recessed) and press it with a pointed object (e.g., a pen tip). The display will show all segments, then reset to 00:00.

2. Setting Current Time and Day

1. Press the **CLOCK** button once. The display will show the current time.
2. Press the **WEEK** button repeatedly to set the current day (MO, TU, WE, TH, FR, SA, SU).
3. Press the **HOUR** button repeatedly to set the current hour (0-23).

4. Press the **MINUTE** button repeatedly to set the current minute (0-59).
5. To exit time setting mode, press any other button or wait approximately 30 seconds for the device to return to normal display.



Figure 2: Close-up of the LCD display, illustrating the day and time setting interface. Note the "SUMMER" indicator for summer time function.

3. 12/24 Hour Display Selection

While in normal clock mode, press the **CLOCK** button and then the **TIMER** button simultaneously to toggle between 12-hour (with AM/PM indicator) and 24-hour display formats.

4. Summer Time Function

To activate or deactivate the summer time (Daylight Saving Time) function, press the **CLOCK** button and then the **ON/AUTO/OFF** button simultaneously. The display will show "SUMMER" when activated, and the time will advance by one hour.

OPERATING INSTRUCTIONS

The AES4 Timer Switch allows for up to 10 ON/OFF programs per day or week, along with manual control and a random function.

1. Programming ON/OFF Times

1. Press the **TIMER** button. The display will show "1 ON". This is the first ON program.
2. Use **WEEK** , **HOURL** , and **MINUTE** buttons to set the desired ON time and day(s) for this program. You can select specific days, weekdays, weekends, or all days.
3. Press the **TIMER** button again. The display will show "1 OFF". This is the first OFF program.
4. Use **WEEK** , **HOURL** , and **MINUTE** buttons to set the desired OFF time and day(s) for this program.
5. Repeat steps 1-4 for up to 10 ON/OFF programs. Pressing **TIMER** will cycle through P1 ON, P1 OFF, P2 ON, P2 OFF, ..., P10 ON, P10 OFF.
6. To exit programming mode, press the **CLOCK** button or wait for 30 seconds.



Figure 3: Example of the timer switch being used to automate Christmas lighting, turning lights on from 17:00 to 08:00.



Figure 4: The timer switch automating aquarium lighting, ensuring fish have a regular light cycle, for example, from 08:00 to 20:00.

2. Manual ON/AUTO/OFF Mode

Press the **ON/AUTO/OFF** button to cycle through the operating modes:

- **ON:** The connected device is continuously ON, overriding all programs.
- **AUTO:** The connected device operates according to the programmed ON/OFF times. This is the standard operating mode for automated control.
- **OFF:** The connected device is continuously OFF, overriding all programs.

3. Random Function

The random function is designed to simulate presence in your home by randomly switching the connected device ON and OFF within a specific time window (e.g., 18:00 to 06:00). This can deter potential intruders.

To activate the random function, press the **RANDOM** button. "RANDOM" will appear on the display. Press it again to deactivate.



Einbrecher werden es hassen!

Für mehr Sicherheit

Durch den Random-Mode wird die Anwesenheit im Haus simuliert und schreckt somit Diebe ab.

Figure 5: The timer switch utilizing its random mode to simulate occupancy, enhancing home security by randomly turning lights on and off.

MAINTENANCE

The ANSMANN AES4 Timer Switch requires minimal maintenance.

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents. Ensure the device is unplugged before cleaning.
- **Storage:** If storing the device for an extended period, ensure it is unplugged and kept in a dry, cool place.
- **Battery:** The internal battery is designed for memory retention during power outages. It is not user-replaceable.

TROUBLESHOOTING

If you encounter issues with your ANSMANN AES4 Timer Switch, try the following steps:

- **Display is blank or unresponsive:** Ensure the timer is plugged into a live power outlet. If it has been unplugged for a long time, the internal battery might be depleted. Plug it in for at least 30 minutes to charge.

- **Programs are not running:**
 - Check if the timer is in "AUTO" mode. If it's in "ON" or "OFF" mode, programs will be overridden.
 - Verify that the current time and day are set correctly.
 - Review your programmed ON/OFF times to ensure they are set as intended and do not conflict.
- **Device connected to timer is not turning ON/OFF:**
 - Ensure the connected device is properly plugged into the timer switch.
 - Check if the connected device itself is working by plugging it directly into a wall socket.
 - Ensure the timer switch is receiving power.
- **Random function not working:** Ensure the "RANDOM" indicator is visible on the display.
- **General malfunction:** Perform a full reset of the device by pressing the recessed **RESET** button. Note that this will erase all programmed settings.

SPECIFICATIONS


Feature	Detail
Model Number	1260-0006
Product Dimensions	2.36 x 2.35 x 5.31 inches
Item Weight	5.4 ounces (153 Grams)
Screen Size	2.1 Inches
Max. Power Rating	3680 W (as per product title/description)
Switching Times	Up to 10 ON/OFF programs per day/week
Functions	Digital Timer, Random Function, Summer Time, 12/24-hour display

WARRANTY AND SUPPORT


For detailed warranty information and technical support, please refer to the official Ansmann website or contact their customer service directly. Keep your purchase receipt as proof of purchase.
Official Ansmann Website: www.ansmann.de



© 2025 Ansmann. All rights reserved.

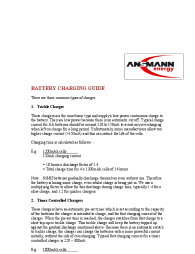	Ansmann AES6 Digital Timer User Manual User manual for the Ansmann AES6 digital timer, detailing setup, programming, functions like summer time and random mode, manual operation, and technical specifications. This guide provides instructions for controlling household appliances to save energy.
	ANSMANN APM2 Energy Consumption Meter User Manual Comprehensive user manual for the ANSMANN APM2 energy consumption meter, detailing its functions, safety instructions, technical specifications, and proper usage for monitoring household appliance energy usage.
	Ansmann Battery Charging Guide: Types and Technology A comprehensive guide to battery charging, explaining trickle chargers, timer-controlled chargers, and microprocessor-controlled chargers, with examples and technical details from Ansmann.
	ANSMANN M900P LED Flashlight Operating Instructions Comprehensive operating instructions, safety guidelines, environmental information, and warranty details for the ANSMANN M900P LED flashlight. Learn about battery replacement, safe usage, and product specifications.
	ANSMANN Future Multi 3in1 LED Flashlight Operating Instructions User manual for the ANSMANN Future Multi 3in1 LED flashlight, covering battery replacement, safety warnings, environmental information, optical radiation hazards, limitation of liability, and warranty details.
	ANSMANN FUTURE M250F LED Torch - User Manual & Safety Guide Comprehensive operating instructions, safety guidelines, and technical specifications for the ANSMANN FUTURE M250F LED flashlight. Learn about battery replacement, environmental disposal, and hazard information.

 Documents - Ansmann – 1260-0006

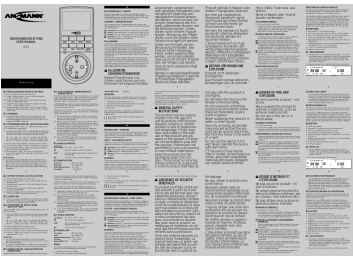

[pdf] User Manual

Download Manuals ANSMANN AG 1260 0006 socket mains timer AES4 Manual shop ansmann de media manuals |||
BEDIENUNGSANLEITUNG USER MANUAL AES4 DE EN FR IT NL 2. EINSTELLEN DER DIGITALUHR IM UHR-MODU ... strasse 10 97959 Assamstadt Germany
Hotline: 49 0 6294 / 4204 3400 E-Mail: hotline ansmann.de MA-1260-0006/V3/10-2022 4.5 Appuyez sur la touche TIMER pour passer la position de rglage Marche / ...
lang:de score:36 filesize: 180.94 K page_count: 2 document date: 2022-10-17



[pdf] Datasheet

1260 0006 V01 ODA chartsarich mmo 95231827 1734875425 6069 42881 Ansmann Zeitschaltuhr von expert Technomarkt files technomarkt de leaflet |||

Datenblatt Data sheet: Digitale Wochen-Zeitschaltuhr AES4 Digital week mains socket timer switch AES4 **1260-0006** Produktname Product name: Artikelnummer Part Number: Anfragenummer Inquiry Number: Ersteller / Datum Creator / Date: Digitale Wochen-Zeitschaltuhr AES4 Digital week mains...

lang:de **score:30** filesize: 426.56 K page_count: 4 document date: 2022-10-25



[pdf] Datasheet

Christopher Vogt ansmann deansmann de Datenblatt data sheet Digitale Wochen Zeitschaltuhr AES4 Digital week mains socket timer switch 1260 0006 Seite 2 ANSMANN DB MULTIANSMANN MULTIdn reichelt documents datenblatt E910 ANSMANN MULTI |||

Datenblatt data sheet: Digitale Wochen-Zeitschaltuhr AES4 Digital week mains socket timer switch AES4 **1260-0006** Produktname Product name: Artikelnummer Part Number: Anfragenummer Inquiry Number: Ersteller / Datum Creator / Date: Digitale Wochen-Zeitschaltuhr AES4 Digital week mains...

lang:de **score:30** filesize: 231.85 K page_count: 4 document date: 2021-12-06




[pdf] Datasheet

Christopher Vogt Ansmann 1260 0006 Időkapcsoló óra programozó csomag Digitális Napi program Heti 3680 W IP20 Folyamatos üzem Conrad adatlap 2484674 ansmann idokapcsoló ora programozo digitalis napi heti w ip20 folyamatos u asset conrad media10 add 160267 c1 gl 002484674DS00 uezem |||

Datenblatt data sheet: Digitale Wochen-Zeitschaltuhr AES4 Digital week mains socket timer switch AES4 **1260-0006** Produktname Product name: Artikelnummer Part Number: Anfragenummer Inquiry Number: Ersteller / Datum Creator / Date: Digitale Wochen-Zeitschaltuhr AES4 Digital week mains...

 lang:de **score:28** filesize: 231.85 K page_count: 4 document date: 2021-12-04

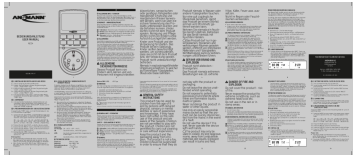

[\[pdf\]](#) User Manual


1260 0006 socket mains timer AES4 Manual WORK indd Handbuch MAN MULTIANSMANN

Wochenzeitschaltuhr Zwischensteckdosen günstig kaufen reichelt elektronikANSMANN MULTIdn de documents datenblatt E910 ANSMANN MULTI |||

BEDIENUNGSANLEITUNG USER MANUAL AES DE EN FR IT . EINSTELLEN DER DIGITALUHR IM UHR-MODUS 2.1 D ... strasse 10 97959 Assamstadt Germany

Hotline: 49 0 6294 / 4204 3400 E-Mail: hotline ansmann.de MA-**1260-0006**/V1/07-2021 . SETTING THE DIGITAL CLOCK IN CLOCK MODE 2.1 The LCD shows the day, hour and m...

 lang:de **score:28** filesize: 634.94 K page_count: 2 document date: 2022-02-11

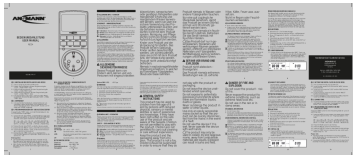

[\[pdf\]](#) User Manual

1260 0006 socket mains timer AES4 Manual WORK indd Ansmann Időkapcsoló óra programozó csomag

Digitális Napi program Heti 3680 W IP20 Folyamatos üzem Conrad hasznalati utmutato 2484674

ansmann idokapcsoló óra programozó digitális napi heti w ip20 asset conrad media10 add 160267 c1 gl 002484674ML00 folyamatos uezem |||

BEDIENUNGSANLEITUNG USER MANUAL AES DE EN FR IT . EINSTELLEN DER DIGITALUHR IM UHR-MODUS 2.1 D ... strasse 10 97959 Assamstadt Germany

Hotline: 49 0 6294 / 4204 3400 E-Mail: hotline ansmann.de MA-**1260-0006**/V1/07-2021 . SETTING THE DIGITAL CLOCK IN CLOCK MODE 2.1 The LCD shows the day, hour and m...

lang:de **score:24** filesize: 634.94 K page_count: 2 document date: 2021-12-04



[\[pdf\]](#) User Manual

1260 0006 socket mains timer AES4 Manual WORK indd ALLGEMEINE SICHERHEITSHINWEISE

Dieses Produkt kann 2022 05 31 — uhr welche ermöglicht die elektrische Leistung von Haus setting of „always ON or OFF at the touch a button ANSMANN MAN MULTI reichelt de index html ACTION 7 LA 3 OPEN 0 INDEX FILENAME E910 |||

BEDIENUNGSANLEITUNG USER MANUAL AES DE EN FR IT . EINSTELLEN DER DIGITALUHR IM UHR-MODUS 2.1 D ... strasse 10 97959 Assamstadt Germany

Hotline: 49 0 6294 / 4204 3400 E-Mail: hotline ansmann.de MA-**1260-0006**/V1/07-2021 . SETTING THE DIGITAL CLOCK IN CLOCK MODE 2.1 The LCD shows the day, hour and m...

lang:de **score:22** filesize: 634.94 K page_count: 2 document date: 2022-02-11



[\[pdf\]](#) User Manual

1260 0006 socket mains timer AES4 Manual WORK indd Digitale Wochen Zeitschaltuhr mit 10 EIN AUS

Schaltmöglichkeiten pro Tag 968662 52DBCBAF 7B23 4A9A B022 35C33969C815 westfalia versand at media 4c 53 98 1671594983 |||

BEDIENUNGSANLEITUNG USER MANUAL AES DE EN FR IT . EINSTELLEN DER DIGITALUHR IM UHR-MODUS 2.1 D ... strasse 10 97959 Assamstadt Germany

Hotline: 49 0 6294 / 4204 3400 E-Mail: hotline ansmann.de MA-**1260-0006**/V1/07-2021 . SETTING THE DIGITAL CLOCK IN CLOCK MODE 2.1 The LCD shows the day, hour and m...

lang:de **score:22** filesize: 634.94 K page_count: 2 document date: 2021-10-28

