

Manuals.plus /

- › Razer /
- › Razer Pro Click Mini Portable Wireless Mouse User Manual

Razer RZ01-03990100-R3U1

Razer Pro Click Mini Portable Wireless Mouse User Manual

Model: RZ01-03990100-R3U1

Brand: Razer



Image: Top view of the Razer Pro Click Mini Portable Wireless Mouse in white.

INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Razer Pro Click Mini Portable Wireless Mouse. Designed for productivity on-

the-go, this mouse features silent clicks, effortless navigation, and multi-device connectivity, all packed into a sleek and compact design.

WHAT'S IN THE BOX

- Razer Pro Click Mini Portable Wireless Mouse
- USB Dongle (Razer HyperSpeed Wireless)
- 2 x AA Batteries

SETUP

1. Battery Installation

The Razer Pro Click Mini requires two AA batteries for operation. To install the batteries:

1. Gently lift the top cover of the mouse from the rear to reveal the battery compartment.
2. Insert the two AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Replace the top cover, pressing down gently until it clicks securely into place.



Image: The Razer Pro Click Mini with its top cover removed, revealing the battery compartment with two AA batteries inserted.

2. Connectivity Options

Your Razer Pro Click Mini offers two primary connectivity modes: Razer HyperSpeed Wireless (2.4 GHz) and Bluetooth. You can connect and switch between up to four devices.

Razer HyperSpeed Wireless (2.4 GHz)

1. Locate the USB dongle inside the mouse's battery compartment.
2. Plug the USB dongle into an available USB port on your computer.
3. Slide the switch on the bottom of the mouse to the '2.4' position. The mouse should automatically connect.



Image: The Razer Pro Click Mini mouse shown alongside its compact USB dongle.

Bluetooth

1. Slide the switch on the bottom of the mouse to the 'BT' position.
2. On your device (computer, laptop, tablet), enable Bluetooth and search for new devices.
3. Select 'Razer Pro Click Mini' from the list of available devices to pair.

For a visual overview of the Razer Productivity Suite, including connectivity, please watch the official video below:

Video: Official Razer video showcasing the Razer Productivity Suite, including features of the Pro Click Mini mouse such as its compact design, silent clicks, HyperScroll technology, and wireless connectivity options.

OPERATING THE RAZER PRO CLICK MINI

Silent, Tactile Mouse Clicks

The Razer Pro Click Mini features silent mechanical switches, providing a quiet and distraction-free experience ideal for office environments or working from home. Despite being silent, the clicks offer a satisfying tactile feedback.

HyperScroll Technology

Navigate documents and web pages with ease using the advanced scroll wheel:

- **Tactile Mode:** Provides precise, notched scrolling for controlled navigation.
- **Free-Spin Mode:** Allows for rapid, smooth scrolling through long documents or web pages. Activate by pressing the button directly behind the scroll wheel.
- **Tilt-Click Functionality:** Tilt the scroll wheel left or right for horizontal scrolling, useful for large spreadsheets or timelines.



Image: A close-up view of the Razer Pro Click Mini's scroll wheel, highlighting its textured surface and tilt functionality indicators.

Programmable Buttons

The mouse features 7 independently programmable buttons. Utilize Razer Synapse software (available for download from the Razer website) to customize button functions, create macros, and tailor the mouse to your workflow for enhanced efficiency.

Multi-Tasking with Multi-Device Connectivity

Seamlessly switch between up to 4 connected devices (e.g., desktop, laptop, Android tablet, TV screen) without the need to constantly pair and unpair. This feature is ideal for users who work across multiple platforms.

MAINTENANCE

Cleaning

To maintain optimal performance and appearance, regularly clean your Razer Pro Click Mini:

- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the exterior.

- Avoid using harsh chemicals, abrasive cleaners, or excessive moisture.
- For the optical sensor, use a cotton swab lightly dampened with isopropyl alcohol to gently clean the lens.

Battery Replacement

When the mouse's performance degrades or it stops responding, it's likely time to replace the AA batteries. Refer to the 'Battery Installation' section under 'Setup' for detailed instructions.

TROUBLESHOOTING

Mouse Not Responding / Disconnecting

- **Check Batteries:** Ensure batteries are correctly installed and have sufficient charge. Replace if necessary.
- **Re-pair Device:** For HyperSpeed Wireless, ensure the dongle is securely plugged in. For Bluetooth, remove the mouse from your device's paired list and re-pair it.
- **Interference:** Move the mouse closer to the USB dongle or Bluetooth-enabled device. Avoid placing the mouse near other wireless devices that might cause interference.
- **USB Port:** Try plugging the USB dongle into a different USB port on your computer.

Scroll Wheel Issues

- **Clean Scroll Wheel:** Dust or debris might be affecting the scroll wheel. Gently clean around the scroll wheel with compressed air or a soft brush.
- **Toggle Mode:** Ensure the scroll wheel is in the desired mode (tactile or free-spin) by pressing the mode switch button.

Software/Driver Issues

- **Razer Synapse:** Ensure you have the latest version of Razer Synapse installed. Update the software and mouse firmware if available.
- **Reinstall Drivers:** In Device Manager (Windows) or System Information (macOS), uninstall the mouse drivers and restart your computer to allow them to reinstall automatically.

SPECIFICATIONS

Feature	Detail
Model Number	RZ01-03990100-R3U1
Connectivity	Razer HyperSpeed Wireless (2.4 GHz), Bluetooth
Buttons	7 Independently Programmable Buttons
Scroll Wheel	HyperScroll Technology (Tactile, Free-Spin, Tilt-Click)
Battery Life	Up to 595 Hours (Bluetooth), Up to 210 Hours (HyperSpeed Wireless)
Power Source	2 x AA Batteries
Sensor	Optical
Operating System	Windows, macOS, Linux
Item Weight	3.92 ounces

WARRANTY AND SUPPORT

Your Razer Pro Click Mini Portable Wireless Mouse comes with a limited manufacturer's warranty. For detailed warranty information, terms, and conditions, please refer to the official Razer website or the warranty card included with your product.

For additional support, FAQs, and the latest drivers and software (including Razer Synapse for customization), please visit the official Razer support page or your [Razer Store](#).

A PDF version of the user manual is also available for download: [User Manual \(PDF\)](#)