

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Polk Audio](#) /

› [Polk Audio Signa S4 Sound Bar User Manual](#)

Polk Audio Signa S4

Polk Audio Signa S4 Sound Bar User Manual

Model: Signa S4

1. INTRODUCTION

Thank you for choosing the Polk Audio Signa S4 Sound Bar with Wireless Subwoofer. This system is designed to deliver an immersive audio experience with Dolby Atmos 3.1.2 surround sound, enhancing your movies, music, and games. Its slim profile ensures it fits seamlessly into any home theater setup.

Key features include Polk's exclusive VoiceAdjust technology for crystal-clear dialogue, BassAdjust for customizable bass impact, and versatile connectivity options including HDMI eARC and Bluetooth for wireless streaming.



The Polk Audio Signa S4 Sound Bar and its accompanying wireless subwoofer, designed for enhanced home audio.

2. WHAT'S IN THE BOX

Please ensure all the following components are included in your package:

- Sound Bar
- Wireless Subwoofer
- Remote control with batteries (2 AAA)
- HDMI cable
- Optical cable
- Power cords (for sound bar and subwoofer)
- Wall-mount spacers

- Quick Start Guide
- Wall-mount template

3. SETUP

3.1. Placement

For optimal audio performance, place the sound bar centered below your TV. The wireless subwoofer can be placed anywhere in the room, ideally within 30 feet (10 meters) of the sound bar, for flexible bass delivery.



LIFELIKE MOVIE SOUND

Enjoy immersive, 3D movie and music sound with our true Dolby Atmos Certified sound bar system.

The sound bar positioned below a television, with the wireless subwoofer placed to the side, demonstrating a typical setup.

3.2. Connections

Connect the sound bar to your TV using one of the following methods:

1. **HDMI eARC (Recommended):** Connect one end of the supplied HDMI cable to the HDMI eARC port on the sound bar and the other end to the HDMI eARC/ARC port on your TV. This connection provides the best audio quality, including Dolby Atmos.
2. **Optical:** If your TV does not have an HDMI eARC/ARC port, connect one end of the supplied optical cable to the TV (OPTICAL) port on the sound bar and the other end to the optical digital audio output on your TV.

3. **Auxiliary (3.5mm):** For older TVs or devices, connect a 3.5mm audio cable (not supplied) from the AUX port on the sound bar to the headphone or audio output port on your device.



EASY SETUP

One simple cable connection and multiple input options makes it easy to set up with any TV, giving you great sound in seconds.

Close-up of the sound bar's rear panel, highlighting the HDMI eARC, Optical, and AUX input ports for various connectivity options.

3.3. Power Connection

Connect the power cords to the sound bar and the wireless subwoofer, then plug them into a wall outlet. The subwoofer will automatically pair with the sound bar when both are powered on.

4. OPERATING INSTRUCTIONS

4.1. Remote Control Functions

The included remote control provides full command over your Signa S4 system:

CUSTOMIZE YOUR SOUND

One-button presets for movies, music and night mode make it easy to dial in the right sound every time.



A hand holding the Polk Audio remote control, showing its various buttons for sound adjustment and input selection.

- **Power Button:** Turns the sound bar on or off.
- **TV/AUX/Bluetooth Buttons:** Selects the audio input source.
- **Volume +/-:** Adjusts the overall system volume.
- **Bass +/-:** Adjusts the subwoofer level.
- **VoiceAdjust (1, 2, 3):** Enhances dialogue clarity. Level 1 is standard, 3 is maximum enhancement.
- **Sound Modes (Movie, Night, Music):** Optimizes audio for different content types.

4.2. Sound Modes

Press the dedicated buttons on the remote to switch between sound modes:

- **Movie Mode:** Provides an expansive soundstage and dynamic audio for films.
- **Night Mode:** Reduces dynamic range to prevent sudden loud sounds, ideal for late-night viewing.
- **Music Mode:** Optimizes audio for music playback, delivering balanced and clear sound.

HEAR EVERY WORD

Patented VoiceAdjust™ technology and Signa S4's center channel combine for crystal clear dialogue.



The top panel of the sound bar showing the integrated control buttons for power, input selection, and volume.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Polk Audio Signa S4:

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the sound bar and subwoofer. Do not use liquid cleaners or aerosols.
- **Ventilation:** Ensure proper ventilation around the units. Do not block any ventilation openings.
- **Environment:** Avoid exposing the system to extreme temperatures, humidity, or direct sunlight.

6. TROUBLESHOOTING

If you encounter any issues, please refer to the following common problems and solutions:

Problem	Solution
No sound from sound bar.	Check power connections. Ensure correct input source is selected. Verify TV audio output settings (e.g., set to PCM for optical, enable HDMI ARC/eARC).

Problem	Solution
Subwoofer not connecting.	Ensure both sound bar and subwoofer are powered on. Press the 'Connect' button on the back of the subwoofer to re-initiate pairing. Move subwoofer closer to the sound bar if interference is suspected.
Remote control not working.	Check and replace batteries (2 AAA). Ensure no obstructions between remote and sound bar. Point remote directly at the sound bar's front.
Distorted or poor sound quality.	Check cable connections for looseness or damage. Try a different input source. Adjust VoiceAdjust and BassAdjust settings. Ensure TV audio output is not set to 'TV Speakers' simultaneously.
Bluetooth device not pairing.	Ensure the sound bar is in Bluetooth pairing mode. Delete the sound bar from your device's Bluetooth list and try pairing again. Move device closer to the sound bar.

7. SPECIFICATIONS

Feature	Detail
Model Name	Signa S4
Speaker Type	Soundbar with Wireless Subwoofer
Surround Sound Channel Configuration	3.1.2 (Dolby Atmos Certified)
Product Dimensions (Sound Bar)	3.7"D x 41.2"W x 2.4"H
Item Weight	19 Pounds (total system)
Connectivity Technology	HDMI eARC, Optical, Analog (3.5mm), Bluetooth, USB (for firmware updates)
Wireless Communication Technology	Bluetooth
Speaker Maximum Output Power	410 Watts
Frequency Response	20 Hz (minimum)
Power Source	Corded Electric
Included Batteries	2 AAA batteries (for remote)
Mounting Type	Tabletop or Wall Mount

8. WARRANTY AND SUPPORT

8.1. Warranty Information

The Polk Audio Signa S4 Sound Bar system comes with a limited warranty. Please refer to the warranty card included in

your product packaging or visit the official Polk Audio website for detailed terms and conditions regarding coverage, duration, and claims procedures.

8.2. Customer Support

For further assistance, technical support, or service inquiries, please contact Polk Audio customer support through their official website. You can also refer to the comprehensive User Manual PDF for more detailed information:

[Download User Manual \(PDF\)](#)

Related Documents - Signa S4

	<p>Polk Audio Signa S2 Quick Start Guide: Setup and Usage</p> <p>A concise and accessible guide for setting up and using the Polk Audio Signa S2 sound bar system. Learn how to connect your TV, use the remote control, optimize audio settings, and connect via Bluetooth.</p>
	<p>Polk Audio Signa S4 Dolby Atmos Sound Bar Quick Start Guide & Overview</p> <p>Get started quickly with the Polk Audio Signa S4 Dolby Atmos sound bar and wireless subwoofer. Learn about setup, connections, features, and specifications for immersive 3D surround sound.</p>
	<p>Polk MagniFi One Compact Sound Bar System User Manual</p> <p>Comprehensive user manual for the Polk MagniFi One compact sound bar system, detailing setup, connections, features like VoiceAdjust™ and Bluetooth, remote control programming, troubleshooting, and technical specifications.</p>
	<p>Polk Signa S4 Sound Bar Quick Start Guide</p> <p>A quick start guide for setting up the Polk Signa S4 Sound Bar, including unpacking, connecting to a TV via HDMI or optical cable, plugging in power, placing the sound bar and subwoofer, and setting up the remote control. It also details sound modes like Movie, Night, and Music modes, and the Voice Adjust feature.</p>
	<p>Polk MagniFi One Compact Sound Bar System User Manual</p> <p>This manual provides instructions for setting up and using the Polk MagniFi One Compact Sound Bar System with VoiceAdjust Technology, including connecting, programming, and troubleshooting.</p>

polk



magnifi one™
Compact Sound Bar System with Dialog+
Enhancing VoiceAdjust™ Technology

[Polk MagniFi One Compact Sound Bar System User Manual](#)

User manual for the Polk MagniFi One compact sound bar system with VoiceAdjust Technology. Includes setup, connection, operation, and troubleshooting instructions.