

Treadmill TG-162

Treadmill TG-162 Bluetooth Speaker User Manual

Model: TG-162

INTRODUCTION

Thank you for purchasing the Treadmill TG-162 Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

The TG-162 is a portable wireless speaker designed to deliver clear audio with versatile connectivity options, including Bluetooth, FM radio, TF card, and AUX input. It features integrated LED lighting for an enhanced audio experience.

SAFETY INFORMATION

For your safety and to ensure proper operation, please observe the following:

- Always fully charge the speaker before its first use.
- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Keep the speaker away from water and liquids. This product is not waterproof.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Treadmill TG-162 Bluetooth Speaker
- 1 x USB Charging Cable

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Figure 1: Front view of the Treadmill TG-162 Bluetooth Speaker. This image shows the speaker's main body, featuring a textured black finish with white and red accents, and a visible speaker grille on the side.



Figure 2: Top control panel of the TG-162 speaker. This image highlights the buttons for LED Light Flashing Mode, Multi Function Mode (M), Next Song/Volume Plus (long press), Previous Song/Volume Reduction (long press), and Play/Pause/ON/OFF (long press).

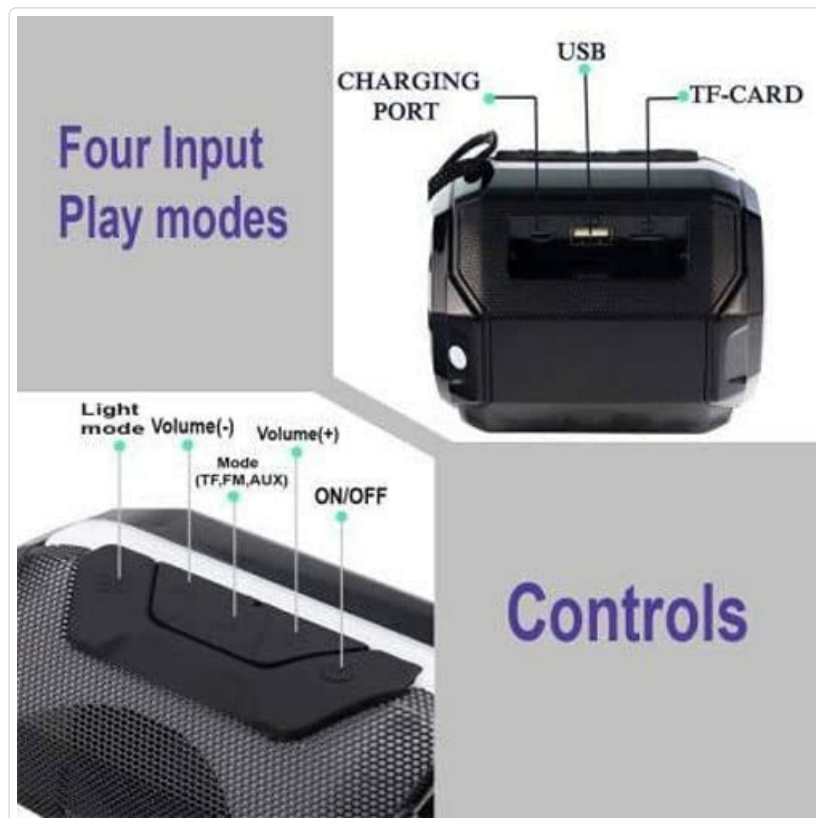


Figure 3: Input ports and additional controls on the TG-162 speaker. This image illustrates the Charging Port, USB port, and TF-Card slot. It also shows a side view of the control buttons labeled for Light mode, Volume down, Mode (TF, FM, AUX), Volume up, and ON/OFF.

Control Functions:

- **Power Button (Play/Pause):** Long press to turn ON/OFF. Short press to Play/Pause music.
- **"M" Button (Multi Function Mode):** Short press to switch between Bluetooth, FM Radio, TF Card, and AUX modes.
- **"+" Button:** Short press for Next Song. Long press to increase Volume.
- **"-" Button:** Short press for Previous Song. Long press to decrease Volume.
- **Light Button:** Short press to change LED light flashing mode.

SETUP

Initial Charging:

Before first use, fully charge the speaker using the provided USB cable. Connect the USB cable to the speaker's charging port and a compatible USB power source (e.g., computer USB port, USB wall adapter). The charging indicator will illuminate during charging and turn off or change color when fully charged.

Powering On/Off:

Long press the Power button (Play/Pause button) for approximately 3 seconds to turn the speaker ON or OFF. A voice prompt will indicate the power status.

OPERATING INSTRUCTIONS

Bluetooth Mode:

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a voice prompt

and a flashing LED light.

2. Enable Bluetooth on your mobile device (smartphone, tablet, laptop).
3. Search for available Bluetooth devices and select "TG-162" from the list.
4. Once paired, the speaker will emit a confirmation tone, and the LED light will stop flashing. You can now play audio from your device through the speaker.
5. To disconnect, disable Bluetooth on your device or turn off the speaker.

FM Radio Mode:

1. Turn on the speaker. Press the "M" (Multi Function Mode) button repeatedly until you hear the FM radio prompt.
2. To auto-scan and save available FM stations, short press the Play/Pause button. The speaker will scan and store stations automatically.
3. Use the "+" and "-" buttons to navigate between saved stations.

TF Card Mode:

1. Insert a TF (Micro SD) card with MP3 audio files into the TF card slot.
2. The speaker will automatically detect the card and switch to TF card mode, beginning playback. If not, press the "M" button to select TF card mode.
3. Use the Play/Pause button to control playback. Use "+" and "-" buttons for track navigation and volume adjustment.

AUX Mode:

1. Connect one end of a 3.5mm audio cable (not included) to the speaker's AUX input port.
2. Connect the other end to the audio output jack of your external device (e.g., MP3 player, laptop).
3. The speaker will automatically switch to AUX mode. If not, press the "M" button to select AUX mode.
4. Control playback and volume from your connected device.

LED Lighting:

The speaker features integrated LED lights. Short press the Light button to cycle through different lighting modes or to turn the lights off.

CHARGING

When the battery is low, the speaker may emit a low battery warning. Connect the provided USB charging cable to the speaker's charging port and a standard 5V USB power source. The charging time is approximately 2-3 hours for a full charge. The speaker offers approximately 4-5 hours of playback time on a full charge, depending on volume level and usage.

MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use.
- Avoid prolonged exposure to direct sunlight or extreme temperatures.
- Charge the speaker regularly, even if not in frequent use, to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker fully.
Cannot pair via Bluetooth.	Bluetooth is not enabled on your device or speaker is not in pairing mode.	Ensure Bluetooth is enabled on your device and the speaker is in pairing mode (flashing LED). Move devices closer.
No sound.	Volume is too low or muted. Incorrect mode selected.	Increase volume on both the speaker and your connected device. Press the "M" button to ensure the correct input mode is selected.
FM radio reception is poor.	Weak signal.	Move the speaker to a location with better signal reception. Re-scan for stations.

SPECIFICATIONS

Feature	Detail
Model	TG-162
Speaker Type	Soundbar
Wireless Communication Technology	Bluetooth
Power Source	Battery Powered
Battery Life	4-5 hours (approx.)
Frequency Response	180Hz-20KHz
Signal-to-Noise Ratio (SNR)	85 dB
Sensitivity	42 dB
Control Method	Touch buttons
Connectivity Technology	USB, Bluetooth
Audio Output Mode	Stereo
Product Dimensions (LxWxH)	12 x 10 x 10 cm
Item Weight	350 g
Included Components	Bluetooth Speaker, USB Cable
Special Feature	Powerful sound with solid bass, LED lighting
Is Waterproof	No






WARRANTY AND SUPPORT


This product is covered by a standard manufacturer's warranty. Please refer to the retailer's policy or contact the point of purchase for specific warranty terms and conditions.

For technical support or inquiries, please contact your retailer or the manufacturer's customer service department. Keep your purchase receipt as proof of purchase.

© 2023 Treadmill. All rights reserved.

Related Documents - TG-162

	<p>Caring for Your Treadmill: Residential & Light Commercial Treadmills Maintenance Guide</p> <p>Comprehensive guide on caring for and maintaining residential and light commercial treadmills from brands like BowFlex, Schwinn, Horizon, Vision, Matrix, and iFit. Includes tips on moving, leveling, cleaning, preventive maintenance, troubleshooting common noises, and contact information.</p>
	<p>Folding Electric Treadmill User's Manual</p> <p>Comprehensive user's manual for the Folding Electric Treadmill Motorized Running Machine, covering product brief, safety precautions, installation, usage, and maintenance.</p>
	<p>Motorized Treadmill User Manual: Installation, Operation, and Maintenance Guide</p> <p>Comprehensive user manual for a motorized treadmill, covering installation instructions, safety precautions, operating procedures, sports advice, routine maintenance, and troubleshooting error codes. Learn how to set up, use, and maintain your treadmill for optimal performance and longevity.</p>
	<p>Treadmill User Manual: Assembly, Operation, and Maintenance Guide</p> <p>This user manual provides comprehensive instructions for assembling, operating, and maintaining your home electric treadmill. It includes safety guidelines, packing details, assembly steps, electronic control operations, maintenance procedures, troubleshooting, practice notes, and warm-up exercises.</p>
	<p>Treadmill User's Manual: Safety, Assembly, Operation, and Maintenance</p> <p>Comprehensive guide for operating and maintaining your treadmill. Includes safety precautions, assembly steps, exercise guidelines, operational instructions, troubleshooting, parts list, and warranty information.</p>

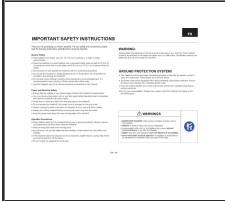	<p>Electric Treadmill User Manual - Safety, Assembly, Operation, and Maintenance</p> <p>Comprehensive user manual for the electric treadmill, covering important safety instructions, assembly guide, operating procedures, technical specifications, exercise advice, maintenance tips, and troubleshooting for model JT52.</p>
--	--