

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WYZE](#) /

› [Wyze Cordless Vacuum Cleaner \(Model WCLVAC\) Instruction Manual](#)

WYZE WCLVAC

Wyze Cordless Vacuum Cleaner (Model WCLVAC) Instruction Manual

Brand: **WYZE** | Model: **WCLVAC**

1. INTRODUCTION

Thank you for choosing the Wyze Cordless Vacuum Cleaner. This lightweight and powerful stick vacuum is designed for efficient cleaning across various surfaces in your home. With its versatile attachments, multiple suction modes, and cordless convenience, maintaining a clean living space is simpler than ever.

This Handheld Vacuum is as Light as 2.8lbs of Feathers



Figure 1: Fully assembled Wyze Cordless Vacuum Cleaner.

2. WHAT'S IN THE Box

Please check the package contents to ensure all items are present:

- Main Unit (Battery included) x1
- Charger x1
- Crevice Tool x1
- Floor Brush x1
- Dust cap x1
- HEPA Filter x1
- Filter Housing x1

- Standard Tube x1
- Quick Start Guide x1

3. SETUP

3.1 Assembly

1. Unpack all components from the box.
2. Attach the main unit to the standard tube.
3. Connect the floor brush to the other end of the standard tube. Ensure all connections click securely into place.



Figure 2: The vacuum can be assembled with various attachments for different cleaning needs.

3.2 Initial Charging

Before first use, fully charge the battery. The LED display on the main unit will show the current battery percentage level during charging.

- Connect the charger to the battery pack.
- Plug the charger into a power outlet.
- Allow the battery to charge completely before operating the vacuum.

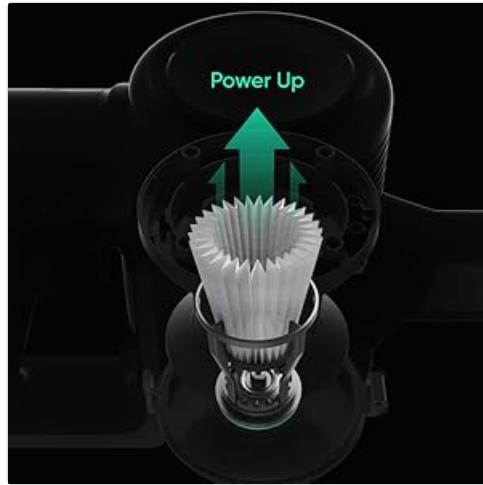


Figure 3: The detachable battery pack allows for flexible charging.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the power button on the main unit to turn the vacuum on or off.

4.2 Suction Modes

The Wyze Cordless Vacuum offers three suction levels to suit different cleaning needs. Select the desired mode using the control method on the main unit:

- **Eco Mode (6,000 Pa, up to 40 mins runtime):** Ideal for light cleaning and extended battery life.
- **Medium Mode (9,000 Pa, up to 21 mins runtime):** Balances suction power and battery life for general cleaning.
- **Turbo Mode (20,000 Pa, up to 10 mins runtime):** Provides maximum suction for intensive spot cleaning and stubborn debris.



Figure 4: The LED display shows the selected power mode and battery level.

4.3 LED Headlights

The floor brush is equipped with 6 daylight-bright LED lights to illuminate dust and debris under furniture and in dimly lit areas, ensuring thorough cleaning.



Figure 5: LED headlights reveal hidden dust and debris.

4.4 Using Attachments

The vacuum comes with various attachments for specialized cleaning:

- **Crevice Tool:** Ideal for narrow spaces, corners, and edges.
- **Floor Brush:** Designed for general floor cleaning on hard floors and carpets.

To use an attachment, detach the main unit from the standard tube and connect the desired tool directly to the main unit or the standard tube, depending on the cleaning area.



Figure 6: The lightweight design makes it easy to maneuver.

5. MAINTENANCE

5.1 Emptying the Dust Cup

To maintain optimal suction and performance, empty the dust cup regularly:

1. Ensure the vacuum is turned off.
2. Hold the main unit over a waste bin.
3. Press the release button to open the dust cup and empty its contents.



Figure 7: Easy one-finger release for emptying the dust cup.

5.2 Cleaning the HEPA Filter

The HEPA filter should be cleaned periodically to ensure efficient filtration and prevent reduced suction:

- Remove the dust cup and then the HEPA filter.
- Tap the filter gently to dislodge dust and debris.
- The filter can be washed with water. Ensure it is completely dry before reinserting it into the vacuum.

5.3 Battery Maintenance

Proper battery care extends the lifespan of your vacuum's battery:

- Fully charge the battery before its first use and whenever it is low.
- Avoid complete discharges of the battery.
- Store the vacuum and battery in a cool, dry place.
- For long-term storage, remove the battery from the main unit.

6. TROUBLESHOOTING

If you encounter any issues with your Wyze Cordless Vacuum, refer to the following common solutions:

- **Floor brush not working:** Ensure the brush is properly installed and connected, the battery is charged, the dust cup is empty, and remove any hair or debris from the brush. Check for visible damage.
- **Vacuum stopped working:** Unplug the vacuum before turning it on. Ensure the battery is charged. Empty the dust cup to prevent protection mode from activating due to blockage.
- **Vacuum switch not responding:** Check that the dust cup is securely seated and the nozzle is properly attached. Clear any blockages in the vacuum path.

7. SPECIFICATIONS

Feature	Detail
Brand	WYZE
Model Name	WCLVAC
Item Weight	2.8 pounds
Product Dimensions	6.1" L x 4.9" W x 29.5" H
Suction Power	Up to 20,000 Pa (Turbo Mode)
Wattage	450 watts
Motor Horsepower	13.41 horsepower
Battery Life	Up to 40 minutes (Eco Mode)
Charging Time	100 minutes
Filter Type	HEPA Filter
Capacity	0.18 Gallons
Noise Level	65 Decibels
Special Features	Cordless, HEPA, Headlight, Lightweight
Surface Recommendation	All floors

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official WYZE website or contact their customer service directly. Keep your purchase receipt for warranty claims.