

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HOUSNAT](#) /

› [HOUSNAT Slow Cooker 10-in-1 Programmable Pressure Cooker User Manual](#)

HOUSNAT 761736116723

HOUSNAT Slow Cooker 10-in-1 Programmable Pressure Cooker User Manual

Model: 761736116723

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your HOUSNAT 10-in-1 Programmable Slow Cooker. Please read all instructions carefully before first use and retain this manual for future reference.

The HOUSNAT Slow Cooker is a versatile kitchen appliance designed to simplify your cooking process with its 10 preset programs, including slow cook, sear/sauté, roast, bake, steam, stew, rice, multigrain, sous vide, and yogurt functions. Its 6-quart capacity and durable stainless steel construction make it suitable for various culinary needs.



Image: The HOUSNAT 10-in-1 Programmable Slow Cooker, showcasing its stainless steel exterior and digital control panel.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The tempered glass lid can bear high temperature and long time use.
- Thick 304 stainless steel with good heat insulation brings non-melt and cool-touch handles and shells to protect your

hands from burns and assure safe transport.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your HOUSNAT Slow Cooker:

Main Unit: The outer housing containing the heating element and control panel.

Stainless Steel Inner Pot: The removable cooking vessel, 6-quart capacity, made of 304 stainless steel.

Hardened Glass Lid: Transparent lid for monitoring cooking progress, with a steam vent.

Control Panel: Digital display and touch buttons for program selection and adjustments.

Anti-Scalding Handles: Integrated handles on the main unit for safe transport.

Stainless-Steel Steaming Rack: Accessory for steaming food.

LED Digital Screen



Hardened Glass Lid



Stainless-Steel Steaming Rack



Stainless Steel Inner Pot



Image: Exploded view of the HOUSNAT Slow Cooker showing the main unit, stainless steel inner pot, hardened glass lid, and stainless-steel steaming rack.

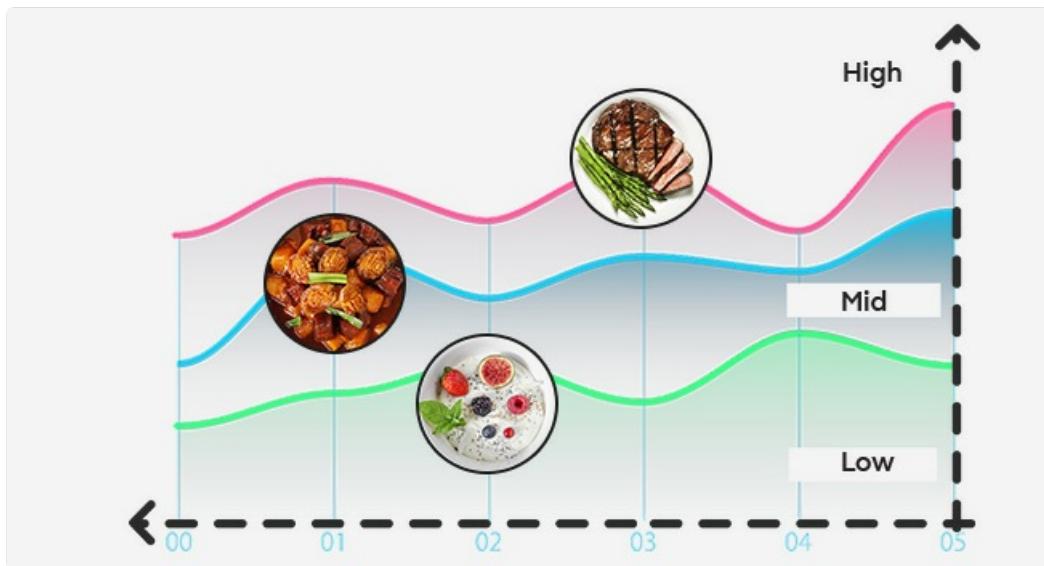


Image: Close-up of the HOUSNAT Slow Cooker's digital control panel, displaying various cooking functions and temperature/time settings.

SETUP AND FIRST USE

- Unpacking:** Carefully remove all packaging materials and accessories from the box.
- Initial Cleaning:** Before first use, wash the stainless steel inner pot, glass lid, and steaming rack in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- Placement:** Place the slow cooker on a stable, level, heat-resistant surface, away from walls and other appliances to ensure proper ventilation.
- Insert Inner Pot:** Place the clean, dry stainless steel inner pot into the main unit.
- Power Connection:** Plug the power cord into a 120V AC electrical outlet. The digital display will illuminate.

OPERATING INSTRUCTIONS

Your HOUSNAT Slow Cooker features 10 preset programs and customizable settings for various cooking needs.

Control Panel Overview

The digital control panel allows you to select cooking functions, adjust time and temperature, and utilize special features.

- Preset Function Buttons:** Sear/Sauté, Roast, Bake, Steam, Stew, Rice, Multigrain, Slow Cook, Sous Vide, Yogurt.
- Time/Temp Button:** Used to switch between time and temperature adjustment modes.
- +/- Buttons:** Adjust cooking time or temperature.
- Delay Start Button:** Set a delayed start time for cooking.
- Keep Warm Button:** Activates or deactivates the keep warm function.
- Cancel Button:** Stops the current cooking program.
- Digital Display:** Shows remaining cooking time, temperature, and selected program.



Image: Visual representation of the 10-in-1 multifunctionality of the HOUSNAT Slow Cooker, listing various cooking modes.

General Cooking Steps

1. Add ingredients to the stainless steel inner pot.
2. Place the glass lid securely on the pot.
3. Plug in the appliance.
4. Select your desired cooking function by pressing the corresponding button (e.g., "Slow Cook").
5. The display will show default time and temperature settings for the selected program.
6. To adjust time or temperature, press the "Time/Temp" button, then use the "+/-" buttons to modify the values.
7. After selecting the function and adjusting settings, the cooker will automatically start after approximately 10 seconds if no further input is detected.
8. Once cooking is complete, the appliance may automatically switch to "Keep Warm" mode (if applicable for the program).
9. Unplug the appliance after use and allow it to cool before cleaning.

Specific Program Notes

- **Slow Cook (Low/High):** The maximum cooking temperature does not reach 100°C (212°F). Low setting is approximately 201.2°F ± 5.4°F; High setting is approximately 204.8°F ± 5.4°F. This design prevents burning and sticking, preserving moisture and nutrients.
- **Delay Start:** Press the "Delay Start" button after selecting a program and setting time/temperature. Use "+/-" to set the delay time (up to 24 hours). The cooker will begin cooking automatically after the delay period.
- **Keep Warm:** This function automatically activates after some cooking programs to maintain food temperature. It can also be manually selected.
- **Sous Vide:** Ensure food is properly sealed in a vacuum bag before placing it in the water-filled inner pot.



Image: A graph depicting the typical temperature profiles for High, Mid, and Low cooking settings over time, demonstrating the intelligent temperature control.

CARE AND MAINTENANCE

Cleaning

1. Always unplug the slow cooker and allow it to cool completely before cleaning.
2. The stainless steel inner pot and glass lid are dishwasher safe. Alternatively, wash them with warm, soapy water, rinse, and dry thoroughly.
3. Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
4. Ensure all parts are completely dry before storing.

Storage

Store the slow cooker in a dry place. You can store the lid inverted on the inner pot, and the inner pot inside the main unit to save space.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker.
Food not cooking or cooking too slowly.	Incorrect program selected; lid not sealed properly; insufficient cooking time/temperature.	Verify the correct program and settings. Ensure the lid is properly seated. Adjust cooking time or temperature as needed. Note that slow cook settings operate below boiling point.
Food is burning or sticking.	Too high temperature; insufficient liquid.	Reduce cooking temperature or time. Ensure adequate liquid is present for slow cooking. The slow cook function is designed to prevent burning.

Problem	Possible Cause	Solution
Digital display shows an error code.	Internal malfunction.	Unplug the appliance, wait a few minutes, then plug it back in. If the error persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	HOUSNAT
Model Number	761736116723
Capacity	6 Quarts (approx. 12 Pounds)
Material	304 Stainless Steel (Inner Pot), Tempered Glass (Lid)
Color	Silver
Wattage	1400 watts
Voltage	120 Volts
Product Dimensions	14.57"D x 18.9"W x 11.02"H
Item Weight	12 Pounds
Control Type	Programmable, Touch Control, Digital Display
Number of Settings	10 (Preset Programs)
Dishwasher Safe Parts	Inner Pot, Glass Lid

WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the documentation included with your product packaging or visit the official HOUSNAT website. If you encounter any issues or have questions regarding your HOUSNAT Slow Cooker, please contact HOUSNAT customer support for assistance.

HOUSNAT Official Website: [Visit the HOUSNAT Store on Amazon](#)

© 2025 HOUSNAT. All rights reserved.

Related Documents - 761736116723

	<p>HOUSNAT AMR521 Slow Juicer User Manual and Operating Guide</p> <p>Comprehensive user manual for the HOUSNAT AMR521 Slow Juicer. Includes safety precautions, operating instructions, product components, tips for handling foods, and troubleshooting guide.</p>
---	---

	<p>HOUSNAT AMR516 Centrifugal Juicer User Manual</p> <p>This user manual provides comprehensive instructions for the HOUSNAT AMR516 Centrifugal Juicer, covering product specifications, safety precautions, assembly, operation, maintenance, and troubleshooting to ensure optimal performance and longevity.</p>
	<p>HOUSNAT PH-023B Commercial Blender Instruction Manual</p> <p>Official instruction manual for the HOUSNAT PH-023B Commercial Blender. Learn about safety warnings, product features, specifications, operation, cleaning, troubleshooting, and warranty.</p>
	<p>HOUSNAT AMR521 Slow Juicer User Manual and Operating Guide</p> <p>Comprehensive user manual for the HOUSNAT AMR521 Slow Juicer. Includes safety precautions, operating instructions, product components, tips for handling foods, and troubleshooting guide.</p>
	<p>HOUSNAT AMR516 Centrifugal Juicer User Manual</p> <p>This user manual provides comprehensive instructions for the HOUSNAT AMR516 Centrifugal Juicer, covering product specifications, safety precautions, assembly, operation, maintenance, and troubleshooting to ensure optimal performance and longevity.</p>
	<p>HOUSNAT PH-023B Commercial Blender Instruction Manual</p> <p>Official instruction manual for the HOUSNAT PH-023B Commercial Blender. Learn about safety warnings, product features, specifications, operation, cleaning, troubleshooting, and warranty.</p>