



[Manuals.plus](#) /

> [CHACEEF](#) /

> CHACEEF Mini Rice Cooker FB1201 Instruction Manual

CHACEEF FB1201

CHACEEF Mini Rice Cooker Instruction Manual

MODEL: FB1201

Brand: CHACEEF

INTRODUCTION

Thank you for choosing the CHACEEF Mini Rice Cooker. This compact and versatile appliance is designed to simplify your cooking experience, offering multiple functions beyond just rice. With its smart control panel and non-stick inner pot, preparing delicious meals for 1-3 people is convenient and efficient. Please read this manual thoroughly before use to ensure safe and optimal operation.



Image: The CHACEEF Mini Rice Cooker, showcasing its compact design and included rice spoon.

SAFETY PRECAUTIONS

To prevent personal injury or property damage, please adhere to the following safety guidelines:

- Always ensure the power cord is securely connected and undamaged.
- Do not immerse the main unit in water or any other liquid.
- Keep out of reach of children and pets.
- Use only the provided power cord and accessories.
- Do not operate the appliance if it is damaged or malfunctioning.
- Always unplug the rice cooker from the power outlet before cleaning or when not in use.
- Ensure proper ventilation around the appliance during operation.
- Avoid touching hot surfaces during and immediately after cooking. Use oven mitts if necessary.

INCLUDED COMPONENTS

Your CHACEEF Mini Rice Cooker package includes:

- CHACEEF Mini Rice Cooker Main Unit
- Non-Stick Inner Pot
- Power Cord
- Rice Spoon
- Measuring Cup (160ml)
- Instruction Manual

SETUP

Before First Use:

1. Unpack all components from the box.
2. Wash the non-stick inner pot, rice spoon, and measuring cup with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
4. Ensure the detachable inner lid is clean and properly installed.



Multi-section temperature curve Make the rice taste better



- ① Preheat and absorb water with increasing temp
- ② Constant heating with high temp
- ③ Heat to boiling, simmer at high temp
- ④ Residual heating to keep warm

Detachable Inner Lid



One-key Opening



Image: Features including the detachable inner lid and one-key opening for ease of use.

Food-grade Nonstick Inner Pot



Image: The food-grade non-stick inner pot, designed for easy food release and cleaning.

OPERATING INSTRUCTIONS

General Operation:

1. Place the rice cooker on a stable, flat, and heat-resistant surface.
2. Add desired ingredients to the non-stick inner pot.
3. Place the inner pot into the main unit and close the lid securely using the one-touch opening mechanism.
4. Plug the power cord into the rice cooker and then into a 110V AC power outlet.
5. Use the smart control panel to select your desired cooking function.

Cooking Functions:

The CHAGEEF Mini Rice Cooker offers 6 versatile cooking functions:

6 Cooking Function



Image: Visual representation of the six cooking functions available on the rice cooker.

- **White Rice:** For perfectly cooked white rice. Use the provided 160ml measuring cup. Refer to your rice packaging for optimal water-to-rice ratios.
- **Brown Rice:** Specifically designed for brown rice, which requires different cooking conditions.
- **Porridge:** Ideal for preparing creamy and smooth porridge.
- **Soup:** Use for various soup recipes.
- **Stew:** Perfect for slow-cooked stews.
- **Cake:** Allows for baking small cakes directly in the cooker.

24-Hour Delay Start Function:

This function allows you to set a delayed start time for your cooking, up to 24 hours in advance. Prepare your ingredients, select the desired cooking function, and then press the "Delay Start" button to set the timer. The cooker will automatically begin cooking at the preset time.

24H TIMER DELAY

Put the ingredients in the rice cooker before going to work

Enjoy your food when you back home



Image: The 24-hour timer delay feature, enabling users to prepare meals in advance.

Automatic Keep Warm Function:

Once cooking is complete, the rice cooker will automatically switch to the "Keep Warm" mode. This function maintains the food at an optimal serving temperature without overcooking or drying it out.

Automatic Keep Warm Function



Image: The rice cooker automatically transitions to the Keep Warm function after cooking.

Multi-Section Temperature Curve:

The rice cooker utilizes a 4-stage temperature curve for optimal cooking results:

1. **Preheating and Water Absorption:** Initial stage to prepare ingredients.
2. **Constant Heating with High Temperature:** Ensures thorough cooking.
3. **Heating to Boiling, Simmering at High Temperature:** Develops flavor and texture.
4. **Residual Heating to Keep Warm:** Maintains temperature after cooking.

This process enhances the sweetness and nutritional value of the cooked rice.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and performance of your rice cooker.

- Always unplug the appliance and allow it to cool completely before cleaning.

- The non-stick inner pot and detachable inner lid should be hand washed with warm, soapy water. Avoid abrasive cleaners or scouring pads to protect the non-stick coating.
- Wipe the exterior of the main unit with a soft, damp cloth. Do not use harsh chemicals or immerse the unit in water.
- Ensure all parts are completely dry before reassembling or storing.
- The extended steam port is designed to control overflow, but ensure it is clear of any blockages.

TROUBLESHOOTING

If you encounter issues with your rice cooker, please refer to the following table:

Problem	Possible Cause	Solution
Cooker does not turn on.	Power cord not properly connected; No power from outlet.	Check power cord connection; Test outlet with another appliance.
Rice is too hard or undercooked.	Insufficient water; Incorrect rice-to-water ratio.	Add more water next time; Refer to rice packaging for correct ratios.
Rice is too soft or mushy.	Too much water; Rice not rinsed properly.	Reduce water next time; Rinse rice thoroughly before cooking.
Food sticks to the inner pot.	Non-stick coating damaged; Not enough oil (for some recipes).	Ensure proper care of non-stick pot; Add a small amount of cooking oil if recipe allows.
Steam/water overflows during cooking.	Too much water; Blocked steam vent.	Reduce water; Clean the steam vent and ensure it's clear.

SPECIFICATIONS

Feature	Value
Brand	CHACEEF
Model Name	FB1201
Capacity	1.2 Liters (2 Cups Uncooked Rice)
Product Dimensions	6.45"D x 7.8"W x 7.6"H
Power Source	Corded Electric
Voltage	110 Volts (AC)
Wattage	200 watts
Special Features	Non-Stick, Portable, Timer, Multifunction
Material	Non-Stick Inner Pot, Aluminum Lid
Product Care Instructions	Hand Wash
Item Weight	3.41 pounds

WARRANTY AND SUPPORT

For warranty information or technical support, please contact CHACEEF customer service. Refer to the product packaging or the official CHACEEF website for the most up-to-date contact details.

Please retain your proof of purchase for any warranty claims.