

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Koolatron](#) /

› [Koolatron Kenmore 5 Quart Slow Cooker - Programmable Digital Controls Instruction Manual](#)

Koolatron KKSC5QB-AZ

Koolatron Kenmore 5 Quart Slow Cooker

INSTRUCTION MANUAL - MODEL KKSC5QB-AZ

INTRODUCTION

Thank you for purchasing the Koolatron Kenmore 5 Quart Slow Cooker. This appliance is designed to simplify meal preparation by slowly cooking food to perfection, enhancing flavors and tenderness. Its programmable settings and digital controls offer convenience and precision for a variety of recipes. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: Front view of the Kenmore 5 Quart Slow Cooker, showcasing its black exterior, gray accents, control dial, and clear glass lid.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the base unit, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated stoneware crock.

PRODUCT OVERVIEW AND COMPONENTS

The Kenmore 5 Quart Slow Cooker consists of several key components designed for efficient and safe cooking:

- **Base Unit:** The main housing containing the heating element and control panel.
- **Removable Stoneware Insert:** A 5-quart oval-shaped ceramic pot where food is cooked. This insert is dishwasher-safe.
- **Tempered Glass Lid:** Allows for easy viewing of food during cooking and helps retain heat and moisture.
- **Control Dial:** Simple dial for selecting temperature settings (OFF, LOW, HIGH, WARM).
- **Cool-Touch Handles:** Integrated handles on the base unit for safe handling.
- **Non-Slip Rubber Feet:** Provides stability on countertops.



Image: Detailed views of the slow cooker's control dial, cool-touch handle, tempered glass lid, and removable stoneware insert.

SETUP

- 1. Unpack:** Carefully remove all components from the packaging.
- 2. Clean:** Wash the stoneware insert and glass lid in warm, soapy water or in the dishwasher. Rinse thoroughly and dry. Wipe the exterior of the base unit with a soft, damp cloth. Do not immerse the base unit in water.
- 3. Placement:** Place the base unit on a dry, level, heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the appliance.
- 4. Assemble:** Place the clean stoneware insert into the base unit.

OPERATING INSTRUCTIONS

Using your Kenmore 5 Quart Slow Cooker is straightforward:

- 1. Prepare Food:** Place your ingredients into the stoneware insert. Do not overfill; ensure there is at least 1 inch of space from the top rim.

2. **Secure Lid:** Place the tempered glass lid onto the stoneware insert.
3. **Plug In:** Plug the power cord into a standard 120V AC electrical outlet.
4. **Select Setting:** Turn the control dial to your desired cooking setting:
 - **LOW:** For slow, gentle cooking over a longer period (typically 6-8 hours).
 - **HIGH:** For faster cooking (typically 3-4 hours).
 - **WARM:** To keep cooked food at a serving temperature. Do not use the WARM setting for cooking.
5. **Cooking Time:** Follow your recipe's recommended cooking times. Avoid lifting the lid frequently, as this releases heat and extends cooking time.
6. **Serving:** Once cooking is complete, turn the dial to the 'OFF' position and unplug the appliance. Carefully remove the lid and serve.

Making a delicious slow-cooked supper is as easy as adding ingredients and turning the dial!



Image: A person adding liquid to the slow cooker, demonstrating the preparation process.

Video: An overview of the Kenmore 5 Quart Slow Cooker, highlighting its features and ease of use.

COOKING TIPS

- For best results, fill the stoneware insert between half and three-quarters full.
- Browning meat before adding it to the slow cooker can enhance flavor and texture.

- Root vegetables (carrots, potatoes) cook slower than meat and should be placed at the bottom of the crock.
- Dairy products and fresh herbs should be added during the last hour of cooking to prevent curdling or loss of flavor.
- Always ensure the lid is properly seated to maintain consistent cooking temperatures.



Image: A creamy soup prepared in the slow cooker, ready for serving.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your slow cooker:

1. **Before Cleaning:** Always unplug the slow cooker and allow it to cool completely before cleaning.
2. **Stoneware Insert and Lid:** The stoneware insert and glass lid are dishwasher-safe. Alternatively, they can be washed by hand with warm, soapy water. Avoid abrasive cleaners or scouring pads that may scratch the surface.
3. **Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth. Do not immerse the base unit in water or any other liquid.
4. **Storage:** Ensure all parts are completely dry before storing. Store the slow cooker with the lid inverted on the stoneware insert to prevent odors and allow air circulation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Food not cooking properly	Lid not sealed, incorrect setting, insufficient cooking time, too much liquid.	Ensure lid is properly seated. Verify correct temperature setting. Extend cooking time if necessary. Reduce liquid as per recipe.
Food is burning on the bottom	Too little liquid, cooking on HIGH for too long, food stuck to bottom.	Add more liquid. Use LOW setting for longer cooking. Stir occasionally if recipe allows. Ensure stoneware is clean before use.
Slow cooker not turning on	Not plugged in, power outage, faulty outlet.	Check power cord connection. Verify power to the outlet. Try a different outlet.

SPECIFICATIONS

- **Brand:** Koolatron
- **Model Number:** KKSC5QB-AZ
- **Capacity:** 5 Quarts
- **Color:** Black and Gray
- **Material:** Stainless Steel exterior, Stoneware insert
- **Product Dimensions:** 11"D x 15.2"W x 9.5"H
- **Wattage:** 190 watts
- **Voltage:** 120 Volts
- **Item Weight:** 10.4 Pounds
- **Control Type:** Manual Dial with OFF, LOW, HIGH, WARM settings
- **Dishwasher Safe:** Yes (Stoneware insert and lid)



Image: Diagram showing the dimensions of the Kenmore 5 Quart Slow Cooker.

WARRANTY AND SUPPORT

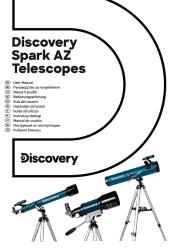
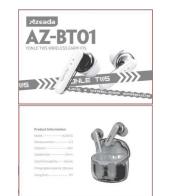
This Koolatron Kenmore 5 Quart Slow Cooker is backed by a **1-year limited warranty**. For warranty claims, product support, or inquiries, please contact Koolatron customer service. Keep your purchase receipt as proof of purchase for warranty validation.

For additional support and product information, visit the official Koolatron store [Koolatron Store](#)

© 2023 Koolatron. All rights reserved.

Related Documents - KKSC5QB-AZ

	<p>Koolatron TCCM06 Drip Coffee Maker User Manual</p> <p>User manual for the Koolatron TCCM06 Drip Coffee Maker, covering warranty, safety precautions, operation, cleaning, maintenance, and tips for great-tasting coffee.</p>
	<p>Kenmore 7-Quart Slow Cooker Use and Care Guide</p> <p>This guide provides essential information for operating, maintaining, and troubleshooting your Kenmore 7-Quart Slow Cooker (Model KKSC7QSS). Includes safety instructions, parts identification, usage tips, cooking guidelines, and cleaning procedures.</p>

	<p>Johnson Controls SDP2500 Differential Pressure Transmitter Installation Guide</p> <p>Detailed installation, configuration, and technical specifications for the Johnson Controls SDP2500 Differential Pressure Transmitter. Includes safety advice, disposal notes, wiring diagrams, DIP switch settings, and automatic zero-point calibration procedures.</p>
	<p>Discovery Spark AZ Telescopes User Manual</p> <p>User manual for Discovery Spark AZ telescopes, covering assembly, operation, specifications, and care for models like Spark 506 AZ, 703 AZ, and 114 AZ. Includes multilingual support.</p>
	<p>Meade Infinity Series AZ 80, 90, 102mm Refracting Telescope Instruction Manual</p> <p>This document provides comprehensive instructions for setting up, operating, and maintaining Meade Infinity Series AZ 80, 90, and 102mm refracting telescopes. It covers essential observing tips, telescope specifications, and guidance for astronomical observation.</p>
	<p>Mzeada AZ-BT01 Yonle TWS Wireless Earbuds User Manual and Specifications</p> <p>Detailed information on the Mzeada AZ-BT01 Yonle TWS Wireless Earbuds, including product information, controls, earphone operation instructions, and FCC compliance statement.</p>