

[Manuals.plus](#) /

› [YESHOMY](#) /

› YESHOMY TV Stand User Manual

YESHOMY YH-TS1018

YESHOMY TV Stand User Manual

Model: YH-TS1018

Brand: YESHOMY

PRODUCT OVERVIEW

The YESHOMY TV Stand is designed to accommodate televisions up to 65 inches, offering both functional storage and a stylish addition to your living space. This unit features two sliding barn doors that conceal storage cabinets, and a central open shelf area for media devices. It is constructed from metal and wood, providing a sturdy and durable foundation for your entertainment setup.



Image: Front view of the YESHOMY TV Stand in Espresso finish, showcasing its design with a television placed on top and media components within its compartments.

Key Features:

- **Size Compatibility:** Designed for TVs up to 65 inches, with dimensions of 58 inches (L) x 15.5 inches (D) x 27.6 inches (H).
- **Sliding Barn Doors:** Two doors slide smoothly on metal rails, allowing flexible access to storage compartments and the ability to conceal items.
- **Ample Storage:** Features large storage spaces, including a central open shelf and concealed cabinets behind the sliding doors, suitable for electronic devices, media, and other items.
- **Cable Management:** Equipped with circular drilling designs at the back for organized routing of power supplies and cables.
- **Durable Construction:** Made from a combination of metal and wood for stability and longevity.

SAFETY INFORMATION

WARNING:

- Always follow the assembly instructions carefully to prevent injury.
- Keep the product away from heat sources and avoid exposing it to excessive moisture to maintain its longevity and safety.
- Always supervise children when they are near the product to prevent accidents.
- Do not overload the TV stand. The top surface has a maximum weight capacity of 300 lbs. Internal shelves have a maximum weight capacity of 30 lbs.
- Ensure the TV stand is placed on a flat, stable surface to prevent tipping.

SETUP AND ASSEMBLY

This TV stand requires assembly. It is recommended that two people assemble the unit for ease and safety. A tool kit and a manual of installation are included in the package.

Before You Begin:

- Unpack all components and verify against the parts list provided in the assembly manual.
- Ensure you have adequate space for assembly.
- Keep small parts away from children.

Assembly Steps (General Guidance):

1. Identify and separate all wooden panels and hardware.
2. Attach cam locks and dowels to the designated panels as per the assembly manual.
3. Assemble the base and side panels, ensuring all connections are secure.
4. Install the back panel, aligning it with the pre-drilled holes.
5. Insert the adjustable shelves into the desired positions.
6. Attach the top panel to the assembled frame.
7. Install the metal rails for the sliding barn doors.
8. Attach the barn doors to the rails, ensuring they slide smoothly.
9. Place the TV stand in its final desired location, ensuring it is level and stable.





Image: Close-up details of the TV stand, highlighting the adjustable shelf mechanism, the circular cable management hole, and the texture of the sturdy wood material.

OPERATING INSTRUCTIONS

Using the Sliding Barn Doors:

The TV stand features two sliding barn doors that move along a metal track. To access the storage compartments or the central shelf, gently slide the doors left or right along the top rail. The doors are designed to move smoothly and can be positioned to cover either the side cabinets or the central open section.

DETAILS DESIGN

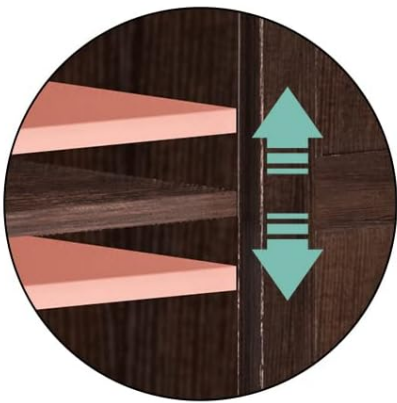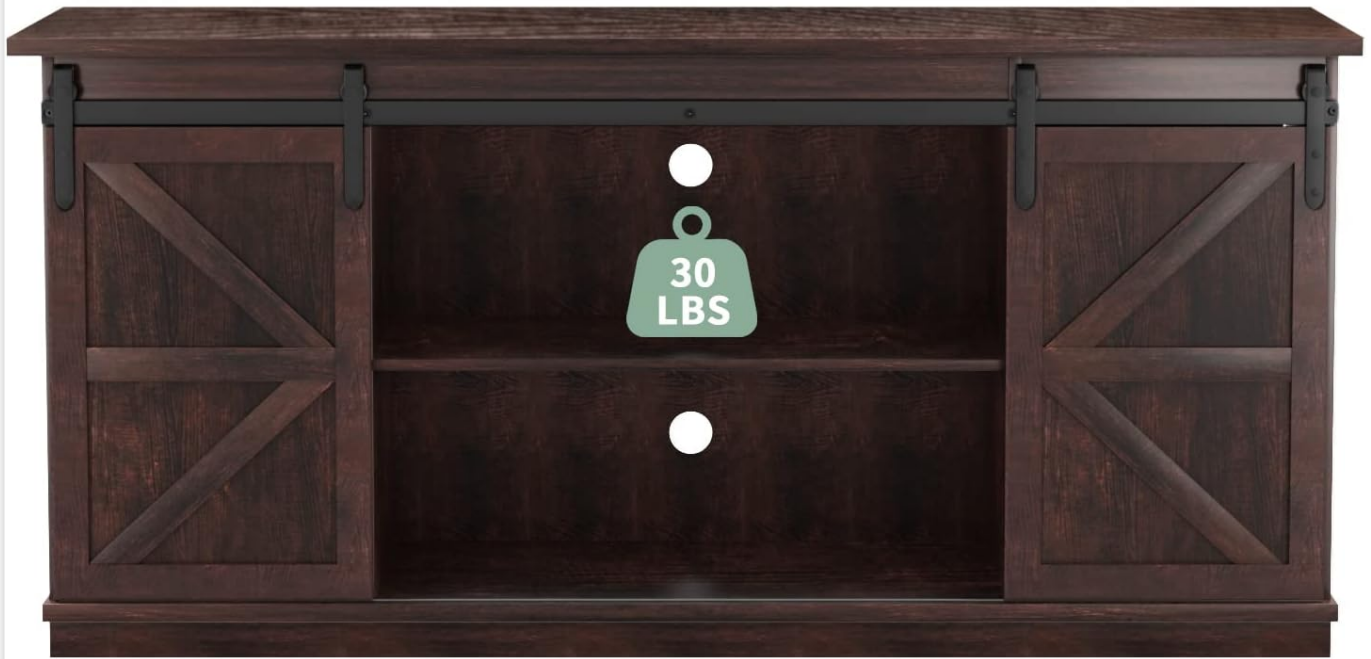

ADJUSTABLE SHELF



ROUND CABLE HOLE



STURDY WOOD BOARD

Image: A detailed view of the sliding barn door mechanism, showing the metal track and rollers that allow the doors to move horizontally.

Cable Management:

Utilize the pre-drilled circular holes on the back panel of the TV stand to route cables from your television and media devices. This helps in keeping wires organized and out of sight, contributing to a cleaner aesthetic.

Adjusting Shelves:

The internal shelves are adjustable. To change the height of a shelf, remove any items from it, lift the shelf, and reposition the shelf pegs into the desired set of holes on the side panels. Ensure all four pegs are securely inserted before placing items back on the shelf.

MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your YESHOMY TV Stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can

damage the finish.

- **Spills:** Immediately wipe up any spills to prevent staining or water damage.
- **Heat and Moisture:** Keep the TV stand away from direct heat sources and areas of high humidity. Use coasters under drinks to protect the surface.
- **Weight Distribution:** Distribute weight evenly across the top surface and shelves to prevent warping or structural stress.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Sliding doors stick or do not move smoothly.	Debris on track, misaligned doors, or loose hardware.	Clean the metal track. Check that the doors are properly seated on the rollers. Ensure all hardware attaching the doors and rails is tightened.
TV stand wobbles or is unstable.	Uneven floor, loose assembly hardware, or incorrect assembly.	Ensure the TV stand is on a level surface. Check and tighten all assembly screws and cam locks. Review assembly instructions to confirm correct installation.
Missing parts or damaged components upon arrival.	Shipping damage or packaging error.	Do not proceed with assembly. Contact YESHOMY customer support immediately with your purchase details and a description of the issue.

SPECIFICATIONS

Attribute	Detail
Model Number	YH-TS1018
Color	Espresso
Material	Metal, Wood
Product Dimensions (L x W x H)	58 x 15.5 x 27.6 inches
Item Weight	81.3 pounds
Maximum TV Size Compatibility	Up to 65 inches
Top Surface Weight Capacity	300 lbs
Shelf Weight Capacity	30 lbs
Number of Shelves	3 (1 fixed, 2 adjustable)
Special Feature	Adjustable Shelf, Sliding Barn Doors, Cable Management Holes
Care Instructions	Hand Wash (referring to wiping with damp cloth)
UPC	768494992712



BARN DOOR DESIGN

Storage much more things
through sliding it easily and
conveniently.



Image: Visual representation of the TV stand's compatibility with different television sizes, from 32 inches up to 65 inches.



Image: Technical drawing with precise measurements of the TV stand, including overall dimensions and internal shelf clearances.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your YESHOMY TV Stand, please contact YESHOMY customer support. When contacting support, please have your model number (YH-TS1018) and purchase information readily available. While specific contact details are not provided in this manual, you can typically find support information on the manufacturer's official website or through the retailer where the product was purchased.

Online Resources: For additional information and support, you may visit the [YESHOMY Store on Amazon](#).

© 2025 YESHOMY. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question