

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [BOMAZ](#) /

› User Manual: BOMAZ Remote Control ERF2A60 for Hisense Smart 4K TV

BOMAZ ERF2A60

User Manual: BOMAZ Remote Control ERF2A60

For Hisense Smart 4K TV Models

1. PRODUCT OVERVIEW

This manual provides instructions for the BOMAZ ERF2A60 remote control, designed for use with various Hisense Smart 4K TV models. This remote offers direct functionality without the need for programming or setup, and does not include voice control features.





Figure 1: BOMAZ ERF2A60 Remote Control. This image displays the full layout of the BOMAZ ERF2A60 remote control. It is a black remote with clearly labeled buttons, including a numeric keypad, navigation cluster, volume and channel controls, media playback buttons, and dedicated quick-access buttons for Netflix, YouTube, Google Play, and Vudu. The model number ERF2A60 is printed at the bottom.

2. SETUP

The BOMAZ ERF2A60 remote control is designed for immediate use with compatible Hisense Smart 4K TV models without requiring any complex programming or pairing procedures.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment. **Note: Batteries are not included.**
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

2.2 Compatibility

This remote control is compatible with the following Hisense Smart 4K TV models:

- 43H78G, 43H5670G, 43H6510G
- 50H6510G, 50H6570G
- 55H9G, 65H9G, 55H6510G, 55H6570G
- 65H6570G, 65H6510G

- 70H6570G, 75H6570G, 75H6510G
- 85H6570G, 85H6510G

3. OPERATING INSTRUCTIONS

Familiarize yourself with the functions of each button on your remote control.

Button	Function
Power ()	Turns the TV on or off.
INPUT	Cycles through available input sources (HDMI, AV, etc.).
0-9 (Number Pad)	Directly selects TV channels or enters numerical values.
- (Dash)	Used for entering sub-channels (e.g., 7-1) or specific numerical inputs.
CC (Closed Caption)	Activates or deactivates closed captions.
Colored Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within menus or applications. Refer to on-screen prompts.
≡ (Menu/Options)	Accesses the main menu or options for the current screen.
TV	Switches to the TV tuner input.
Navigation Pad (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections or enters a menu item.
← (Back/Return)	Returns to the previous screen or menu.
⏠ (Home)	Accesses the TV's home screen or smart platform.
APPS	Opens the applications menu or app store.
VOL +/- (Volume Up/Down)	Adjusts the audio volume level.
🔇 (Mute)	Mutes or unmutes the audio.
CH ▲/▼ (Channel Up/Down)	Changes the TV channel.
(Rewind)	Rewinds media playback.
(Play/Pause)	Plays or pauses media playback.
(Fast Forward)	Fast forwards media playback.
NRT (Next/Previous Track)	Skips to the next or previous track in media playback.
■ (Stop)	Stops media playback.

Button	Function
MTS (Multi-channel Television Sound)	Cycles through audio modes (e.g., Stereo, SAP).
NETFLIX	Directly launches the Netflix application.
YouTube	Directly launches the YouTube application.
Google Play	Directly launches the Google Play application.
VUDU	Directly launches the Vudu application.

Please note: This remote control does not support voice functions.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or internal components.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Remote is unresponsive.	<ul style="list-style-type: none"> • Batteries are dead or low: Replace with fresh AAA batteries. • Batteries inserted incorrectly: Check polarity (+/-) and reinsert. • Obstruction between remote and TV: Ensure a clear line of sight to the TV's infrared receiver. • Remote is too far from the TV: Move closer to the television.
Some buttons do not work.	<ul style="list-style-type: none"> • Dirty contacts: Clean the remote as described in the Maintenance section. • Specific button malfunction: If only a few buttons are unresponsive after checking batteries and cleaning, the remote may be faulty.

Problem	Possible Cause / Solution
Remote works intermittently.	<ul style="list-style-type: none"> • Low batteries: Replace batteries. • Interference: Ensure no strong light sources (like direct sunlight) are hitting the TV's IR receiver.

If these steps do not resolve the issue, contact the product vendor for further assistance.

6. SPECIFICATIONS

Feature	Detail
Model Number	ERF2A60
Brand	BOMAZ
Connectivity Technology	Infrared (IR)
Compatible Devices	Hisense Smart 4K Televisions (specific models listed in Section 2.2)
Max Number of Supported Devices	1 (Dedicated to compatible Hisense TVs)
Special Feature	Ergonomic design, No programming required, Quick access app buttons
Power Source	2 x AAA Batteries (not included)
Item Weight	3.2 ounces (approx. 90.7 grams)
Package Dimensions	9.57 x 4.49 x 1.1 inches (approx. 24.3 x 11.4 x 2.8 cm)