

[manuals.plus](#) /

› [HP](#) /

› [HP Wireless Mouse S1500 User Manual](#)

HP S1500

HP Wireless Mouse S1500 User Manual

Model: S1500

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your HP Wireless Mouse S1500. Please read these instructions carefully before using the product to ensure optimal performance and longevity.



Image 1.1: The HP Wireless Mouse S1500, showcasing its ergonomic and lightweight design.

2. SETUP

2.1 Package Contents

Ensure your package contains the following items:

- HP Wireless Mouse S1500
- USB 2.4GHz Receiver
- AA Battery (pre-installed or included separately)

2.2 Battery Installation

1. Locate the battery compartment cover on the underside of the mouse.
2. Slide or lift the cover to open the compartment.
3. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover.

2.3 Connecting the USB Receiver

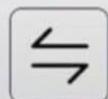 


Image 2.1: The HP Wireless Mouse S1500 and its accompanying 2.4GHz USB receiver.

 
1. Remove the USB 2.4GHz receiver from its storage slot, usually located within the battery compartment or on the underside of the mouse.
2. Plug the USB receiver into an available USB port on your computer.
3. Your computer should automatically detect and install the necessary drivers. This process may take a few moments.

2.4G Wireless Connect

Wireless Connection Beautiful Desktop



About 10 Meters Connect

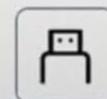

2.4G wireless



Image 2.2: The mouse utilizes 2.4GHz wireless technology for a stable connection up to approximately 10 meters.

3. OPERATING INSTRUCTIONS

3.1 Basic Functions

The HP Wireless Mouse S1500 features three standard buttons and a scroll wheel:

- **Left Button:** Primary click function, used for selecting items, opening files, and interacting with software.
- **Right Button:** Secondary click function, typically used to open context menus.
- **Scroll Wheel:** Used for scrolling through documents and web pages. It can also function as a middle button when pressed.



Image 3.1: The HP Wireless Mouse S1500 in use, demonstrating its comfortable fit for daily tasks.

3.2 Ergonomics and Portability

The S1500 mouse is designed for comfort and ease of use. Its ergonomic shape fits naturally in the hand, and its lightweight construction makes it suitable for extended use and portability.



Image 3.2: The HP Wireless Mouse S1500 positioned for use on a typical workspace.

3.3 Power Management

The mouse features a smart sleep function combined with energy-saving optimization to extend battery life. If the mouse is inactive for a period, it will enter a low-power sleep mode. To wake it up, simply move the mouse or click any button.

Long battery life Let you work at ease

Smart sleep function combined with
energy saving optimization



Image 3.3: The HP Wireless Mouse S1500's power management features contribute to long battery life.

4. MAINTENANCE

4.1 Cleaning

To clean your mouse, use a soft, dry, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the mouse's surface.

4.2 Battery Replacement

When the mouse's performance degrades or it stops responding, it may be time to replace the battery. Follow the steps in Section 2.2 to replace the AA battery.

5. TROUBLESHOOTING

5.1 Mouse Not Responding

- **Check Battery:** Ensure the AA battery is correctly installed and has sufficient charge. Replace if necessary.
- **Check USB Receiver:** Make sure the USB receiver is securely plugged into a working USB port on your computer. Try a different USB port.

- **Distance:** Ensure the mouse is within the effective operating range (approximately 10 meters) of the USB receiver.
- **Interference:** Move the mouse and receiver away from other wireless devices or large metal objects that might cause interference.
- **Re-establish Connection:** Some mice have a connect button on the underside. If available, press it and then press the connect button on the receiver (if applicable) to re-establish the connection.

5.2 Erratic Cursor Movement

- **Clean Sensor:** Ensure the optical sensor on the underside of the mouse is clean and free from dust or debris.
- **Surface:** Use the mouse on a clean, non-reflective, and uniform surface. Avoid highly reflective or transparent surfaces like glass. A mouse pad is recommended.

6. SPECIFICATIONS

Feature	Detail
Model Name	S1500
Brand	HP
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Movement Detection	Optical
Button Quantity	3 (Left, Right, Scroll Wheel/Middle)
Hand Orientation	Right
Special Features	Ergonomic Design, Lightweight, Portable, Soundless, Wireless
Power Source	1 x AA Battery
Compatible Devices	Personal Computer
Package Dimensions	12 x 8.2 x 4.6 cm
Weight	250 g (including packaging)

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This HP product is covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official HP support website. Keep your proof of purchase for warranty claims.

7.2 Technical Support

For technical assistance, driver downloads, or further information, please visit the official HP support website or contact HP customer service. Contact details can typically be found on the HP website or in the product packaging.

HP Official Website: www.hp.com