

[Manuals.plus](#) /

> [EAMBRITE](#) /

> EAMBRITE S6V200M5 Multi-Color Music Christmas Lights Instruction Manual

EAMBRITE S6V200M5

EAMBRITE S6V200M5 Multi-Color Music Christmas Lights Instruction Manual

Brand: EAMBRITE | **Model:** S6V200M5

1. INTRODUCTION

Thank you for choosing the EAMBRITE S6V200M5 Multi-Color Music Christmas Lights. This manual provides essential information for the safe and efficient operation of your new lighting product. Please read these instructions carefully before installation and use, and retain them for future reference.

2. SAFETY INFORMATION

- Ensure the product is unplugged before installation, maintenance, or troubleshooting.
- Do not connect the lights to another string of lights. This product is not connectable.
- Avoid damaging the insulation of the wires. Do not place the product near heat sources.
- This product is rated IP44 waterproof for outdoor use, but the power adapter should be protected from direct water exposure.
- Keep out of reach of children and pets.
- Use only the provided power adapter.

3. PACKAGE CONTENTS

- 1 x EAMBRITE S6V200M5 Multi-Color Music Christmas Lights (82Ft total length, 200 LED lights)
- 1 x Controller with Motion Sensor
- 1 x Power Adapter
- 1 x Instruction Manual

4. PRODUCT FEATURES

- **Light Type:** 200 Multi-Color LED Fairy Lights
- **Length:** 82 feet total length, with 65.625 feet of illuminated lights

- **Control:** Integrated controller with button and infrared motion sensor
- **Modes:** 6 modes including 4 Christmas-themed music modes, 1 auto music mode, and 1 steady-on mode.
- **Memory Function:** Built-in chip retains the last selected mode after power off/on.
- **Waterproof Rating:** IP44 (suitable for outdoor use)

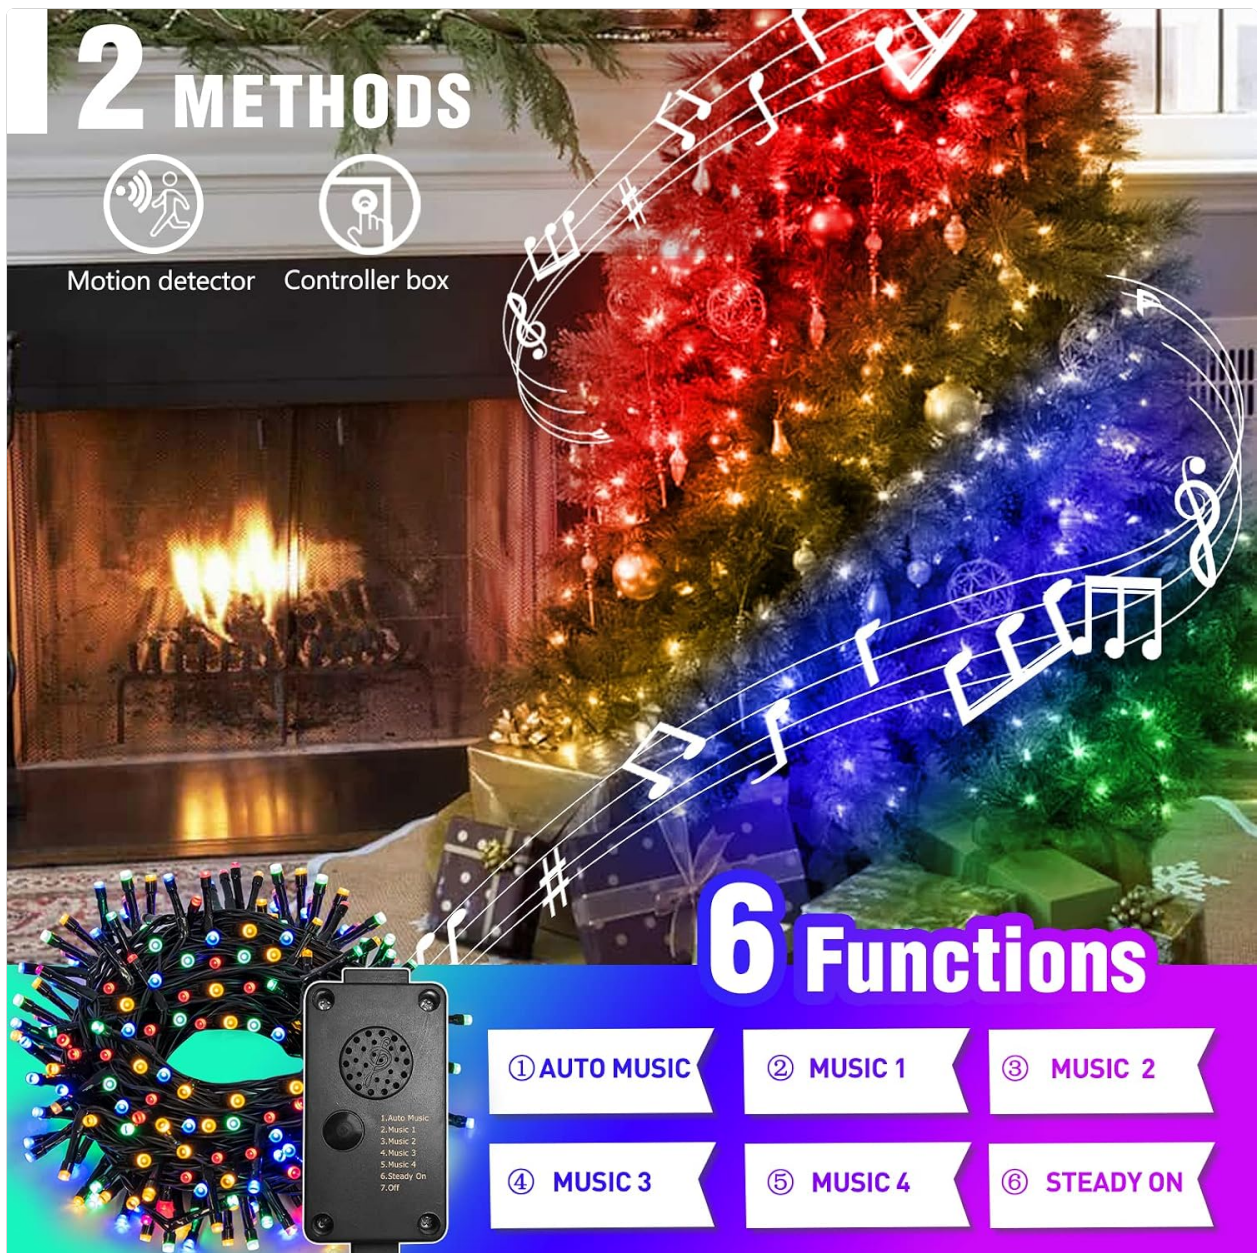


Figure 1: Controller with 6 Function Modes

5. SETUP INSTRUCTIONS

5.1 Unpacking

Carefully remove the lights and all components from the packaging. Untangle the light string gently to avoid damage.

5.2 Placement

Determine the desired location for your lights. These lights are suitable for both indoor and outdoor decoration, such as Christmas trees, patios, gardens, doors, and windows. Ensure the power outlet is within reach of the power adapter cable.

5.3 Connection

1. Connect the light string to the controller.
2. Connect the power adapter to the controller.
3. Plug the power adapter into a standard 120V electrical outlet.



Figure 2: Light String Length and Controller Placement

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Once plugged into a power outlet, the lights will automatically turn on. To turn off, unplug the power adapter.

6.2 Mode Selection

The lights offer two methods for changing lighting and sound effects:

1. **Controller Button:** Press the button on the controller to cycle through the 6 available modes.
2. **Motion Sensor:** The built-in infrared motion sensor detects movement within a fan-shaped area of approximately 16-26 feet (without barriers). When motion is detected, the lights will activate and play music according to the selected music mode.

6.3 Memory Function

The integrated memory chip ensures that the lights will resume the last selected mode when powered on again, even after being unplugged.

Your browser does not support the video tag.

Video 1: Demonstration of EAMBRITE Multi-Color Music Christmas Outdoor Lights in various settings.

7. MODES AND FUNCTIONS

Mode Number	Mode Name	Description
1	Auto Music	Lights twinkle with a sequence of 4 Christmas-themed songs.
2	Music 1	Lights twinkle with the first Christmas-themed song.
3	Music 2	Lights twinkle with the second Christmas-themed song.
4	Music 3	Lights twinkle with the third Christmas-themed song.
5	Music 4	Lights twinkle with the fourth Christmas-themed song.
6	Steady On	Lights remain continuously lit without music.

8. SPECIFICATIONS

Attribute	Value
Brand	EAMBRITE
Model Number	S6V200M5
Light Color	Multi-colored
Number of Lights	200 LED
Total Length	82 Feet
Lighted Length	65.625 Feet
Power Source	Corded Electric
Voltage	120 Volts
Wattage	5 Watts
Material	Plastic
Waterproof Rating	IP44
Control Method	Button, Motion Sensor
Item Weight	1.1 Pounds



Figure 3: IP44 Waterproof Rating for All-Weather Use

9. MAINTENANCE

9.1 Cleaning

To clean the lights, ensure they are unplugged. Gently wipe the LED bulbs and wires with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

9.2 Storage

When not in use, unplug the lights and carefully coil the string. Store them in a cool, dry place, away from direct sunlight and extreme temperatures, preferably in their original packaging to prevent tangling and damage.

10. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lights do not turn on.	No power supply.	Check if the power adapter is securely plugged into a working outlet. Ensure the light string is properly connected to the controller.
Motion sensor is not responding.	Obstruction or incorrect placement.	Ensure there are no barriers blocking the sensor's field of view. Verify the sensor is facing the area where motion is expected.
Music volume is too low or unclear.	Environmental factors or inherent speaker limitations.	The integrated speaker has a fixed volume. For outdoor use, ambient noise may affect perception. Consider placing the controller in a quieter area if possible.
Lights are not changing modes.	Controller button not pressed correctly.	Press the button firmly to cycle through modes. Allow a moment for the mode to change.

11. WARRANTY AND SUPPORT

EAMBRITE products are designed for quality and reliability. For specific warranty details, please refer to the documentation included with your purchase or contact EAMBRITE customer support. If you encounter any issues or have questions not covered in this manual, please reach out to our customer service team for assistance.

Customer Support: Please refer to your purchase platform or EAMBRITE's official website for contact information.