

[Manuals.plus](#) /

> [AerWo](#) /

> AerWo 4 FT Inflatable Teddy Bear with Love Heart Instruction Manual

AerWo 4FT

AerWo 4 FT Inflatable Teddy Bear with Love Heart Instruction Manual

Model: 4FT

1. PRODUCT OVERVIEW

The AerWo 4 FT Inflatable Teddy Bear with Love Heart is an outdoor decoration designed for festive occasions. This inflatable features a winking teddy bear wearing a top hat and holding a heart that reads "I Love You." It includes built-in LED lights for illumination and a self-inflating fan for easy setup. The durable, waterproof polyester material ensures suitability for various outdoor conditions.



This image displays the 4-foot tall inflatable teddy bear holding a red heart that says 'I Love You'. It highlights the overall dimensions of 47 inches (120cm) in height and 49 inches (125cm) in width, along with close-ups of the winking face and the heart design.

2. PACKAGE CONTENTS

Please verify that all the following items are included in your package:

- 1 x AerWo 4 FT Inflatable Teddy Bear with Love Heart
- 1 x Built-in Fan (pre-installed)
- 3 x Bright LED Lights (pre-installed)
- 1 x Power Adapter with UL Certification
- 2 x Fasten Ropes
- 4 x Ground Stakes
- 3 x Sandbags (empty, for filling with weight)



This image provides a detailed view of the inflatable's components. It shows the teddy bear from both front and back, highlighting its top hat, wings, the 'I Love You' heart, the internal fan, the power adapter, and the included ground stakes and sandbags for stability.

3. SETUP INSTRUCTIONS

Follow these steps to set up your inflatable decoration:

1. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.
2. **Position:** Place the deflated inflatable in your desired location, ensuring it is on a flat, clear surface away from sharp objects or obstructions.
3. **Add Weight (Optional but Recommended):** For enhanced stability, especially in windy conditions, fill the three provided sandbags with sand or small stones. Locate the zippered opening at the bottom of the inflatable and place the filled sandbags inside. Close the zipper securely to prevent air leakage.
4. **Connect Power:** Plug the power adapter into a standard electrical outlet. The built-in fan will begin to inflate the teddy bear automatically. Ensure the zipper at the bottom is fully closed for proper inflation.
5. **Secure with Stakes and Ropes:** Once fully inflated, use the provided ground stakes and fasten ropes to secure the inflatable to the ground. Attach the ropes to the loops on the inflatable and then anchor them with the stakes. Adjust the tension of the ropes to ensure the inflatable stands upright and is stable.

**Put Something Heavy Like Stone
Inside ! Easy to Stand !**



This image illustrates how to add weight to the inflatable for stability. It shows three white cloth bags, suggesting they can be filled with heavy material like sand or stones, and a hand inserting one such bag into a zippered opening at the base of the inflatable.

Method 1

Comes with three cloth bags, you can add sandbags yourself to fix the teddy bear inflatable.



Method 2

With ground stakes and rope, tie the rope to the inflator and fix it on the ground.



Installation Steps & Features:

Equipped with a powerful waterproof built-in fan and a plug with UL Certification. Adopting 6.6 FT power cord which is long enough to make sure it can be placed in the yard. Put it into the power supply, in just a few seconds you can see the full inflatable bear. Inside is equipped with three sandbags and 3 super bright LED lights. When deflated, easy and compact to store without needing a lot of space.

This image demonstrates two installation methods. Method 1 shows filling cloth bags (sandbags) and placing them inside the inflatable via a zipper. Method 2 shows attaching ropes to the inflatable and securing them to the ground with stakes, illustrating how to achieve stability.

Your browser does not support the video tag.

This video provides a visual guide to setting up the AerWo 4 FT Inflatable Teddy Bear. It shows the process of unboxing, placing sandbags for stability, connecting the power, and watching the inflatable self-inflate. It also demonstrates securing the inflatable with ropes and ground stakes for outdoor use, and highlights its waterproof material.

4. OPERATING INSTRUCTIONS

Operating your AerWo Inflatable Teddy Bear is straightforward:

- **Inflation:** Once plugged into a standard electrical outlet, the inflatable will automatically inflate within minutes due to its powerful built-in fan.
- **Lighting:** The integrated LED lights will illuminate when the unit is powered, making the decoration visible and attractive both day and night.
- **Deflation:** To deflate, simply unplug the power adapter from the electrical outlet. For faster deflation, you can open the zipper located at the bottom of the inflatable.

5. MAINTENANCE

Proper maintenance will extend the life of your inflatable decoration:

- **Cleaning:** If the inflatable becomes dirty, gently wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** After use, ensure the inflatable is completely deflated and dry before folding it for storage. Store it in a cool, dry place, away from direct sunlight and pests. The compact design allows for easy storage.
- **Inspection:** Periodically check the power cord, fan, and fabric for any signs of damage or wear. Do not use if damaged.

6. TROUBLESHOOTING

If you encounter issues with your inflatable, refer to these common solutions:

Problem	Possible Cause	Solution
Inflatable does not inflate	Power not connected; zipper open; fan obstructed	Ensure power adapter is securely plugged in; close the bottom zipper completely; check for any debris blocking the fan intake.
Inflatable is unstable or falls over	Insufficient weight; improper securing	Ensure sandbags are filled and placed inside; verify ropes are securely attached and stakes are firmly in the ground. Add additional external weights if necessary.
Lights are not working	Power issue; damaged lights	Check power connection; if power is on and lights still don't work, contact customer support.

7. SPECIFICATIONS

- **Brand:** AerWo
- **Model Number:** 4FT
- **Item Dimensions:** 43.3 x 23.6 x 48 inches (approximately 4 FT tall)
- **Material Type:** Waterproof Polyester
- **Light Color:** Bright White LED
- **Additional Features:** Lighted, Self Inflating
- **Power Source:** Standard Electrical Outlet (UL Certified Plug)

8. SAFETY INFORMATION

Please read and follow these safety guidelines to prevent injury or damage:

- **Weather Conditions:** Do not use this inflatable outdoors during rain, strong winds, or other severe weather conditions. Water can damage electrical components, and strong winds can cause the inflatable to become dislodged and cause damage or injury.
- **Electrical Safety:** Ensure the power cord and adapter are kept dry and away from water. Do not operate with a damaged cord or plug. Always plug into a grounded outlet.
- **Placement:** Keep the inflatable away from heat sources, open flames, and sharp objects. Ensure adequate clearance around the fan for proper airflow.
- **Children and Pets:** Keep children and pets away from the inflatable during operation to prevent entanglement or damage.
- **Supervision:** Do not leave the inflatable unattended for extended periods, especially during adverse weather.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact AerWo customer service directly. Keep your purchase receipt for warranty claims.

