

[Manuals.plus](#) /

› [Tiktun](#) /

› Portable Washer and Dryer Combo XPB36-1288SB-Blue Mini Washing Machine, Blue User Manual

Tiktun XPB36-1208-Blue

Tiktun Portable Washer and Dryer Combo User Manual

Model: XPB36-1208-Blue

INTRODUCTION

Thank you for choosing the Tiktun Portable Washer and Dryer Combo. This semi-automatic twin tub washing machine is designed for convenience and efficiency, making it ideal for small living spaces such as apartments, dorms, RVs, and camping. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new appliance.



Image: The Tiktun Portable Washer and Dryer Combo, a compact blue and white appliance, shown next to a wicker laundry basket filled with clothes, illustrating its primary function.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
- Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing or drying compartment.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.

- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.
- Ensure the drain hose is positioned lower than the washer body for proper draining.

PRODUCT OVERVIEW

The Tiktun Portable Washer and Dryer Combo features a twin tub design, allowing for simultaneous washing and spinning. Familiarize yourself with the main components and controls.



Image: A collage of close-up images showing various parts of the washing machine, including the outlet pipe, laundry bucket, spin bucket, power cable, spin cap, and water inlet, with labels for each component.

Control Panel

The control panel is located on the top of the unit and features three main control switches for easy operation.



Image: A diagram illustrating the control panel with three blue knobs labeled "Wash Timer," "Select Switch" (for Standard, Soft, Drain, Spin), and "Spin Timer."

- **Wash Timer:** Sets the duration for the washing cycle (up to 15 minutes).
- **Select Switch:** Controls the operation mode (Standard Wash, Soft Wash, Drain, Spin).
- **Spin Timer:** Sets the duration for the spin cycle (up to 5 minutes).
- **Water Inlet:** Points for connecting the water supply hose.

SETUP

1. **Unpacking:** Carefully remove the washing machine from its packaging. Check for any damage during transit. Note: A small amount of residual water may be present due to factory testing; this is normal.
2. **Placement:** Place the washing machine on a flat, stable surface. Ensure there is enough space around the unit for ventilation and operation. The compact dimensions are approximately 24 inches (W) x 14 inches (D) x 27 inches (H).



Image: The Tiktun Portable Washer shown with its approximate dimensions labeled as 26.5 inches (height), 14 inches (depth), and 23 inches (width), alongside a person for scale.

3. **Water Supply Connection:** Connect a water supply hose (not included) to one of the water inlets on the top panel. The other end of the hose should be connected to a faucet.
4. **Drain Hose Placement:** Ensure the built-in gravity drain hose is positioned lower than the washer body to allow for proper water drainage. The hose can be directed into a sink, bucket, or floor drain.
5. **Power Connection:** Plug the power cable into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements.

OPERATING INSTRUCTIONS

Follow these steps for effective washing and spinning of your clothes.

Washing Cycle

1. **Load Clothes:** Open the lid of the wash tub and place your clothes inside. Do not overload the tub; the maximum wash capacity is 8 lbs.



Image: The Tiktun Portable Washer shown with examples of its wash capacity, indicating 3.6kg/7.9lb, equivalent to items like 5 bath towels, 9 children's clothes, 3 jeans, 4 shirts, or 30 socks.

2. **Add Water and Detergent:** Fill the wash tub with water to the desired level using the water inlet. Add an appropriate amount of laundry detergent.
3. **Set Wash Mode:** Turn the "Select Switch" to either "Standard" or "Soft" depending on the fabric type.
4. **Set Wash Timer:** Turn the "Wash Timer" knob to your desired washing time, up to 15 minutes. The machine will start washing automatically.
5. **Drain Water:** Once the wash cycle is complete, turn the "Select Switch" to "Drain" to empty the water from the wash tub. Ensure the drain hose is properly positioned.

Spin Cycle

1. **Transfer Clothes:** Carefully transfer the washed clothes from the wash tub to the spin tub. Do not exceed the maximum spin capacity of 4.4 lbs. Ensure clothes are evenly distributed in the spin tub to prevent imbalance.
2. **Place Spin Cap:** Place the spin cap firmly on top of the clothes in the spin tub.
3. **Set Spin Timer:** Turn the "Spin Timer" knob to your desired spinning time, up to 5 minutes. The machine will begin spinning.
4. **Remove Clothes:** Once the spin cycle is complete, remove the spin cap and carefully take out the spun clothes.



Image: An aerial view of the Tiktun Portable Washer with both the washing tub (left, with soapy water and clothes) and the spin tub (right, with colorful clothes) open, illustrating the "WASHING" and "DRY" functions.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

- **Cleaning the Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Tubs:** After each use, rinse the wash and spin tubs with clean water. For deeper cleaning, you can use a mild detergent and a soft brush, then rinse thoroughly.
- **Lint Filter:** The machine is equipped with a lint filter. Regularly check and clean the lint filter to ensure efficient operation and prevent lint buildup on clothes.
- **Drain Hose:** Periodically check the drain hose for any blockages or kinks. Ensure it is clear for proper drainage.
- **Storage:** If storing the machine for an extended period, ensure it is completely drained and dry. Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; power outage; lid not closed properly.	Check power connection; check circuit breaker; ensure lid is fully closed.
Water does not drain.	Drain hose is kinked or blocked; drain hose is not positioned lower than the machine.	Straighten hose; clear any blockages; reposition hose below the machine's base.

Problem	Possible Cause	Solution
Excessive vibration during spin.	Clothes are unevenly distributed in the spin tub; machine is not on a level surface.	Rearrange clothes evenly; adjust machine's position to a level surface.
Water leaks.	Hose connections are loose; drain hose is not properly secured.	Tighten all hose connections; ensure drain hose is securely placed.

SPECIFICATIONS

Brand	Tiktun
Model Number	XPB36-1208-Blue
Type	Semi-automatic Twin Tub Washer and Dryer Combo
Wash Capacity	8 lbs (3.6 kg)
Spin Capacity	4.4 lbs (2 kg)
Overall Capacity	12.4 lbs
Rated Wash Input Power	240W
Rated Spin Input Power	120W
Maximum Rotational Speed	1300 RPM
Dimensions (L x W x H)	24" x 14" x 27" (approx. 61cm x 35.5cm x 68.5cm)
Net Weight	26 lbs (12 kg)
Material	First-grade Stainless Steel & Plastic & PP
Color	Blue and White

WARRANTY AND SUPPORT

For any issues or inquiries not covered in this manual, please contact Tiktun customer support. While specific warranty details are not provided in this document, please refer to your purchase receipt or product packaging for warranty information. Most products come with a limited manufacturer's warranty covering defects in materials and workmanship.

Customer Support: Please refer to the contact information provided with your purchase or visit the official Tiktun website for support options.

Online Resources: For additional information, you may visit the product page on Amazon:[Tiktun Portable Washer and Dryer Combo on Amazon](#).

You can also find a PDF version of the user manual here:[User Manual \(PDF\)](#).

