

[Manuals.plus](#) /

› [Tiktun](#) /

› Tiktun Mini Compact Twin Tub Portable Washing Machine User Manual

Tiktun XPB30-1288S

Tiktun Mini Compact Twin Tub Portable Washing Machine User Manual

Model: XPB30-1288S

PRODUCT OVERVIEW

The Tiktun Mini Compact Twin Tub Portable Washing Machine (Model XPB30-1288S) is designed for efficient and convenient laundry in small living spaces such as apartments, dorms, or for RV use. This twin-tub unit features separate compartments for washing and spin-drying, allowing for simultaneous operation and saving valuable time.



Figure 1: Tiktun Mini Compact Twin Tub Portable Washing Machine (Model XPB30-1288S) with a laundry basket, illustrating its compact design.

Its compact size and lightweight design make it easy to move and store, while its powerful performance ensures effective cleaning for various fabric types.

SAFETY INSTRUCTIONS

- Ensure the washing machine is placed on a stable, level surface to prevent vibration and noise during operation.
- Do not operate the machine with a damaged power cord or plug. Contact customer support for assistance.
- Keep children and pets away from the machine during operation.
- Do not overload the wash or spin tubs beyond their specified capacities to avoid damage and ensure proper cleaning.
- Always unplug the machine from the power outlet before cleaning, performing maintenance, or if it will be unused for an extended period.
- Ensure proper ventilation around the machine.

- This appliance operates on 220V/60Hz. Verify your power supply matches these requirements.

SETUP AND INSTALLATION

1. Unpacking and Placement

Carefully remove the washing machine from its packaging. Inspect the unit for any signs of damage during transit. Place the machine on a firm, flat surface. Ensure there is enough space around the unit for proper ventilation and access to the water inlet and outlet.



Figure 2: Product dimensions are approximately 22 inches (L) x 14.5 inches (D) x 23 inches (H), highlighting its compact footprint.

2. Connecting Water Supply

Locate the water inlet on the machine. Connect a water supply hose (not always included, may require separate purchase) to the water inlet. Ensure the connection is secure to prevent leaks. The machine is designed for manual water filling, meaning water is poured directly into the wash tub. There is a water inlet port for convenience, but an automatic fill adapter is not typically provided.



Figure 3: Detail of the water inlet, where water can be added to the wash tub.

3. Positioning the Drain Hose

The machine uses a gravity drain system. Position the outlet pipe (drain hose) into a sink, bathtub, or drain. Ensure the drain hose is not kinked or blocked. For effective drainage, the drain outlet must be lower than the machine's base.



Figure 4: The outlet pipe for gravity drainage, which should be positioned lower than the machine.

4. Power Connection

Plug the power cord into a grounded 220V/60Hz electrical outlet. Ensure the outlet is easily accessible.

OPERATING INSTRUCTIONS

The Tiktun Twin Tub Washing Machine features simple rotary controls for ease of use.



Figure 5: The control panel features three rotary knobs: Wash Timer, Select Switch (for wash modes), and Spin Timer.

1. Washing Clothes

1. **Load Clothes:** Open the wash tub lid and place clothes inside. Do not exceed the maximum wash capacity of 7 lbs (approximately 3.17 kg). Overloading can reduce washing efficiency and potentially damage the machine.



Figure 6: Visual guide for wash capacity, showing examples like 5 towels, 9 children's clothes, 2 sweaters, 4 shirts, or 35 socks for the 6.6 lb (3 kg) capacity.

2. **Add Water and Detergent:** Pour the appropriate amount of water into the wash tub, ensuring clothes are submerged. Add your preferred laundry detergent.
3. **Set Wash Timer:** Turn the "Wash Timer" knob to select the desired washing time, up to 15 minutes.
4. **Select Wash Mode:** Use the "Select Switch" to choose between "Standard" or "Soft" wash modes, depending on the fabric type.
5. **Start Washing:** The machine will begin washing automatically once the timer is set.
6. **Drain Water:** Once washing is complete, turn the "Select Switch" to "Drain" to empty the water from the wash tub. Ensure the drain hose is positioned correctly.

2. Spin Drying Clothes

1. **Transfer Clothes:** Carefully transfer the washed clothes from the wash tub to the spin tub. Distribute clothes evenly inside the spin tub to maintain balance during spinning. Do not exceed the maximum spin capacity of 4 lbs (approximately 1.81 kg).
2. **Secure Lid:** Close the spin tub lid securely.
3. **Set Spin Timer:** Turn the "Spin Timer" knob to select the desired spin time, up to 5 minutes.

4. **Start Spinning:** The machine will begin spin-drying. The spin cycle removes excess water from clothes, reducing drying time.
5. **Remove Clothes:** Once the spin cycle is complete, open the lid and carefully remove the spin-dried clothes.

Both washing and spin-drying functions can be operated simultaneously, allowing for efficient laundry processing.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your Tiktun washing machine.

- **Cleaning the Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the surface.
- **Cleaning the Tubs:** After each use, rinse the wash and spin tubs with clean water. For deeper cleaning, occasionally wipe the inside of the tubs with a mild detergent solution and rinse thoroughly.
- **Draining Water:** Always ensure all water is drained from the machine after use to prevent mildew and odors. The gravity drain system requires the drain hose to be positioned lower than the machine.
- **Pulsator and Filter:** Periodically check the pulsator and any lint filters (if present) for debris and clean as necessary to maintain washing efficiency.
- **Storage:** If storing the machine for an extended period, ensure it is completely dry inside and out. Store in a cool, dry place away from direct sunlight.



Figure 7: Key internal components of the washing machine, including the pulsator and the spin bucket, which should be kept clean.

TROUBLESHOOTING GUIDE

Refer to this guide for common issues you might encounter with your washing machine.

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; power outage; timer not set.	Ensure power cord is securely plugged into a working 220V outlet. Check household circuit breaker. Set the wash or spin timer.
Water does not drain.	Drain hose kinked or blocked; drain hose positioned too high.	Straighten the drain hose and clear any obstructions. Ensure the drain hose is positioned lower than the machine's base for gravity drainage.

Problem	Possible Cause	Solution
Excessive vibration or noise during spin.	Clothes unevenly distributed in spin tub; machine not on a level surface; overloaded spin tub.	Redistribute clothes evenly in the spin tub. Ensure the machine is on a stable, level surface. Do not exceed the 4 lbs spin capacity.
Water leakage from bottom.	Loose hose connection; internal component issue; machine defect.	Check all hose connections for tightness. If leakage persists, discontinue use and contact customer support.
Burning or electrical odor during use.	Motor overheating; electrical fault.	Immediately unplug the machine. Do not use it again. Contact customer support for inspection and repair.
No water adapter for hose connection.	Machine designed for manual fill; adapter not included.	This model is primarily designed for manual water filling. If an automatic connection is desired, a universal adapter may need to be purchased separately.

PRODUCT SPECIFICATIONS

- Brand:** Tiktun
- Model:** XPB30-1288S
- Type:** Mini Compact Twin Tub Portable Washing Machine
- Color:** White and Brown
- Material:** ABS + PP
- Dimensions (L x D x H):** 22" x 14" x 25" (approx. 55.88 cm x 35.56 cm x 63.5 cm)
- Net Weight:** 22 Lbs (approx. 10 kg)
- Voltage:** 220V/60Hz
- Wash Capacity:** 7 Lbs (approx. 3.17 kg)
- Spin Capacity:** 4 Lbs (approx. 1.81 kg)
- Washing Power:** 240W
- Spinner Power:** 120W
- Controls Type:** Knob
- Access Location:** Top Load
- Special Features:** Lightweight, Portable

WARRANTY AND SUPPORT

Warranty Information

This Tiktun washing machine comes with a **6-month guarantee** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or failure to follow operating instructions.

Please retain your proof of purchase for warranty claims.

Customer Support

If you encounter any issues or have questions regarding your Tiktun washing machine, please contact customer service. Our customer service team aims to reply within 24 hours.

For detailed instructions and further assistance, you may also refer to the official User Manual PDF available online:
[Tiktun XPB30-1288S User Manual \(PDF\)](#).