

FONESTAR FORCE-12DSP

FONESTAR FORCE-12DSP Active Speaker Instruction Manual

Model: FORCE-12DSP | Brand: FONESTAR

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your FONESTAR FORCE-12DSP Active Speaker. Please read this manual thoroughly before using the product and retain it for future reference.

The FONESTAR FORCE-12DSP is an active speaker designed for stage and public address systems, offering robust audio performance and ease of use.

SAFETY INFORMATION

Always adhere to the following safety precautions to prevent electric shock, fire, or injury:

- Read all instructions before use.
- Do not expose the speaker to rain or moisture.
- Do not block any ventilation openings. Ensure proper airflow around the unit.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- FONESTAR FORCE-12DSP Active Speaker

- Instruction Manual (This document)
- Power Cable

PRODUCT OVERVIEW

The FONESTAR FORCE-12DSP is an active speaker featuring a robust design suitable for various audio applications. It includes tweeters for enhanced sound clarity and is designed for easy integration into stage and public address systems.

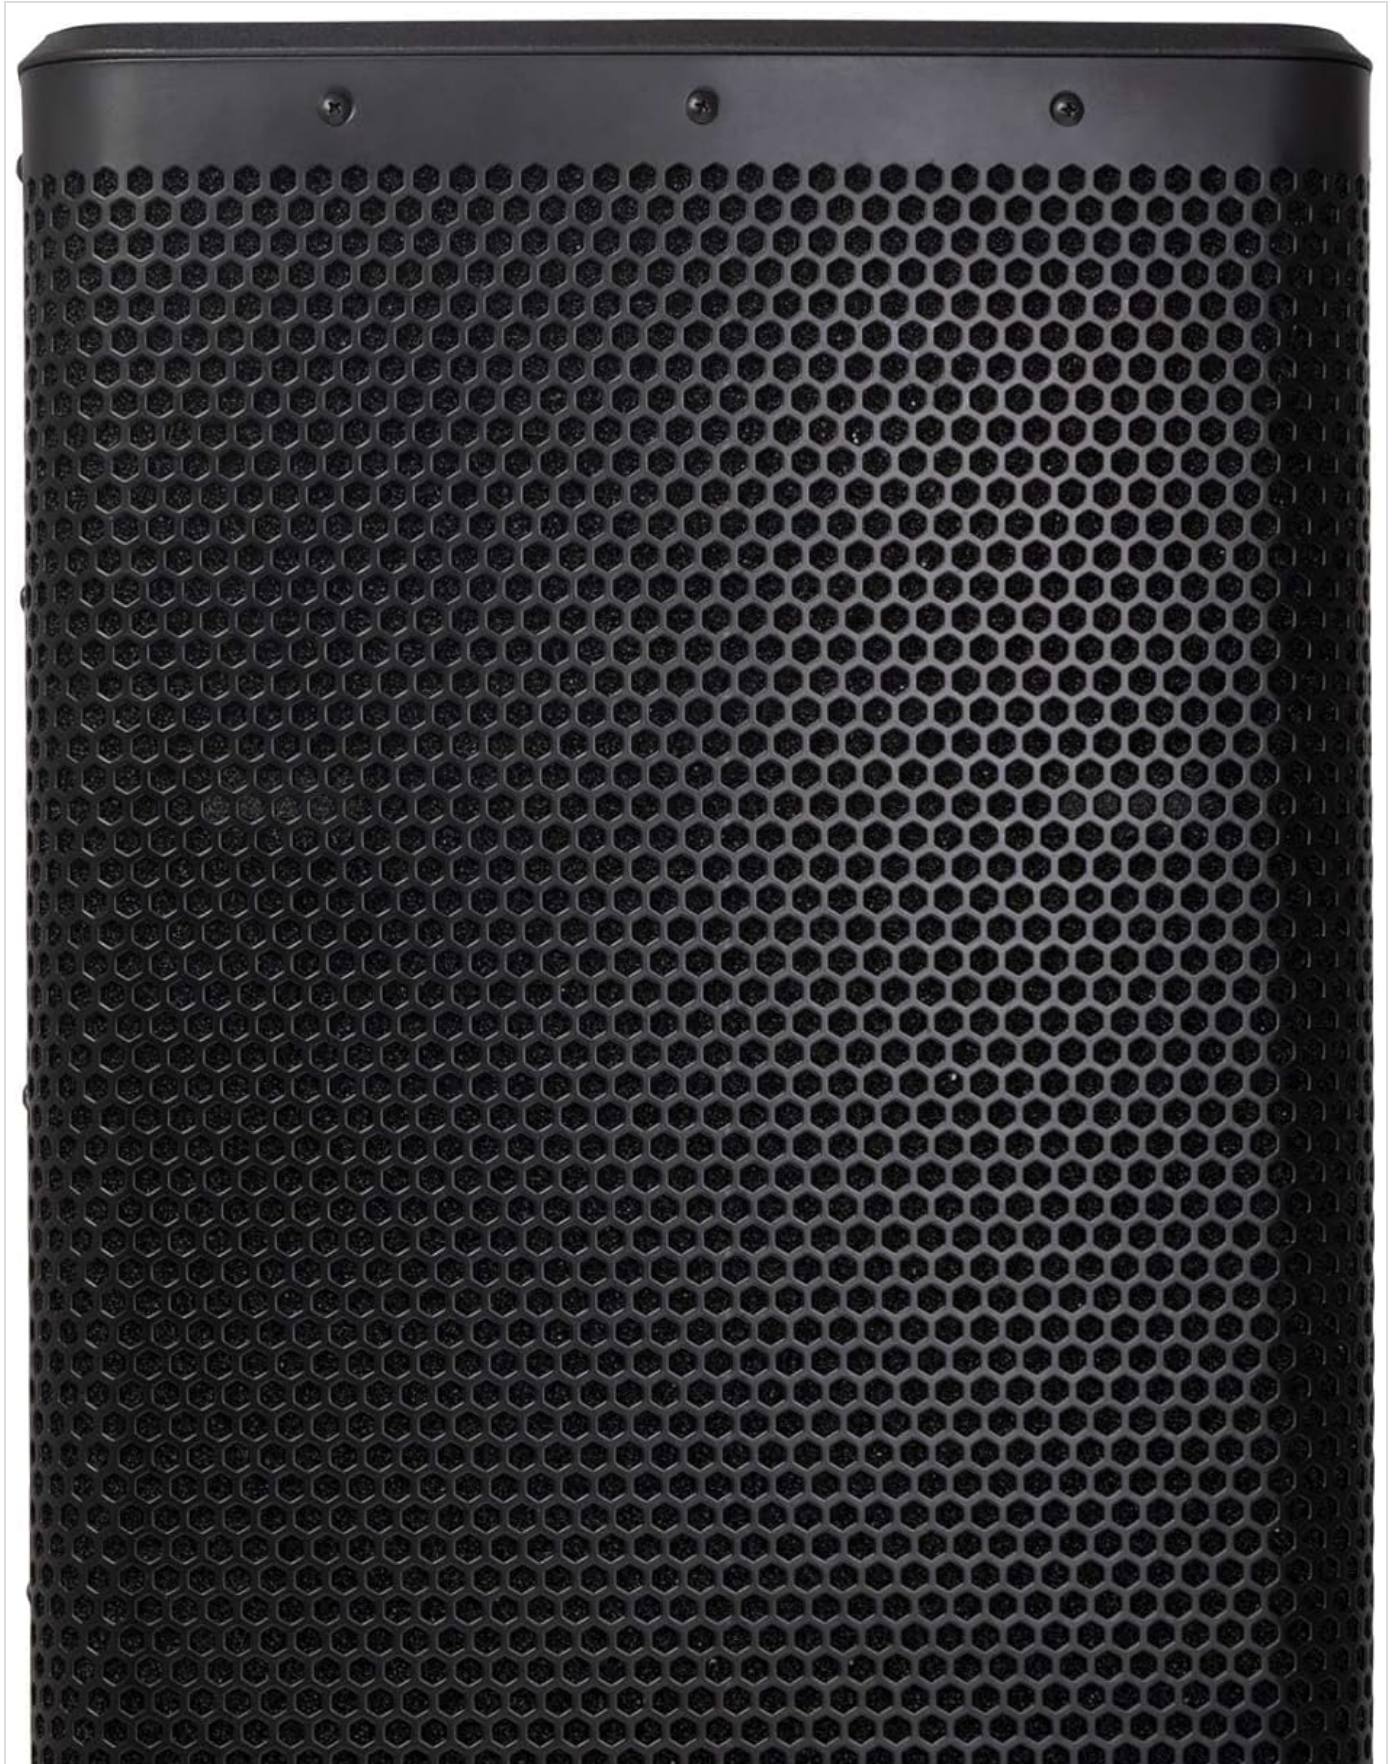




Figure 1: Front view of the FONESTAR FORCE-12DSP Active Speaker. The speaker features a durable black hexagonal mesh grille covering the entire front surface, protecting the internal components. The 'FONESTAR' brand logo is prominently displayed in white text at the bottom center of the grille. The speaker has a rectangular shape with slightly rounded corners, indicating a sturdy build for professional use.

SETUP

Placement

The FONESTAR FORCE-12DSP is designed for floor mounting. Ensure the speaker is placed on a stable, level surface to prevent tipping. Maintain adequate ventilation around the speaker to prevent overheating.

Power Connection

1. Ensure the speaker's power switch is in the OFF position.
2. Connect the provided power cable securely to the speaker's power input jack.
3. Plug the other end of the power cable into a suitable electrical outlet.

Audio Connections

Connect your audio source (e.g., mixer, microphone, instrument) to the appropriate input jacks on the speaker. Refer to the speaker's rear panel for specific input types (e.g., XLR, TRS, RCA) and ensure secure connections for optimal sound quality.

OPERATING INSTRUCTIONS

Powering On/Off

1. To power on, flip the power switch to the ON position. A power indicator light should illuminate.
2. To power off, flip the power switch to the OFF position.

Volume Control

Adjust the master volume knob on the speaker to achieve the desired output level. Always start with a low volume and gradually increase it to avoid sudden loud sounds or potential damage to your hearing or the speaker.

Remote Control

The speaker can be controlled via a remote control. Use the remote to adjust volume, input selection, and other available functions. Ensure the remote has working batteries and a clear line of sight to the speaker's IR receiver.

MAINTENANCE

Cleaning

Disconnect the speaker from the power source before cleaning. Use a soft, dry cloth to wipe the exterior surfaces. Do not use liquid cleaners, abrasive chemicals, or solvents, as these may damage the finish or internal components.

Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight, extreme temperatures, and excessive humidity. Protect it from dust and physical impact.

TROUBLESHOOTING

No Sound

- Ensure the speaker is powered on and the power indicator light is illuminated.
- Check all audio cable connections between the source and the speaker. Ensure they are securely plugged in.
- Verify that the volume is turned up on both the speaker and the audio source.
- Test with a different audio source or cable to rule out faulty equipment.

Distorted Sound

- Reduce the volume level on both the speaker and the audio source. Overdriving the input or output can cause distortion.
- Check if the audio source is sending a clean signal. Try a different source if possible.
- Ensure all cables are securely connected and not damaged.

Remote Control Not Working

- Check and replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the speaker's IR receiver.
- Point the remote directly at the speaker's IR receiver.

SPECIFICATIONS

Feature	Detail
Brand	FONESTAR
Model Number	FORCE-12DSP
Speaker Type	Woofer, Active Speaker
Special Features	Tweeters
Maximum Speaker Output Power	25 Watts
Mounting Type	Floor Mount
Control Method	Remote
Recommended Uses	For smartphone or tablet
Color	Multicolor
Package Dimensions	44.5 x 29 x 26 cm; 12 kilograms

