

[Manuals.plus](#) /

› [Sensor Brite](#) /

› Sensor Brite Puck Lights (2 Pack) Instruction Manual

Sensor Brite 850014381158

Sensor Brite Puck Lights (2 Pack) Instruction Manual

Model: 850014381158

INTRODUCTION

The Sensor Brite Puck Lights are battery-operated LED lights designed for versatile illumination without the need for tools or complex wiring. These lights offer both motion-activated and manual on/off operation, providing convenient lighting wherever you need it. This manual provides instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your puck lights.



Image: Front view of a single Sensor Brite Puck Light, showing the central motion sensor and LED light array.

SETUP

1. Battery Installation

1. Gently twist the back cover of the puck light counter-clockwise to open the battery compartment.
2. Insert the required batteries (typically 3x AAA, please check the compartment for specific battery type and polarity markings) into the designated slots, ensuring correct positive (+) and negative (-) orientation.
3. Replace the back cover by aligning it and twisting clockwise until securely closed.

2. Mounting

The Sensor Brite Puck Lights are designed for easy, tool-free installation using adhesive backing.

1. Clean the desired mounting surface thoroughly to ensure it is dry and free of dust or grease.
2. Peel off the protective film from the adhesive pad on the back of the puck light.
3. Press the light firmly onto the cleaned surface for at least 30 seconds to ensure a strong bond.



Image: A Sensor Brite Puck Light mounted under a kitchen cabinet, illuminating a fruit bowl on the counter.

OPERATING INSTRUCTIONS

Your Sensor Brite Puck Lights offer multiple operating modes for various lighting needs. Control is typically managed via a switch on the unit or an included remote control.

Mode Selection

- **OFF:** The light is completely off.
- **ON (Manual):** The light remains continuously on until manually switched off.
- **AUTO (Motion Sensor):** In this mode, the light will automatically turn on when motion is detected within its range and sufficient darkness, and will turn off after a period of no motion.

Using the Remote Control

If your model includes a remote control, use it to conveniently switch between modes, adjust brightness (if applicable), or set timers without directly accessing the puck light. Point the remote towards the light and press the desired function button.



Image: A Sensor Brite Puck Light mounted inside a pantry, providing illumination for items on a shelf.

MAINTENANCE

Battery Replacement

When the light dims or stops functioning, it's time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always replace all batteries at once with new ones of the same type and brand for optimal performance.

Cleaning

To clean the puck light, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish or electronic components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Light does not turn on.	• Batteries are dead or incorrectly installed. • Light is in OFF mode. • Insufficient darkness for AUTO mode.	• Replace batteries, ensuring correct polarity. • Switch to ON or AUTO mode. • Test in a darker environment or switch to ON mode.
Motion sensor not working in AUTO mode.	• Light is not in AUTO mode. • Sensor is obstructed or dirty. • Ambient light is too bright. • Motion is outside sensor range.	• Ensure the light is set to AUTO mode. • Clean the sensor lens and ensure no obstructions. • Test in a darker area. • Adjust placement or approach within sensor range.
Light is dim.	• Batteries are low.	• Replace batteries.

SPECIFICATIONS

- **Model Number:** 850014381158
- **Light Source Type:** LED
- **Power Source:** Battery Powered (1.5 Volts)
- **Number of Items:** 2
- **Finish Type:** Matte
- **Base Material:** Plastic
- **Shade Material:** Plastic
- **Control Method:** Remote Control
- **Additional Features:** Cordless, Motion Sensor, Remote Control
- **Water Resistance Level:** Water Resistant
- **Indoor/Outdoor Usage:** Indoor
- **Shape:** Round
- **Color:** White

SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the product is not to be used for an extended period.
- Dispose of used batteries properly according to local regulations.
- Keep out of reach of children.
- Do not expose to extreme temperatures or direct sunlight.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the packaging or contact Sensor Brite customer service directly. Keep your purchase receipt for warranty claims.

