

Chefman RJ38-SQPF-8TW (8 QT - Easy View Air Fryer)

Chefman TurboTouch Easy View Air Fryer Instruction Manual

MODEL: 8 QT - EASY VIEW AIR FRYER (RJ38-SQPF-8TW)

1. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed. Read all instructions thoroughly before operating this appliance to ensure safe and effective use. Keep this manual for future reference.

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances, to allow for proper air circulation.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Supervise children closely when the appliance is in use.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling parts.
- Do not use the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Avoid using metal utensils inside the nonstick basket to prevent scratching the coating.
- **Important:** Do not use aerosol cooking sprays, as they can damage the nonstick coating over time. Use pump-style oil sprayers or brush oil onto food directly.
- This product is cETL-approved with advanced safety technology for long-lasting durability.

2. PRODUCT COMPONENTS

The Chefman TurboTouch Easy View Air Fryer consists of the following main components:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Removable Basket:** The primary cooking chamber where food is placed. Features an easy-view window.
- **Crisper Tray:** Sits inside the removable basket, allowing air to circulate around food for even cooking and crisping.



Figure 2.1: Front view of the Chefman TurboTouch Easy View Air Fryer, showcasing the digital control panel and the transparent cooking window.



Figure 2.2: Angled view of the air fryer with the cooking basket partially pulled out, highlighting the 'Easy View Window' and the basket's design.



Figure 2.3: The air fryer in use, cooking chicken parmesan, demonstrating the visibility through the easy-view window during operation.



Figure 2.4: The air fryer cooking salmon fillets, illustrating its capacity and the even cooking process visible through the window.



Figure 2.5: The air fryer baking cookies, showing its versatility beyond just frying and the clear view of food as it bakes.

3. SETUP

Before first use, follow these steps:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wash the removable basket and crisper tray thoroughly with hot, soapy water. Rinse and dry completely.
3. Wipe the interior and exterior of the main unit with a clean, damp cloth.
4. Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 6 inches of space around the back and sides for proper air circulation.
5. Insert the crisper tray into the removable basket, then slide the basket back into the main unit until it clicks securely into place.

4. OPERATING INSTRUCTIONS

The Chefman TurboTouch Easy View Air Fryer features intuitive digital controls for effortless cooking.

4.1. Control Panel Overview

The touch control panel allows you to easily select presets, adjust time and temperature, and start/stop cooking.

- **Power Button:** Turns the unit on/off and starts/pauses cooking.
- **Temperature Control:** Adjusts cooking temperature from 100°F to 400°F.
- **Time Control:** Adjusts cooking time.
- **Preset Functions:** Dedicated buttons for common foods like Fries, Chicken, Meat, and Fish, which automatically set optimal time and temperature.
- **Shake Reminder:** An LED reminder will illuminate to prompt you to shake or flip food for even cooking.

4.2. Cooking Process

1. Plug the air fryer into a grounded electrical outlet. The display will illuminate.
2. Pull out the removable basket and place food evenly on the crisper tray. Do not overfill the basket to ensure proper air circulation.
3. Slide the basket back into the main unit.
4. Select a preset function or manually set your desired temperature (200°F to 400°F) and time using the touch controls.
5. Press the Power button to begin cooking.
6. During cooking, the shake reminder will activate at the halfway point for certain presets. Pull out the basket, shake or flip the food, and reinsert the basket to resume cooking.
7. Once the timer reaches zero, the air fryer will beep and automatically shut off. Carefully remove the basket and transfer cooked food to a serving dish.

5. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your air fryer.

- Always unplug the appliance and allow it to cool completely before cleaning.
- The removable basket and crisper tray are dishwasher-safe for convenient cleaning. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge.
- Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Clean the interior of the air fryer with a damp cloth and mild soap if necessary.
- Ensure all parts are completely dry before storing or next use.
- Periodically check the rubber stoppers on the crisper tray for wear and tear. While designed for durability, frequent use and cleaning may affect them over time.

6. TROUBLESHOOTING

If you encounter any issues with your Chefman TurboTouch Easy View Air Fryer, refer to the following common problems and solutions:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet.
- **Food not cooking evenly:** Ensure the basket is not overfilled. Shake or flip food halfway through cooking as prompted by the shake reminder.
- **White smoke coming from the appliance:** This may be caused by grease from previous use. Clean the basket and crisper tray thoroughly.
- **Appliance emitting a plastic smell:** This is normal during the first few uses as manufacturing residues burn off. It will dissipate with continued use. Ensure proper ventilation.

For more detailed troubleshooting or persistent issues, please refer to the complete User Guide PDF available for download or contact Chefman customer support.

7. SPECIFICATIONS



Feature	Specification
Brand	Chefman
Model Name	TurboTouch Easy View Air Fryer
Model Number	RJ38-SQPF-8TW
Capacity	8 Quarts
Wattage	1500 watts
Voltage	120 Volts
Temperature Range	100°F - 400°F
Control Method	Touch
Inner Material	Nonstick
Dishwasher Safe Parts	Basket, Crisper Tray
Product Dimensions	17"D x 15"W x 17"H






8. WARRANTY AND SUPPORT

Chefman provides a **1-year assurance** for this product, ensuring peace of mind with your purchase. For detailed warranty information, product registration, or customer support, please refer to the official Chefman website or the full User Guide PDF.

You can access the comprehensive User Guide PDF for your Chefman TurboTouch Easy View Air Fryer here: [Chefman TurboTouch Easy View Air Fryer User Guide \(PDF\)](#)

Related Documents - RJ38-SQPF-8TW (8 QT - Easy View Air Fryer)

 	<p>Chefman TurboFry Touch Easy-View Air Fryer User Guide Model RJ38-SQPF-8TW</p> <p>Comprehensive user guide for the Chefman TurboFry Touch Easy-View Air Fryer (RJ38-SQPF-8TW). Learn about safety, features, operating instructions, cooking tips, troubleshooting, and warranty.</p>
---	---

	<p>Chefman TurboFry Touch Easy-View Air Fryer User Guide</p> <p>Comprehensive user guide for the Chefman TurboFry Touch Easy-View Air Fryer (RJ38-SQPF-8TW), covering safety instructions, features, operating procedures, cooking charts, tips, troubleshooting, cleaning, and warranty information.</p>
	<p>Chefman TurboFry Touch Easy-View Air Fryer User Guide & Manual</p> <p>Comprehensive user guide for the Chefman TurboFry Touch Easy-View Air Fryer (RJ38-SQPF-8TW). Learn about safety instructions, features, operating procedures, cooking charts, tips, troubleshooting, cleaning, and warranty information.</p>
	<p>Chefman TurboFry Touch Easy-View Air Fryer Quick Start Guide</p> <p>Concise quick start guide for the Chefman TurboFry Touch Easy-View Air Fryer, covering features, operation, presets, cooking charts, and cleaning instructions.</p>
	<p>Chefman TurboFry Touch Easy-View Air Fryer User Guide</p> <p>Comprehensive user guide for the Chefman TurboFry Touch Easy-View Air Fryer (Model RJ38-SQPF-5TW-CA), covering safety instructions, features, operating procedures, cooking tips, troubleshooting, and warranty information.</p>
	<p>Chefman TurboFry Touch Easy-View Air Fryer User Guide</p> <p>Comprehensive user guide for the Chefman TurboFry Touch Easy-View Air Fryer (RJ38-SQPF-5TW), covering safety instructions, features, operating procedures, cooking tips, troubleshooting, and warranty information.</p>