# Manuals+

Q & A | Deep Search | Upload

## manuals.plus /

- > ZOOZ /
- > Zooz 800 Series Z-Wave Long Range Water Leak XS Sensor ZSE42 800LR for for Smart Flood Prevention. Hub Required (Sold Separately). Compatible with SmartThings, Hubitat, and Z-Box Hub.

# **ZOOZ ZSE42**

# Zooz 800 Series Z-Wave Long Range Water Leak XS Sensor

Model: ZSE42 800LR Brand: ZOOZ

# 1. Introduction and Overview

The Zooz 800 Series Z-Wave Long Range Water Leak XS Sensor (Model ZSE42 800LR) is a compact device designed to detect water leaks and help prevent potential water damage in your home or property. When water is detected, the sensor sends an alert to your compatible Z-Wave hub, allowing you to take immediate action.

This sensor features the new 800 series Z-Wave chip for extended range and improved battery life, and supports Z-Wave Long Range technology for ultra-stable communication with compatible hubs. Its extra-small design and IP66 rating make it ideal for discreet placement under appliances or in other areas prone to leaks.



Image: The Zooz Water Leak XS Sensor (white, rectangular) next to its black product box, which displays "water leak xs sensor ZSE42 800LR".

# 2. SAFETY INFORMATION

- This device is intended for **indoor use only**. Do not expose it to direct water spray or submersion.
- The sensor operates on a single CR2450 battery. Ensure correct polarity when inserting the battery.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Keep batteries out of reach of children. If swallowed, seek medical attention immediately.
- Operating Temperature: 32-104° F (0-40° C).

# 3. PRODUCT FEATURES

- Advanced Leak Detection: Provides instant alerts to your Z-Wave hub upon water detection.
- Extra Small Design: Compact dimensions (2.4" x 1.4" x 0.4") allow for discreet placement.
- New 800 Series Chip: Offers enhanced Z-Wave range and extended battery life.
- **Z-Wave Long Range Ready:** Supports ultra-stable direct communication with compatible Z-Wave Long Range hubs.
- **Durable Construction:** Features a fully sealed battery cover and IP66 rating for protection against dust and powerful water jets.
- Enhanced Security: Equipped with S2 security and SmartStart for fully encrypted communication and simplified inclusion.



Image: A white Zooz Water Leak XS Sensor resting on a wooden surface with a puddle of water next to it. Text overlays read "Get an alert. Prevent damage."

# 4. SETUP AND INSTALLATION

# 4.1. Battery Installation

The sensor comes with a CR2450 battery included. To install or replace the battery:

- 1. Locate the battery compartment cover on the back of the sensor.
- 2. Gently twist or slide the cover to open it (refer to the diagram on the back of the sensor for specific instructions).
- 3. Insert the CR2450 battery, ensuring the positive (+) side faces upwards.
- 4. Replace the battery compartment cover, ensuring it is fully sealed to maintain the IP66 rating.



Image: The Zooz Water Leak XS Sensor with its circular battery cover removed, revealing the slot for a CR2450 lithium battery. The battery itself is shown next to the sensor.

# 4.2. Z-Wave Inclusion (Pairing with your Hub)

This sensor requires a compatible Z-Wave hub (sold separately) to function. It is supported by open Z-Wave systems only. The sensor supports SmartStart for easy inclusion.

# Compatible Z-Wave Hubs include:

- Z-Box Hub (recommended for best performance)
- SmartThings
- Hubitat
- Home Assistant
- HomeSeer
- Ezlo hubs

**Incompatible Systems:** This device will **NOT** work with Wink or Z-Wave alarm panels such as Ring Alarm, ADT, Vivint, Alarm.com, Qolsys, or 2GIG.

# Inclusion Steps (General):

- 1. Put your Z-Wave hub into inclusion (pairing) mode. Refer to your hub's specific instructions for this step.
- 2. For SmartStart inclusion, scan the QR code on the back of the sensor using your hub's app (if supported).
- 3. Alternatively, if your hub does not support SmartStart, follow its manual inclusion process. This typically involves pressing a button on the sensor (e.g., the Z-Wave button on the back) a certain number of times.
- 4. Once successfully included, the sensor will appear in your hub's device list.



Image: The back of the Zooz Water Leak XS Sensor, displaying a QR code for SmartStart, the model number ZSE42 800LR, battery type, FCC ID, UPC, and Z-Wave Plus LR certification logos.

# 5. OPERATING INSTRUCTIONS

Once successfully paired with your Z-Wave hub, the Zooz Water Leak XS Sensor will continuously monitor for the presence of water. When water is detected by the sensor's contacts, it will immediately send a signal to your Z-Wave hub.

- Alerts: Your Z-Wave hub will receive the leak detection signal and can be configured to trigger various actions, such as sending notifications to your phone, sounding an alarm, or activating other smart devices.
- Automation: For advanced flood prevention, you can create automations within your Z-Wave hub to pair the sensor
  with devices like the Zooz Titan Water Valve Actuator (sold separately). This allows for automatic water shut-off
  when a leak is detected.
- **Placement:** Place the sensor in areas where water leaks are likely to occur, such as under sinks, near water heaters, washing machines, dishwashers, or in basements. Ensure the sensor's contacts are positioned to come into contact with water.

# 6. MAINTENANCE

- **Battery Replacement:** The sensor uses a CR2450 lithium battery. When the battery level is low, your Z-Wave hub should report a low battery status. Replace the battery promptly to ensure continuous operation. Refer to Section 4.1 for battery installation steps.
- Cleaning: Wipe the sensor with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Regular Testing:** Periodically test the sensor by placing its contacts in a small amount of water to ensure it is functioning correctly and sending alerts to your hub.

# 7. TROUBLESHOOTING

If you experience issues with your Zooz Water Leak XS Sensor, try the following troubleshooting steps:

# • Sensor not pairing with hub:

- Ensure your hub is in inclusion mode.
- Make sure the sensor is within range of your Z-Wave hub or a Z-Wave repeater.
- Check the battery level. Replace if low.
- Try excluding the sensor first (if it was previously paired) and then re-including it.
- Verify your hub is compatible (refer to Section 4.2).

## · No alerts when water is detected:

- Confirm the sensor is successfully paired and showing as "online" in your hub's interface.
- Check your hub's automation rules or notification settings to ensure they are correctly configured for the leak sensor.
- Ensure the sensor contacts are clean and making proper contact with water.

# • Short battery life:

- Ensure you are using a fresh, high-quality CR2450 lithium battery.
- Frequent water detection events can drain the battery faster.
- Ensure good Z-Wave signal strength; a weak signal can cause the sensor to work harder, consuming more power.

For further assistance, please contact Zooz support.

# 8. SPECIFICATIONS

Feature	Detail		
Model Number	ZSE42 800LR		
Z-Wave Chip	800 series		
Z-Wave Region	US / CA / MX		
Power Source	1 x CR2450 battery (included)		
Voltage	3 Volts (DC)		
Z-Wave Range	Up to 300 feet in open space (or up to 1300 feet with Z-Wave Long Range)		
Operating Temperature	32-104° F (0-40° C)		
Dimensions	2.4" x 1.4" x 0.4"		
Installation and Use	Indoor only		
IP Rating	IP66		
UPC	853478006421		
Manufacturer	Zooz		

# 9. WARRANTY AND SUPPORT

The Zooz Water Leak XS Sensor is covered by an extended **5-year limited warranty** once registered. Zooz also provides lifetime technical support 7 days a week.

For technical assistance, warranty claims, or any questions regarding your device, please visit the official Zooz support website:

www.support.getzooz.com

© 2024 ZOOZ. All rights reserved. Z-Wave is a registered trademark of Silicon Labs.

## Related Documents - ZSE42




# Zooz ZEN32 800LR Z-Wave Long Range Scene Controller Switch User Manual

Comprehensive user manual for the Zooz ZEN32 800LR Z-Wave Long Range Scene Controller Switch. Includes installation guides, specifications, features, programming, and troubleshooting for smart home automation.



# ZOOZ ZEN15 800LR Z-Wave Plus Long Range Power Switch User Manual

User manual for the ZOOZ ZEN15 800LR Z-Wave Plus Long Range Power Switch, detailing features, specifications, installation, advanced settings, troubleshooting, and warranty information for smart home automation.

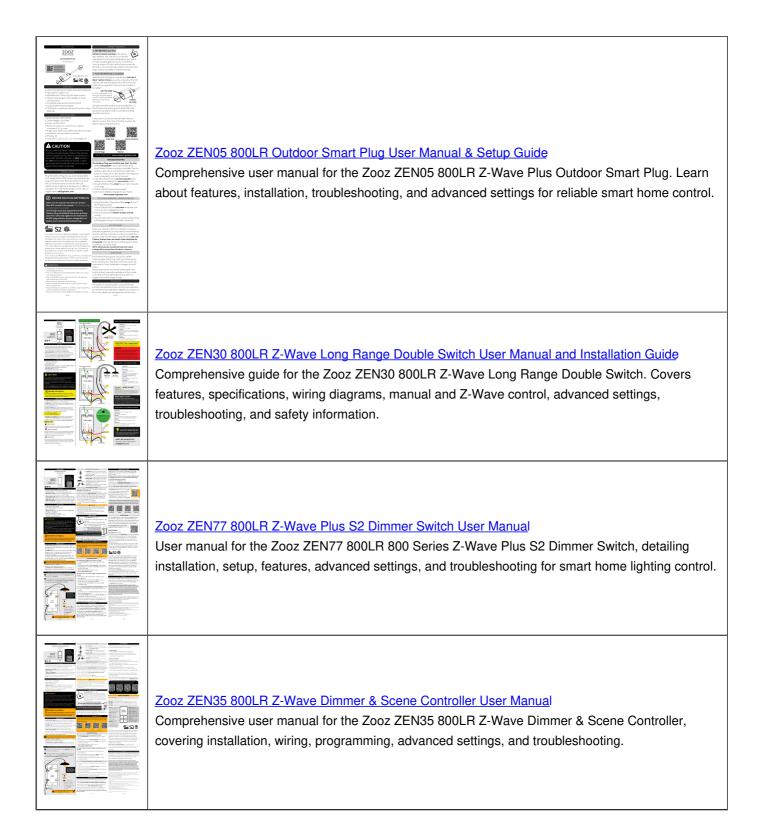

Documents - ZOOZ - ZSE42

zooz

WATER LEAK XS SENSOR



## FEATURES

## SPECIFICATIONS

### INSTALLATION

### 1. INSTALL THE BATTERY



# The LED indicator doesn't blink

- The LED indicator doesn't blind or light up at all?

  Make sure the hattery is inserted correct ly per the positive / regative pole mar.

  Try a fresh lithium non-recharges ble battery.

  Click the Z-Wawe<sup>®</sup> button 3 times as quickly as possible force inclusion (year, last).



Z-WAVE BUTTON 3 x CLICK



# 1. ADD DEVICE to your hub

## Initiate inclusion (pairing) in the

app (or web interments).
how? ask@getzooc.com
If you're using an S2 hub, it will ask
you to enter the DS KPIN or scan
the QR code printed on the inside
of the back cover of thesensor to
complete SmartStart inclusion.

# 2. ACTIVATE the sensor

While the hub is looking for new devices, click the Z-Wave\* button 3 times as quickly as possible. The LED indicator will start flashing to confirm inclusion mode and turn off once inclusion loce and turn off once inclusion.

# TIP!

It's best to add your sensor from the area where it will be installed so the hub can find the best route to reach it right away. PMSE1









TROUBLESHOOTING The sensor won't add to your

system? Try this: 1. Initiale EXCLUSION in your h

- the Z-Wave buttons as quickly as possible. the Z-Wave button quicke ladding it. thesensor closer to your it may be out of range. be-check if the device is
- powered. 6. Get troubleshooting tips specific to your hub at www.support.getzooz.com

### EXCLUSION (REMOVE DEVICE)

Bring the sensor within direct range of your Z-Wave\* hub. Put the Z-Wave\* hub into exclusion mode (not sure how to do that? ask@getzooz.com). Click the Z-Wave\* button 3

### FACTORY RESET

inoperable, you may need to reset the device to factory settings manually. In order to complete the process, make sure the sensor is powered, then click the Z-Wave\* button twice and hold it the third time for 10 seconds. The LED indicator will blink continuously. Immediately after, click the Z-Wave button twice more to finalize the reset. The LED indicator will flash 3 times to

## WAKE-UP MODE

indicator will flash once to confirm the device is awake. During wake-up, the sensor turns the Z-Wave®

## ASSOCIATION

[pdf] User Manual Instructions Specifications Dimension Guide

zooz zse42 800lr manual cdr A Lo Zooz ZSE42 800LR Manufacturer Manual products z wavealliance org ProductManual File folder filename cert portal certs 880 |||

USER MANUAL WATER LEAK XS SENSOR ZSE42 800LR SmartStart enabled products can be added into a Z-Wave network by scanning the Z-Wave QR Code present on the product with a controller providing SmartStart inclusion. No further action is required and the SmartStart product will be added automatically wi... lang:en score:49 filesize: 301.65 K page count: 2 document date: 2024-02-02

zooZ

WATER LEAK XS SENSOR



### FEATURES

- NEW 700 series chip for faster communication and more

- communication and more battery life than ever Extra small to fit arrywhere Powered by a long-lasting single coin battery The latest 52 security and SmartStart for secure set-up Supports OTA firmware updates

### SPECIFICATIONS

- Model Number: ZSE42
   Power: 1 x CR2032 batter Operating Temperature: 32° 104° F
- exposed to direct rainfall or sun,

### INSTALLATION

### 1. POWER THE SENSOR

Use a small flat screwdriver to gently open the sensor's cover and access the battery. Pull the tab from under the battery to activate the sensor. Don't close the cover just yet.
The LED indicator will start blinking for around 10 seconds once the sensor is powered.

- The LED indicator doesn't blink or light up at all?

   Make sure the bat tery is inserted correctly per the posts key in regative po ie marks. I'ry a fresh if him mon-rechargeable hattery.

   Click the Z'Awake button 3 times as quickly as possible to force inclusion rijecc. Assion mode in case you missed when it fills flashed. when it first flashed.

### LED INDICATOR



## 1. ADD DEVICE to your hub

Initiate inclusion (pairing) in the now: ask@get.zo.c.com If you're using an S2 hub, it will as you to enter the DSK PIN or scan the QR code printed on the inside of the back cover of thesensor to complete SmartStart inclusion.

## 2. ACTIVATE the sensor

## TIP!

It's best to add your sensor from the area where it will be installed so the hub can find the best route to reach it right away.













TROUBLESHOOTING

# The sensor won't add to your

system? Try this: 1. Initiale EXCLUSION in your hub

adding it. the sensor **closer** to you t may be out of range. e-check if the device is

powered. . Get troubleshooting tips specific

# to your hub at www.support.getzooz.com

EXCLUSION (REMOVE DEVICE) I. Bring the sensor within direct range of your Z-Wave hub.
2. Put the Z-Wave hub into exclusion mode (not sure how to do that? ask@getzou.com).
3. Click the Z-Wave button 3 times

### FACTORY RESET

the device to factory settings manually. In order to complete the Indicator will blink continuously.

Immediately after, click the ZWave button twice more to
finalize the reset. The LED
indicator will flash 3 times to

### WAKE-UP MODE

The semon's wake-up interval is set to 12 hours by defaul it to save battery lie. Lies the Wake-up in terval is set to 12 hours by defaul it to save battery lie. Lies the Wake-up Command Class to adjust the interval (Click the Z-Wave button 4 times quickly to wake the sensor up manually. The LED indicatories wavele, burning wake-up, the savake, burning wake-up the savake, burning wake-up the savake, burning maintain or a do not or one savake, burning wake-up the savake.

# ASSOCIATION

ASSOCIATION

The XS Sensor supports Group 1 for Lifelines to menunication and Group 2 without not Selvizes for basic on/officientro. IT his device will send a Basic Set command to Group 2 whenever it delects water. The value of the basic set command sent to 6 roup 2 acm be adjusted in the advanced settings to custo mize the sensor is behavior. ote that not all Z-Wave

[pdf] User Manual Instructions Troubleshooting Guide Specifications Dimension Guide 22 8 18 zse42 manual cdr A Lo Zooz ZSE42 Water Leak XS Sensor user ZOOZ sensor czujnik zalania dla inteligentnego domu Z wave SmartThings Polska zooz 700 series z plus water leak xs smartthingspolska files wordpress 2023 05 |||

USER MANUAL WATER LEAK XS SENSOR ZSE42 NEED SOME HELP ask getzooz.com Choose your hub and scan the QR code with your phone s camera. Then click on the link to access the step-by-step pairing instructions. www.getzooz.com S2 Firmware 1.40 SmartThings Hubitat FEATURES Y Quick and reliable water...

lang:en score:43 filesize: 636.54 K page count: 2 document date: 2022-08-18



WATER LEAK XS SENSOR



# FEATURES

# SPECIFICATIONS

- Model Number: ZSE42 800LR
  Rower: 1 x CR2450 battery
  Operating Temperature: 32° 104°F
  Range: Up to 130 feet line of sight lup to 1300 ft with Long Range)
  Installation and Use Indoor or outdoor under we (can't be exposed to direct sain fall or sun, a little splash

### INSTALLATION

### 1. INSTALL THE BATTERY

round too! by

## The LED indicator doesn't blink



Z-WAVE BUTTON 3 x CLICK



# Z-WAVE CONTROL

### 1. ADD DEVICE to your hub Initiate inclusion (pairing) in the

app (or web inter ace). Not sore how? ask@getzoox.com if you're using an S2 hub, it will ask you to enter the DSR PIN or scan the QR code printed on the inside of the back cover of thesensor to complete SmartStart inclusion.

# 2. ACTIVATE the sensor

While the hub is looking for new devices, **click the Z-Wave button** 

## TIP!

It's best to add your sensor from the area where it will be installed so the hub can find the best route to reach it right away.











### TROUBLESHOOTING

## The sensor won't add to your

- system? Try this: 1. Initiale EXCLUSION in your hub
- and cick the 2-wave button 3 times as quickly as possible. 2. Click the Z-Wave button **quicker** when adding it. 3. Bring, the sensor **closer** to your hub, it may be out of range. 4. Double-check if the device is
- powered. 5. Get troubleshooting tips specific
- to your hub at www.support.getzooz.com

### EXCLUSION (REMOVE DEVICE)

1. Bring the sensor within direct range of your Z-Wave hub.
2. Put the Z-Wave hub into exclusion mode (not sure how to do that? ask@getzooz.com).
3. Click the Z-Wave button 3 times

## FACTORY RESET

the device to factory settings manually. In order to complete the Immediately after, click the Z-Wave button twice more to finalize the reset. The LED indicator will flash 3 times to

## WAKE-UP MODE

The sempor's wake-up internal is set to 12 hours by defaul it to save battery life. Due to by defaul it to save battery life. Due the that wake up internal class to adjust the internal class to adjust the internal class to adjust the sensor up manually. The LED indicators or pmanually. The LED indicators is awake. During wake-up, the sensor turns the Z-Wave radio on for one internal class is awake. During wake-up, the sensor turns the Z-Wave radio on for one internal class is awake.

## ASSOCIATION

ASSOCIATION
The XS Sensor supports Group 1 for Lifeline communication and Group 2 with up to 5 devices for basic on/off control. This device will send a Basic Set command to Group 2 whenever it detects water. The value of the basic set command sent to 6 roup 2 can be adjusted in the advanced settings to customize Please note that not all Z-Wave systems give users access to direct

[pdf] User Manual Instructions Troubleshooting Guide Specifications Dimension Guide 25 4 8 zse42 800lr manual cdr A Lo zooz 800 series z wave long range water leak xs sensor getzooz ||| USER MANUAL zooz smart move WATER LEAK XS SENSOR ZSE42 800LR NEED SOME HELP ask getzooz.com Choose your hub and scan the QR code with your phone s camera. Then click on the link to access the step-by-step pairing instructions. www.getzooz.com S2 Z-Box Hub Hubitat FEATURES Y Quick and reliable... lang:en score:43 filesize: 310.58 K page\_count: 2 document date: 2025-04-08

**zo**0Z

WATER LEAK XS SENSOR



### FEATURES

- Quic k and reliablewater leak alerts sent to your Z-Wave hub
  NDW 700 series chip for faster communication and more battery life than ever
  Extra small to fit anywhere
  Powered by a long-lasting single coin battery
- coin battery
  The latest S2 security and
- SmartStart for secure set-up

# SPECIFICATIONS

- Model Number: ZSE42
  Power: 1 x CR2032 battery
  Operating Temperature: 32° 104° F
  Dimensions: 1.9° x 1° x 0.3°
  Range: Up to 130 feet line of:

littlesplash is OK)

Installation and Use: Indoor or outdoor under eve (can't be exposed to direct rainfall or sun,

## INSTALLATION

# 1. POWER THE SENSOR

Pull the tab from under the battery to activate the sensor. Don't close the cover just yet.
The LED indicator will start blinking for around 10 seconds once the sensor is powered.

# The LED indicator doesn't blink

- The LED Indicator doesn't blink or tight up at all?

   Make sure the battery is inserted correctly per the positive / negative pole marks.

   It ya Iresh lith um non-nechangsabe battery.

   Click the ZWave button 3 times as quickly as possible to force inclusion yiew. Lission mode in case you missed when it first Blashed.

### LED INDICATOR



# Z-WAVE CONTROL

# 1. ADD DEVICE to your hub

Initiate inclusion (pairing) in the app (or web interface). Not sure how? ask@getzouz.com if you're using an S2 hub, it will ask you to enter the DSK PIN or scan the QR code printed on the back cover sticker of the sensor to complete SmartStart inclusion.

# 2. ACTIVATE the sensor

## TIP!

It's best to add your sensor from the area where it will be installed so the hub can find the best route to reach it right away.











### TROUBLESHOOTING

### The sensor won't add to your system? Try this: 1. Initiate EXCLUSION in your hub

- 1. Initiate EXCLUSION in your hub and click the Z-Wave button 3 times as quickly as possible.
  2. Click the Z-Wave button quicker when adding it.
  3. Bring thesensor closer to your hub, it may be out of range.
  4. Double-check if the device is
- powered.

  5. Get troubleshooting tips specific to your hub at www.support.getzooz.com

## EXCLUSION (REMOVE DEVICE)

- I. Bring the sensor within direct range of your Z-Wave hub.
  I. Put the Z-Wave hub into exclusion mode (not sure how to do that? ask@getzoaz.com).
  I. Click the Z-Wave button 3 times

## FACTORY RESET

PREJOY RESET
When you networks primary
controller is missing or otherwise
no perable, you may need to reset
the device to factory settings
manually. In order to comp lefe the
process, make sure the sensor is
powered, then click the Z-Wawe
button twice and hold it the third
time for 10 seconds. The LED
indicator will blink continuously. Immediately after, click the Z-Wave button twice more to finalize the reset. The LED indicator will flash 3 times to

## WAKE-UP MODE

interval Click the Z-Wave button 4 times quickly to wake the sensor up manually. The LED indicator will flash twice to confirm the device is awake. During wake-up, the sensor turns the Z-Wave rad to on for one pipe to be preserved on the confirmation to

## ASSOCIATION

ASSOCIATION

The XS Sersor supports Group 1 for Ufeline communication and Group 2 with up to 5 devices for basic ort/off control. This device will send a Basic Set command to Group 2 whenever it detects water. The value of the basic set command sent to 6 roup 2 can be adjusted in the advanced settlines for crist mixe. we advanced settings to custo mize the sensor's behavior. Please note that not all Z-Wave systems give users access to direct association settings so if you're note sure where to find it, please get in fouch with our support and we'll be happy to help.

# Zooz ZSE42 Water Leak XS Sensor User Manual and Guide

Comprehensive user manual for the Zooz ZSE42 Water Leak XS Sensor, detailing features, specifications, installation, troubleshooting, advanced settings, and placement for Z-Wave smart home integration.

lang:en score:43 filesize: 620.73 K page\_count: 2 document date: 2021-08-04

## USER MANUAL

zooz

WATER LEAK XS SENSOR



## FEATURES

- battery life than ever Extra small to fit anywhere
- Extra small to fit anywhere
   Z-Wave Long Range for ultra reliable no-mesh communication
   The latest S2 security and SmartStart for secure set-up
   Supports OTA firmware updates

### SPECIFICATIONS

- Model Number: ZSE42 800LR
   Power: 1 x CR2450 battery
- Operating Temperature: 32° –
- Range: Up to 130 feet line of sight
- Range: Up to 130 feet line of sig (up to 1300 ft with Long Range)
  Installation and Use: Indoor or outdoor under eve (can't be exposed to direct rainfall or sun littlesplash is OK)
  Dimensions: 2.4" x 1.4" x 0.4"

# INSTALLATION

# POWER THE SENSOR Use the included round tool to Use the included round do it to gently twist the battery cover to the left and and access the battery. Pull the tab from under the battery to activate the sensor. Close the cover with the same round too! by twisting it gently to the right.

The LED indicator on the front of the sensor (top right corner) will start blinking for around 10 seconds once the sensor is

- powered.

  The LED indicator doesn't blink or light up at all?

  Nake sure the battery is inserted corned y per the positive / negative pole marks.

  Ty a feesh lith um non-vechargeable battery.

  Click the Z-Wave button 3 times as quickly as possible to force inclusion/exc. Lislon mode in case you missed when it list liashed.





## 1. ADD DEVICE to your hub

Initiate inclusion (pairing) in the app (or web interface). Not sure how? ask@getaoox.com if you're using an S2 hub, it will ask you to enter the DS K PIN or scan the QR code printed on the inside of the back cover of thesensor to complete SmartStart inclusion.

# 2. ACTIVATE the sensor

## TIP!

It's best to add your sensor from the area where it will be installed so the hub can find the best route to reach it right away.











### TROUBLESHOOTING The sensor won't add to your

- system? Try this:
  1. Initiate EXCLUSION in your hub Initiale EXCLUSION in your hub and click the Z-Wave button 3 times as quickly as possible.
   Click the Z-Wave button quicker when adding it.
   J. Bring the sensor closer to your hub, it may be out of range.
   A. Double-check if the device is
- powered. 5. Get troubleshooting tips specific
- to your hub at www.support.getzooz.com

### EXCLUSION (REMOVE DEVICE)

- Bring thesensor within direct range of your Z-Wave hub.
   Put the Z-Wave hub into exclusion mode (not sure how to do that? ask@getzocz.com).
   Click the Z-Wave button 3 times

### FACTORY RESET

imperable, you may need to reset the device to factory set fitigs manually. In order to complete the process, make sure the sensor is powered, then click the Z-Wave button twice and hold it the third time for 10 seconds. The LED indicator will blink continuously. Immediately after, click the Z-Wave button twice more to finalize the reset. The LED indicator will flash 3 times to

### WAKE-UP MODE

interval Click the Z-Wave button 4 times quickly to wake the sensor up manually. The LED indicator will flash once to confirm the device is awake. During wake-up, the sensor turns the Z-Wave add to on for one pipe the prepayancements after

## ASSOCIATION

ASSOCIATION
The XS Sersor supports Group 1 for Utileline communication and Group 2 with up to 5 devices for basic on/off-control. This device will send a Basic Set command to Group 2 whenever it detects water. The value of the basic set command centrol for on I can be additional. sent to 6 roup 2 can be adjusted in the advanced settings to custo mize or's behavior. ote that not all Z-Wave give users access to di on settings so if you're

[pdf] User Manual Instructions Specifications Dimension Guide

23 9 22 zse42 800lr manual cdr A Lo Labor Day Sale The Smartest House zooz 800 series z wave long range water leak xs sensor cdn shopify s files 1 0218 7704 quot |||

USER MANUAL WATER LEAK XS SENSOR ZSE42 800LR NEED SOME HELP ask getzooz.com Choose your hub and scan the QR code with your phone s camera. Then click on the link to access the step-by-step pairing instructions.

www.getzooz.com S2 Z-Box Hub Hubitat FEATURES Y Quick and reliable water leak aler...

lang:en score:39 filesize: 296.57 K page count: 2 document date: 2023-09-22



zooZ

WATER LEAK XS SENSOR



### FEATURES

- NEW 700 series chip for faster communication and more
- battery life than ever

   Extra small to fit arrywhere

   Powered by a long-lasting single
- coin battery

   The latest S2 security and

  S martStart for secure set-up

   Supports OTA firmware updates

### SPECIFICATIONS

- Model Number: ZSE42
   Power: 1 x CR2032 batter Operating Temperature: 32° –
  104° F
- exposed to direct rainfall or sun,

### INSTALLATION

### 1. POWER THE SENSOR

Use a small flat screwdriver to gent ly open the sensor's cover and access the battery. Pull the tab from under the battery to activate the sensor. Don't close the cover just yet. The LED indicator will start blinking

- The LED indicator doesn't blink or light up at all?

   Make sure the bat tery is inserted correctly per the posts key riegative pole marks. I'ry a fresh if him mon-rechargeable hattery. Click the Z-Vawke button 3 times as quickly as possible to force inclusion pieck hasion mode in case you missed when it filest Blashed.

# when it first flashed.



## 1. ADD DEVICE to your hub

Initiate inclusion (pairing) in the how/ ask@getzocz.com

If you're using an S2 hub, it will as
you to enter the DSK PIN or scan
the QR code printed on the inside
of the back cover of thesensor to
complete SmartStart inclusion.

## 2. ACTIVATE the sensor

## TIP!

It's best to add your sensor from the area where it will be installed so the hub can find the best route to reach it right away.











# TROUBLESHOOTING

# The sensor won't add to your

system? Try this: 1. Initiale EXCLUSION in your hub

adding it. the sensor **closer** to you t may be out of range. e-check if the device is

powered. i. Get troubleshooting tips specific

to your hub at www.support.getzooz.com

# EXCLUSION (REMOVE DEVICE)

I. Bring the sensor within direct range of your Z-Wave hub.
2. Put the Z-Wave hub into exclusion mode (not sure how to do that? ask@getzou.com).
3. Click the Z-Wave button 3 times

and the sensor will disappear from your controller's device list

### FACTORY RESET

the device to factory settings manually. In order to complete the Indicator will blink continuously.

Immediately after, click the ZWave button twice more to
finalize the reset. The LED
indicator will flash 3 times to

### WAKE-UP MODE

The serpor's wake-up interval is set to 12 hours by defaul it to save battery lie. Use the Wake Up Command Class to adjust the interval Click the Z-Wave button 4 times quickly to wake the sensor up manually. The LED indicator will lash twice to confirm the device awake. During wake-up, the sensor turns the Z-Wave and on pin confirms.

# ASSOCIATION

ASSOCIATION
THE XS Sensor supports Group 1 for Useline communication and Group 2 without post Selvices for basic on/off control. This device will send a Basic-Sel command to Group 2 wherever it delects water. The value of the basic set command sent to 6 roup 2 can be adjusted in the advanced settings to customize the sensor's behavior. ote that not all Z-Wave

[pdf] User Manual Instructions Troubleshooting Guide Specifications Dimension Guide 21 11 30 zse42 manual cdr A Lo WATER LEAK XS SENSOR ZSE42 FEATURES SPECIFICATIONS USER MANUAL INSTALLATION LED INDICATOR Z WAVE BUTTON CONTROL 3 x CLICK getzooz ŸQuick and reliable water leak alerts sent to your Wave hub ŸNEW 700 series chip for faster communication more battery life than ever ŸExtra small fit anywhere ŸPowered by a long lasting single coin ŸThe latest S2 security SmartStart secure set up zooz z wave plus xs sensor ||| USER MANUAL WATER LEAK XS SENSOR ZSE42 NEED SOME HELP ask getzooz.com Choose your hub and scan the QR code with your phone s camera. Then click on the link to access the step-by-step pairing instructions. www.getzooz.com S2 Firmware 1.30 SmartThings Hubitat FEATURES Y Quick and reliable water...

lang:en score:37 filesize: 620.48 K page count: 2 document date: 2022-03-04



zooZ

WATER LEAK XS SENSOR



## FEATURES

- NEW 800 series chip for faster communication and more battery life than ever

- battery life than ever
  Extra small to fit anywhere
  Z-Wave Long Range for ultra
  reliable no-mesh communication
  The latest \$2 security and
  SmartStart for secure set-up
  Supports OTA firmware updates

### SPECIFICATIONS

- Model Number: ZSE42
   Power: 1 x cm2430 battery
- Power Lx cases battery
   Operating Temperature: 32° 104° F
   Range: Up to 130 feet line of sight Installation and Use: Indoor or outdoor undereve (carl' the exposed to direct rainfall or sun, a littlesplash is OK)

### INSTALLATION

### 1. POWER THE SENSOR

Use a small flat screwdriver to gent ly open the sensor's cover and access the battery. Pull the tab from under the battery to activate the sensor. Don't close the cover just yet. The LED indicator will start blinking for around 10 seconds once the sensor is powered.

- The LED indicator doesn't blink or light up at all?

   Make sure the battery is inserted correctly per the postits \( e \) in ye doesn't be marked. Fig. at the postits \( e \) in gestile we pole marked. Fig. at the sink in monrechangeable battery.

   Click the Z-Vawae button 3 times as quickly as possible to force inclusion yield. Easilon mode in case you missed when it first Blashed. when it first flashed.



# 1. ADD DEVICE to your hub

## Initiate inclusion (pairing) in the

how? ask@getzocz.com If you're using an S2 hub, it will as you to enter the DS K PIN or scan the QR code printed on the inside of the back cover of thesensor to complete SmartStart inclusion.

## 2. ACTIVATE the sensor

## TIP!

It's best to add your sensor from the area where it will be installed so the hub can find the best route to reach it right away.











## TROUBLESHOOTING

## The sensor won't add to your

The sensor won't add to your system? Try this:

1. Initiate EXCLUSION in your hub and click the Z-Wave button 3 times as quickly as possible.

2. Click the Z-Wave button quicker when adding it.

adding it. the sensor **closer** to you t may be out of range. e-check if the device is

powered. 5. Get troubleshooting tips specific to your hub at www.support.getzooz.com

# EXCLUSION (REMOVE DEVICE)

Bring the sensor within direct range of your Z-Wave hub.
 Put the Z-Wave hub into exclusion mode (not sure how to do that? ask@getzocz.com).
 Click the Z-Wave button 3 times.

## FACTORY RESET

the device to factory settings manually. In order to complete the manually, in order to complete the process, make sure the sensor is powered, then click the Z-Wave button twice and hold it the third time for 10 seconds. The LED indicator will blink continuously. Immediately after, click the Z-Wave button twice more to finalize the reset. The LED indicator will flash 3 times to confirm as uccessful reset.

### WAKE-UP MODE

The semon's wake-up internal is set to 12 hours by defaul it to save battery lie. Use the Wake-Up internal is set to 12 hours by defaul it to save battery lie. Use the Wake-Up Command Class to adjust the internal Clark the Z-Wave button 4 times quickly to wake the sensor up manually. The LED indication is awake, During wake-up, the savake, During wake-up the similar lie in Zewele communication in a from the Z-Wave and in on for one manually under the Z-Wave and in our darking in the device communication in a from the z-Wave communication in a finite for the z-week communication in a finite for the z-week communication.

## ASSOCIATION


ASSOCIATION

The XS Sersor supports Group 1 for Uteline communication and Group 2 with tup 10.5 devices for basic on/off control. This device will send a Basic Set command to Group 2 whenever it detects water. The value of the basic set command sent to 6 roup 2 can be adjusted in the advanced settings to custod the teach and settings for custod the sensor's behavior. ote that not all Z-Wave

[pdf] User Manual Instructions Troubleshooting Guide Specifications 23 7 18 zse42 800lr manual cdr A Lo User Lorenz High Definition LLC ZSE42 Water Leak XS Sensor 2AZ2V 2AZ2VZSE42

USER MANUAL WATER LEAK XS SENSOR ZSE42 NEED SOME HELP ask getzooz.com Choose your hub and scan the QR code with your phone s camera. Then click on the link to access the step-by-step pairing instructions. www.getzooz.com S2 SmartThings Hubitat FEATURES Y Quick and reliable water leak alerts s...

lang:en score:37 filesize: 443.33 K page\_count: 2 document date: 2023-08-30

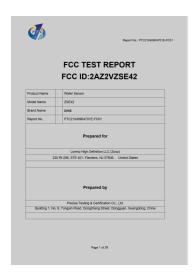

# [pdf] Test Report

Administrator Test reports Lorenz High Definition LLC ZSE42 Water Sensor 2AZ2VZSE42 zse42 Report No.: PTC21040904701E-FC01 FCC TEST REPORT FCC ID:2AZ2V**ZSE42** Product Name Model Name Brand Name Report No.: Water Sensor: **ZSE42**: ZOOZ: PTC21040904701E-FC01 Prepared for Lorenz High Definition LLC Zooz 230 Rt 206, STE 401, Flanders, NJ 07836 United States Prepared by Precise Testing ... lang:en score:30 filesize: 2.01 M page\_count: 28 document date: 2021-06-09



## [pdf]

Water Sensor products z wavealliance org Z Wave Protocol Implementation Conformance Statement General Information Product Identifier ZSE42 Brand Name Zooz Version HW 1 FW 00 ZC12 21080294 4280 pics |||

Z-Wave Protocol Implementation Conformance Statement Water Sensor General Information Product Identifier: Brand Name: Product Version: Z-Wave Certification #: **ZSE42** Zooz HW: 1 FW: 1.00 ZC12-21080294 Product Features Battery Quantity Battery Type Color Firmware Updatable 1 CR2032 Blue Updatable...


lang:en score:30 filesize: 37.84 K page\_count: 2 document date: 2022-01-25



## [pdf]

Adria Galin Pons Letter Authorization Lorenz High Definition LLC ZSE42 Water Sensor 2AZ2VZSE42 zse42

C5266091\_X8\_Ed.1 Letter of Authorization Lorenz High Definition LLC Zooz Company: Lorenz High Definition LLC Zooz Address: 230 Rt 206, STE 401, Flanders, NJ 07836 United States Product Name: Water Sensor Model Number: **ZSE42** FCC Identifier: 2AZ2V**ZSE42** We authorize LGAI Technological Center S.A., ... lang:en score:30 filesize: 72.48 K page count: 1 document date: 2021-06-09

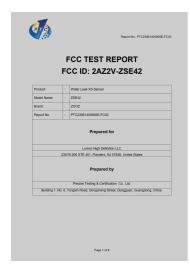

# [pdf] Test Report SAR Rating

Administrator RF Exposure Lorenz High Definition LLC ZSE42 Water Leak XS Sensor 2AZ2V 2AZ2VZSE42 zse42

Report No.: PTC23061400606E-FC03 FCC TEST REPORT FCC ID: 2AZ2V-**ZSE42**Product Model Name Brand Report No.: Water Leak XS Sensor: **ZSE42**: ZOOZ:
PTC23061400606E-FC03 Prepared for Lorenz High Definition LLC 230 Rt 206 STE 401, Flanders, NJ 07836, United States Prepared by Precise Testing Certi...
lang:en score:30 filesize: 236.2 K page\_count: 8 document date: 2023-08-30



# [pdf] Test Report

Administrator Test reports Lorenz High Definition LLC ZSE42 Water Leak XS Sensor 2AZ2V 2AZ2VZSE42 zse42

Report No.: PTC23061400606E-FC01 FCC TEST REPORT FCC ID: 2AZ2V-**ZSE42**Product Name Model Name Brand Name Report No.: Water Leak XS Sensor: **ZSE42**: ZOOZ: PTC23061400606E-FC01 Prepared for Lorenz High Definition LLC
230 Rt 206 STE 401, Flanders, NJ 07836, United States Prepared by Precise Test...
lang:en score:26 filesize: 3.2 M page\_count: 37 document date: 2023-08-30





# [pdf] Test Report

CLOUD PU Test reports Lorenz High Definition LLC ZSE42 Water Leak XS Sensor 2AZ2V 2AZ2VZSE42 zse42

Product Model Name Brand Report No. FCC TEST REPORT FCC ID: 2AZ2V-**ZSE42**: Water Leak XS Sensor: **ZSE42**: ZOOZ: PTC23061400606E-FC02 Prepared for Lorenz High Definition LLC 230 Rt 206 STE 401, Flanders, NJ 07836, United States Prepared by Precise Testing Certification Co., Ltd Building 1, No. 6...

lang:en score:26 filesize: 4.36 M page\_count: 46 document date: 2023-08-30



## [pdf]

ZC14 24060431 products z wavealliance org 5073 pics |||

Z-Wave Protocol Implementation Conformance Statement Water Leak XS Sensor General Information Product Identifier: Brand Name: Product Version: Z-Wave Certification #: **ZSE42** 800LR Zooz HW: 02 FW: 02.00 ZC14-24060431 Product Features Battery Quantity Battery Type Firmware Updatable 1 CR2032 Upda... lang:en score:19 filesize: 74.27 K page\_count: 2 document date: 2025-05-16



# [pdf] Confidentiality Request Letter

Adria Galin Pons Confidentiality Lorenz High Definition LLC ZSE42 Water Sensor 2AZ2VZSE42 zse42 C5266091\_X10\_Ed.2 Lorenz High Definition LLC Zooz Office of Engineering Technology Federal Communications Commission 7435 Oakland Mills Road Columbia, MD 21046 Subject: Request for Confidentiality FCC ID: 2AZ2V**ZSE42** Date: 2021-05-26 To Whom It May Concern, Pursuant to the provisions of Sectio... lang:en score:18 filesize: 134.51 K page\_count: 2 document date: 2021-06-04











Home Addition ( Vers Washington ( Vers) manipulms about a deletion of the control of the control which proper descriptions of the control of the before provide of the control of the

Generalization (Administration Communication of Communication Communicat

Continues of the second second

and container man ment.

— a Sept.— Sept.— and a sept.— and a sept.—

a sept.— and a sept.— and a sept.— and a sept.—

a sept.— and a s

Control Contro

France of Charles phosps consistency, was pre-red year a market has the processing of the took and the Charles of the Charles of the France of the Charles of the Charles of the markets and processing of the Charles of Charles of the Charles Charl



The second secon



And the proof of the company of the The Control of Control THE CONTROL OF THE PROPERTY OF THE CONTROL OF THE C

ABITMENTARRESCON AND DESCRIPTION OF THE SECOND STATE OF THE SECOND

# [pdf]

Zooz ZSE42 Water Leak XS Sensor instrukcja obsługi ZOOZ sensor czujnik zalania dla inteligentnego domu Z wave SmartThings Polska zse42 pl smartthingspolska files wordpress 2023 05 |||

lang:en score:17 filesize: 5.36 M page\_count: 1 document date: 2023-01-27