

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ROTH](#) /
- › [ROTH Educational Alarm Clock and Stamp Set User Manual](#)

ROTH B09JKWDFTT

ROTH Educational Alarm Clock and Stamp Set User Manual

Model: B09JKWDFTT | Brand: ROTH

INTRODUCTION

This manual provides comprehensive instructions for the ROTH Educational Alarm Clock and Stamp Set. Designed to assist children in learning to tell time, this set includes an alarm clock with various features and a complementary stamp set for practice. Please read this manual thoroughly before use to ensure proper operation and safety.



The ROTH Educational Alarm Clock and Stamp Set, featuring a pink unicorn-themed clock and a wooden stamp with an ink pad.

SAFETY INFORMATION

WARNING: CHOKING HAZARD – Small parts. Not suitable for children under 3 years.

- Always supervise young children during use.
- Keep batteries out of reach of children.
- Do not disassemble the product.
- Dispose of batteries properly according to local regulations.

PACKAGE CONTENTS

Please check the package to ensure all items are present:

- 1 x ROTH Educational Alarm Clock (Unicorn design)
- 1 x High-quality Wooden Stamp
- 1 x Ink Pad



The product packaging, showing the alarm clock and stamp set inside.

SETUP

Battery Installation

The alarm clock requires 1x AA battery (not included).

1. Locate the battery compartment on the back of the alarm clock.
2. Open the battery compartment cover.
3. Insert one AA battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.



The rear of the alarm clock, displaying the battery compartment and adjustment knobs.

OPERATING INSTRUCTIONS

Setting the Time

Use the time setting knob located on the back of the clock to adjust the hour and minute hands. Rotate the knob clockwise or counter-clockwise until the correct time is displayed.

Setting the Alarm

Use the alarm setting knob, also on the back, to set the desired alarm time. The alarm will sound a beep when the set time is reached. To activate or deactivate the alarm, use the ON/OFF switch located on the side of the clock.



Side view of the alarm clock, highlighting the ON/OFF switch for the alarm function.

Snooze Function

When the alarm sounds, press the large button on the top of the clock to activate the snooze function. The alarm will temporarily stop and sound again after a short interval.

Backlight

The clock features a backlight for visibility in low-light conditions. Press the backlight button, typically located on the top or side, to illuminate the clock face.

Using the Stamp Set

The included wooden stamp and ink pad are designed to help children practice telling time. The stamp creates a clock face outline on paper, allowing children to draw in the hands for various times.

1. Open the ink pad container.
2. Gently press the rubber side of the wooden stamp onto the ink pad to coat it evenly with ink.
3. Press the inked stamp firmly onto a piece of paper.
4. Lift the stamp to reveal the clock face outline.
5. Children can then draw the hour and minute hands to represent different times.



A detailed view of the wooden stamp and its accompanying red ink pad.



The alarm clock alongside the stamp and a piece of paper demonstrating the stamped clock face outline, ready for time-telling practice.

Maintenance and Care

- Clean the clock and stamp with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the product to extreme temperatures or direct sunlight.
- If the clock will not be used for an extended period, remove the battery to prevent leakage.
- Store the ink pad with its lid securely closed to prevent drying.

Troubleshooting

Problem	Possible Cause	Solution
Clock not working	Battery is dead or incorrectly inserted.	Replace battery (1x AA) or check polarity.
Alarm not sounding	Alarm is not activated or set incorrectly.	Ensure alarm ON/OFF switch is in the 'ON' position and alarm time is set correctly.
Backlight not working	Battery low or backlight button not pressed.	Replace battery or press the backlight button firmly.
Stamp not making clear impression	Ink pad is dry or stamp not evenly inked.	Ensure ink pad is moist; re-ink stamp evenly. Replace ink pad if necessary.

Specifications






Feature	Detail
Product Dimensions (LxWxH)	20 x 21.1 x 7.3 cm
Item Weight	350 Grams
Special Features	Snooze, Alarm, Backlight
Brand	ROTH
Age Range (Description)	Children
Material	Wood (Stamp), Plastic (Clock)
Color	Pink
Power Source	Battery Powered
Battery Type	1x AA (not included)


Warranty and Support

This product comes with a standard manufacturer's warranty. For specific warranty details, including duration and coverage, please refer to the product packaging or contact ROTH customer support directly. If you encounter any issues or have questions not covered in this manual, please reach out to the retailer or manufacturer for assistance.

For further support, please visit the official ROTH website or contact their customer service department.

Related Documents - B09JKWDFTT

 <p>Living full of energy</p>	<p>Roth Touchline® SL Thermostat Installation Guide</p> <p>Comprehensive installation guide for the Roth Touchline® SL room thermostat and underfloor heating system. Learn how to pair, register, and configure your thermostat with floor sensors and controllers.</p>
 <p>Living full of energy</p>	<p>Roth Touchline SL Thermostat Installation Guide</p> <p>Comprehensive installation and setup guide for the Roth Touchline SL and SL Plus thermostats. Covers wall mounting, wiring, sensor connection, pairing with controllers, floor sensor configuration, and advanced functions.</p>
 <p>Living full of energy</p>	<p>Roth MultiPex® PEX Piping System Installation Guide</p> <p>This installation guide provides detailed instructions for Roth MultiPex® PEX piping systems. It covers essential steps such as pipe cutting, bending, and fixing, along with warnings about solvent use. The document also includes comprehensive technical data and a list of compatible accessories, presented in English for clarity. Suitable for drinking water and central heating applications.</p>
 <p>Living full of energy</p>	<p>Roth MultiPex® Installation Guide: Pipes and Fittings</p> <p>Comprehensive installation guide for Roth MultiPex® pipe systems, covering cutting, bending, fixing, assembly, technical specifications, and accessories. Learn how to install Roth plumbing solutions safely and efficiently.</p>
 <p>Living full of energy</p>	<p>Roth Touchline® PL Room Thermostat Installation and Operation Guide</p> <p>This guide provides comprehensive instructions for installing and operating the Roth Touchline® PL wireless room thermostat. It covers setup, pairing with the controller, and detailed explanations of the thermostat's functions and settings.</p>

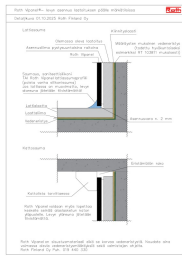

[Roth Vipanel® Asennusdetaljit Märkätiloissa](#)

Yksityiskohtaiset asennusohjeet ja detailjiirrokset Roth Vipanel® -levyjen asentamiseen märkätiloihin, kattaen lattia- ja kattosaumat eri alustatyypeillä, mukaan lukien muovimattoiset lattiat.