

Manuals.plus /

> [NKF](#) /

> NKF NS-RC03A-13 Remote Control User Manual for Insignia TVs

NKF NS-RC03A-13

NKF NS-RC03A-13 Remote Control User Manual

Model: NS-RC03A-13 | Brand: NKF

1. INTRODUCTION

This manual provides instructions for the NKF NS-RC03A-13 replacement remote control, designed for compatibility with various Insignia TV models. This remote operates using infrared (IR) technology and requires no programming or pairing for initial use.

Simply install the batteries, and the remote will be ready for operation with your compatible Insignia television.

2. SETUP AND BATTERY INSTALLATION

To begin using your NS-RC03A-13 remote control, follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two (2) new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 1: Battery compartment with two AAA batteries inserted.

Note: Batteries are not included with the remote control. Always use new AAA alkaline batteries for optimal performance.

3. OPERATING THE REMOTE CONTROL

Once batteries are installed, point the remote control directly at your Insignia TV. The remote is pre-programmed and should function immediately.





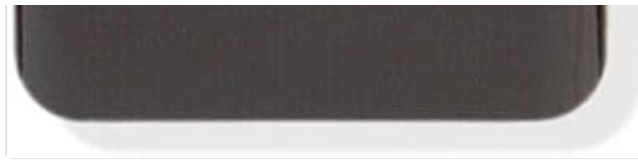


Figure 2: Front view of the NS-RC03A-13 Remote Control.

Key Functions:

- **Power (●):** Turns the TV on or off.
- **TV:** Selects the TV input source.
- **VIDEO:** Selects the Video input source.
- **HDMI 1/2/3:** Selects the corresponding HDMI input source.
- **ACC:** Accesses accessory functions (specific to TV model).
- **Number Buttons (0-9):** Directly select channels.
- **MENU:** Opens the TV's main menu.
- **HOME:** Returns to the TV's home screen or smart TV interface.
- **INFO:** Displays information about the current program or input.
- **EXIT:** Exits menus or on-screen displays.
- **Directional Pad (Up, Down, Left, Right) & ENTER:** Navigates menus and confirms selections.
- **INPUT:** Cycles through available input sources.
- **CH-LIST:** Displays the channel list.
- **FAVORITE:** Accesses favorite channels.
- **CCD:** Activates Closed Captioning.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down):** Changes channels.
- **MUTE:** Mutes or unmutes the TV audio.
- **SLEEP:** Sets the TV sleep timer.
- **ZOOM:** Adjusts the screen zoom level.
- **MTS/SAP:** Selects Multi-channel Television Sound/Secondary Audio Program.
- **PICTURE:** Accesses picture settings.
- **AUDIO:** Accesses audio settings.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Previous, Stop, Next):** Controls media playback on compatible devices or TV functions.

4. COMPATIBLE INSIGNIA TV MODELS

This NKF NS-RC03A-13 remote control is compatible with a wide range of Insignia TV models, including but not limited to the following:

- NS-19E310A13
- NS-19E320A13
- NS-22E340A13
- NS-24E340A13

- NS-24L240A13
- NS-32D120A13
- NS-32E320A13
- NS-32E320A13A
- NS-32E321A13
- NS-32E440A13
- NS-32L120A13
- NS-32L121A13
- NS-32L240A13
- NS-39D240A13
- NS-39E340A13
- NS-39E480A13
- NS-39L240A13
- NS-40L240A13
- NS-40L240A13A
- NS-42D240A13
- NS-42E440A13
- NS-42E470A13
- NS-42E480A13
- NS-42L260A13
- NS-46E340A13
- NS-46E480A13
- NS-46E480A13A
- NS-46E481A13
- NS-46L240A13
- NS-50L240A13
- NS-55E480A13
- NS-55E480A13A
- NS-55L260A13
- NS-55L260A13A
- NS-65D260A13

5. TROUBLESHOOTING

If your remote control is not functioning as expected, consider the following troubleshooting steps:

- **Remote not responding:**
 - Ensure the remote has fresh AAA alkaline batteries installed correctly, observing polarity (+/-).
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Confirm you are within the effective range and pointing the remote directly at the TV.
- **Specific buttons not working:**

- Some advanced functions may be specific to certain TV models. Refer to your TV's original manual for details on its specific features.
- Clean the remote control buttons and surface with a soft, dry cloth to remove any dirt or residue.

6. SPECIFICATIONS

Feature	Detail
Model Number	NS-RC03A-13
Brand	NKF
Connection Type	Infrared (IR)
Compatible Devices	Insignia Televisions
Power Source	2 x AAA Alkaline Batteries (not included)
Color	Black
Product Dimensions	7.5 x 2 x 0.7 inches
Item Weight	2.88 ounces

7. MAINTENANCE

To ensure the longevity and proper functioning of your remote control:

- Keep the remote control dry and away from extreme temperatures.
- Avoid dropping the remote or subjecting it to strong impacts.
- Clean the remote's surface with a soft, slightly damp cloth. Do not use abrasive cleaners or solvents.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

8. CUSTOMER SUPPORT

If you have any questions or require further assistance regarding your NKF NS-RC03A-13 remote control, please contact the customer service of your retailer or the manufacturer.

For specific TV functions or advanced settings, please refer to the original user manual provided with your Insignia television.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09JL2M593>

More documents and user manuals: **<https://manuals.plus/>**