

VGR V-007

VGR V-007 Professional Rechargeable Cord/Cordless Hair Trimmer User Manual

Model: V-007 | Brand: VGR

1. INTRODUCTION

This user manual provides detailed instructions for the safe and effective use, maintenance, and troubleshooting of your VGR V-007 Professional Rechargeable Cord/Cordless Hair Trimmer. Please read this manual thoroughly before first use and retain it for future reference.

2. PRODUCT OVERVIEW

The VGR V-007 is a versatile hair trimmer designed for both hair and beard grooming. It features a durable ABS plastic body and a high-quality stainless steel T-blade for precise and smooth cutting.

2.1 Package Contents

- 1 x VGR V-007 Hair Trimmer
- 3 x Guide Combs (1mm, 2mm, 3mm)
- 1 x USB Charging Cable
- 1 x Cleaning Brush
- 1 x Lubricating Oil Bottle
- 1 x Storage Pouch

2.2 Key Features

- **Precision T-Blade:** Made of stainless steel, designed to stay sharp longer for efficient and smooth cuts.
- **Guide Combs:** Includes 1mm, 2mm, and 3mm attachment guards for versatile trimming lengths and superior comfort.
- **Cord/Cordless Operation:** Can be used with or without the cord for maximum flexibility.
- **USB Charging:** Convenient USB cable allows charging from various power sources.

- **Powerful Motor:** Ensures consistent cutting performance.
- **Long Battery Life:** Equipped with a 600mAh Lithium battery providing up to 120 minutes of runtime on a 1.5-hour charge.



Figure 2.1: VGR V-007 Hair Trimmer and included accessories.



Figure 2.2: Detailed view of VGR V-007 trimmer features.

Video 2.1: Product Summary Video demonstrating the VGR V-007 Hair Trimmer's features and capabilities.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the trimmer for approximately 1.5 hours. The trimmer can be charged using the provided USB cable connected to a computer, laptop, USB charger, or power bank.



Figure 3.1: Charging and runtime details for the VGR V-007 trimmer.

3.2 Attaching Guide Combs

To attach a guide comb, align the comb with the trimmer blade and push it firmly until it clicks into place. To remove, gently pull the comb away from the blade.



1mm(0.04inch)



2mm(0.08inch)



3mm(0.12inch)



Figure 3.2: Guide combs (1mm, 2mm, 3mm) for the VGR V-007 trimmer.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the On/Off switch located on the side of the trimmer to turn the device on or off.

4.2 Trimming Hair and Beard

1. Ensure the trimmer is fully charged or connected to a power source.
2. Select the desired guide comb (1mm, 2mm, or 3mm) and attach it securely.
3. For best results, use the trimmer on clean, dry hair.
4. Hold the trimmer with the blade flat against the skin and move it slowly against the direction of hair growth.
5. Use smooth, even strokes for a consistent cut.
6. For detailing or zero-gap trimming (without a comb), use caution as the blade is very sharp.



Figure 4.1: Proper handling of the VGR V-007 trimmer during use.

5. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your VGR V-007 trimmer.

5.1 Cleaning the Blades

1. Turn off the trimmer and disconnect it from the power source.
2. Remove any attached guide comb.
3. Use the provided cleaning brush to remove hair clippings from the blade area.
4. For a more thorough clean, you may carefully detach the blade assembly (refer to specific instructions if provided in the physical manual for your model, as detachment methods vary).

5.2 Oiling the Blades

After every few uses, or if the trimmer feels sluggish, apply a small drop of the provided lubricating oil to the

blades. Turn the trimmer on for a few seconds to allow the oil to distribute evenly. This helps maintain blade sharpness and smooth operation.

5.3 Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Use the provided storage pouch to protect the trimmer and its accessories.

6. TROUBLESHOOTING

If you encounter any issues with your VGR V-007 trimmer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for 1.5 hours.
Poor cutting performance.	Blades are dull or clogged with hair.	Clean and oil the blades. Ensure hair is dry before trimming.
Trimmer makes unusual noise.	Blades need lubrication.	Apply lubricating oil to the blades.
Battery not charging.	Faulty USB cable or power adapter.	Try a different USB cable or power adapter. Ensure connection is secure.

If the problem persists after attempting these solutions, please contact VGR customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	V-007
Blade Material	Stainless Steel
Body Material	ABS Plastic
Power Source	Battery Powered (Cord/Cordless)
Battery Type	Lithium Ion
Battery Capacity	600 mAh
Charging Time	Approx. 1.5 hours
Runtime	Up to 120 minutes
Cutting Lengths	1mm, 2mm, 3mm (with guide combs)

Feature	Detail
Product Dimensions (LxWxH)	15.5 x 4 x 2 cm
Item Weight	100 g
Color	Black
Included Components	1 Hair trimmer, 3 guide combs, USB charging cable, cleaning brush, lubricating oil

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The VGR V-007 Professional Rechargeable Cord/Cordless Hair Trimmer comes with a 1-year standard brand warranty from the date of purchase. Please retain your purchase receipt as proof of warranty.

8.2 Customer Support

For any product-related queries, technical assistance, or warranty claims, please contact VGR customer support:

- **Email:** customercare@vgrofficial.in
- **Toll-Free Number:** 18002578939 (From 10:00 AM to 6:00 PM, Monday to Saturday)
- **Website:** www.vgrofficial.in