

Olayks OLK-electric hot pot

Olayks 1.5L Electric Hot Pot Instruction Manual

Model: OLK-electric hot pot

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the power cord, plugs, or the electrical base of the pot in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has built-in overheat and dry-boil protection for your safety. If the pot runs dry or overheats, it will automatically shut off.

PRODUCT OVERVIEW

The Olayks 1.5L Electric Hot Pot is a versatile and portable cooking appliance designed for various culinary tasks. Its compact size and dual power settings make it suitable for small kitchens, dorm rooms, offices, or travel.

Components

- Electric Pot with integrated handle and control switch
- Glass Lid with steam vents and handle
- Detachable Power Cord
- Steamer Basket (optional, may be included with some models)

Key Features

- **1.5 Liter Capacity:** Ideal for 1-2 people.
- **Ceramic Non-stick Coating:** Food-grade, PFOA/PFOS/PTFE-free interior for healthy cooking and easy cleaning.
- **Dual Power Adjustment:** Two settings (350W and 750W) for simmering or rapid boiling.
- **Safety Features:** Overheat and dry-boil protection.
- **Portable Design:** Lightweight and compact with a detachable power cord.



Figure 1: Olayks 1.5L Electric Hot Pot with lid and handle.

SPECIFICATIONS

Brand	Olayks
Model Number	OLK-electric hot pot
Capacity	1.5 Liters (1.6 Quarts)
Wattage	350W (Low) / 750W (High)
Voltage	120 Volts
Material	ABS, Ceramic
Product Dimensions	4.92"D x 13.4"W x 7.87"H
Item Weight	3.08 pounds
Control Type	Manual Slide Switch (Off, Low, High)

SETUP

- Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- Initial Cleaning:** Before first use, wash the interior of the pot and the lid with warm, soapy water. Rinse thoroughly and dry completely. **Do not immerse the main body of the pot (with electrical components) in water.**
- Assemble:** Place the pot on a stable, flat, heat-resistant surface. Ensure the control switch is in the "OFF" position. Connect the detachable power cord securely to the pot's power inlet.

1.5L CAPACITY

Suitable for a hot pot dinner with 1-2 people. 1.5L CAPACITY



Figure 2: The Olayks Electric Hot Pot prepared for cooking, showing its capacity with ramen and various ingredients.

OPERATING INSTRUCTIONS

The Olayks Electric Hot Pot offers two power settings for versatile cooking.

Power Settings

- **LOW (350W):** Ideal for simmering, slow cooking, keeping food warm, or gentle frying (e.g., pancakes, eggs).
- **HIGH (750W):** Suitable for rapid boiling, sautéing, or cooking larger quantities quickly (e.g., hot pot, ramen, steak).

ADJUSTABLE POWER CONTROL

Suitable for different cooking methods

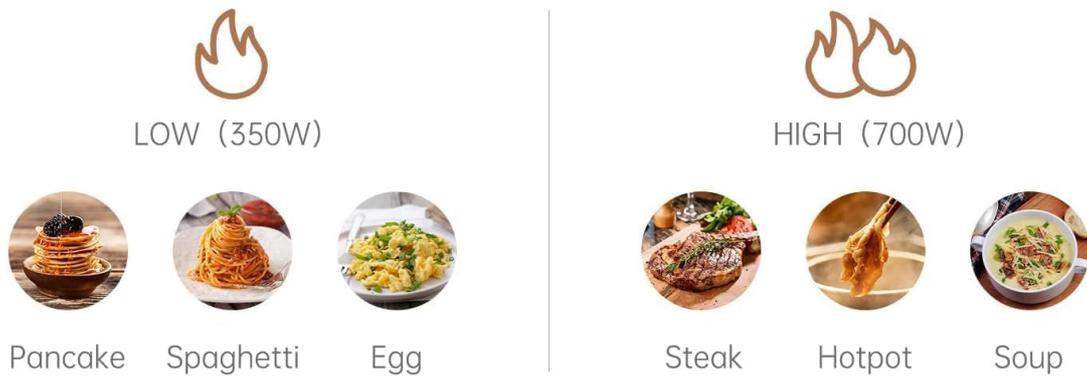


Figure 3: The manual slide switch for selecting Off, Low (350W), or High (750W) power settings.

General Operation

- Add Ingredients:** Place your desired food and liquids into the pot. Ensure the liquid level does not exceed the maximum fill line inside the pot.
- Connect Power:** Plug the detachable power cord into a standard 120V electrical outlet.
- Select Power:** Slide the control switch on the handle to either "LOW" or "HIGH" depending on your cooking needs. The indicator light will illuminate.
- Cook:** Monitor your food as it cooks. Use the lid to retain heat and speed up cooking, or remove it for evaporation.
- Turn Off:** Once cooking is complete, slide the control switch to "OFF" and unplug the appliance from the wall outlet.

Using the Steamer Basket

If your model includes a steamer basket, you can use it for steaming vegetables, dumplings, or other foods.

- Add water to the main pot, ensuring it is below the steamer basket level.
- Place the steamer basket with food inside the pot.
- Cover with the lid and select the desired power setting (usually "HIGH" for steaming).

Your browser does not support the video tag.

Video 1: Demonstration of the Olayks Multi-function Electric Express Cooker in use, showcasing various cooking methods like hot pot, stir-frying, and steaming.

Your browser does not support the video tag.

Video 2: A quick demonstration of the 1.5L Mini Ramen Cooker, showing how to prepare ramen noodles efficiently.

Your browser does not support the video tag.

Video 3: This video highlights the Olayks Electric Hot Pot as a versatile kitchen helper, demonstrating its use for various daily cooking needs.

MAINTENANCE AND CLEANING

Proper care ensures the longevity and performance of your Olayks Electric Hot Pot.

- **Always unplug the appliance** and allow it to cool completely before cleaning.
- **Interior Cleaning:** The ceramic non-stick interior is easy to clean. Wash with warm, soapy water and a soft sponge or cloth. For stubborn food residue, soak the pot in warm water for a few minutes before cleaning.
- **Exterior Cleaning:** Wipe the exterior of the pot and handle with a damp cloth. **Do not immerse the main body of the pot or the handle (which contains electrical components) in water. It is not dishwasher safe.**
- **Lid and Steamer Basket:** The glass lid and steamer basket can be washed with warm, soapy water and are generally dishwasher safe, though hand washing is recommended for longevity.
- **Avoid Abrasives:** Do not use abrasive cleaners, metal scouring pads, or harsh chemicals, as these can damage the non-stick coating and exterior finish.
- **Storage:** Ensure the pot is completely dry before storing. Store in a cool, dry place.



Figure 4: The ceramic glaze non-stick interior allows for easy cleaning with water and a sponge, and prevents food from sticking.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pot does not turn on.	Not plugged in, power switch off, or power outage.	Ensure power cord is securely plugged into both the pot and a working 120V outlet. Check that the control switch is set to "LOW" or "HIGH". Verify power supply.
Pot automatically shuts off during use.	Overheat or dry-boil protection activated.	This is a safety feature. Unplug the pot and allow it to cool down. Check for sufficient liquid or food inside before restarting.
Food sticks to the bottom.	Insufficient oil or food cooked at too high a temperature without stirring.	Ensure a small amount of cooking oil is used for frying. Stir food regularly, especially on the "HIGH" setting. Adjust to "LOW" for gentler cooking.

Water or liquid boils over.

Pot is overfilled or heat setting is too high.

Do not fill past the maximum line. Reduce heat setting to "LOW" or remove the lid to reduce boiling intensity.

WARRANTY AND SUPPORT

For product support, warranty information, or to inquire about replacement parts, please contact Olayks-US customer service. Refer to your purchase documentation for specific warranty terms.

Return Policy: This product is eligible for a 30-day refund/replacement return policy from the date of purchase, as per Amazon's standard policy.

For further assistance, visit the [Olayks Store on Amazon](#).