

Eurotime ET100023

Eurotime ET100023 Military Sports Watch

User Instruction Manual

INTRODUCTION

Thank you for choosing the Eurotime ET100023 Military Sports Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your watch. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

The Eurotime ET100023 is a multi-functional timepiece designed for durability and versatility, featuring both analog and digital displays, a stopwatch, alarm, and water resistance suitable for daily activities.

PRODUCT OVERVIEW

Your Eurotime ET100023 watch combines a classic analog display with a modern digital interface, offering comprehensive timekeeping and utility functions. Familiarize yourself with the watch's components and buttons:

- **Analog Display:** Traditional hour, minute, and second hands.
- **Digital Display:** Shows time, date, day, and other functions.
- **Buttons:** Four control buttons located around the watch case.



Image: Front view of the Eurotime ET100023 watch with its four control buttons clearly labeled. The labels indicate the function of each button: EL Light, Reset, Mode, and a multi-function button for Alarm/Second/Reset.

Button Functions:

- **EL LIGHT Button (Top Left):** Activates the LED backlight for the digital display.
- **RESET Button (Top Right):** Used for resetting values during setting modes or for the stopwatch function.
- **MODE Button (Bottom Left):** Cycles through different display modes (Time, Alarm, Stopwatch).
- **ADJUST/START Button (Bottom Right):** Used to adjust settings in various modes, activate/deactivate the alarm, or start/stop the stopwatch.

SETUP

Setting Time and Date:

1. In normal time display mode, press the **MODE Button** (Bottom Left) repeatedly until the seconds begin to flash. This indicates you are in time setting mode.
2. Press the **RESET Button** (Top Right) to cycle through the settings: Seconds → Hour → Minute → Month → Date → Day of Week.

3. Use the **ADJUST/START Button** (Bottom Right) to change the flashing value.
4. Once all settings are correct, press the **MODE Button** (Bottom Left) to exit the setting mode and return to normal time display.

12/24 Hour Format:

While in time setting mode (seconds flashing), press the **ADJUST/START Button** (Bottom Right) when the hour is flashing to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

OPERATING INSTRUCTIONS

Mode Selection:

Press the **MODE Button** (Bottom Left) to cycle through the following functions:

- Normal Time Display
- Alarm Setting
- Stopwatch

EL Backlight:

Press the **EL LIGHT Button** (Top Left) to illuminate the digital display for a few seconds, allowing visibility in low-light conditions.



Image: The Eurotime ET100023 watch demonstrating the EL Light feature, showing the digital display illuminated for clear viewing in the dark.

Alarm Function:

1. From normal time display, press the **MODE Button** (Bottom Left) once to enter Alarm setting mode.

The alarm time will be displayed.

2. Press the **RESET Button** (Top Right) to select the hour or minute to set.
3. Use the **ADJUST/START Button** (Bottom Right) to change the flashing value.
4. Press the **MODE Button** (Bottom Left) to confirm and exit alarm setting.
5. To activate/deactivate the alarm, in alarm display mode, press the **ADJUST/START Button** (Bottom Right). An alarm icon will appear/disappear to indicate its status.

Stopwatch Function:

1. From normal time display, press the **MODE Button** (Bottom Left) twice to enter Stopwatch mode. The display will show "00:00:00".
2. Press the **ADJUST/START Button** (Bottom Right) to start the stopwatch.
3. Press the **ADJUST/START Button** (Bottom Right) again to stop the stopwatch.
4. Press the **RESET Button** (Top Right) to reset the stopwatch to "00:00:00".
5. To exit stopwatch mode, press the **MODE Button** (Bottom Left).

WATER RESISTANCE GUIDELINES

Your Eurotime ET100023 watch is water resistant up to 50 meters (5 ATM). This means it is suitable for:

- Washing hands
- Rain exposure
- Showering (cold water only)
- Swimming in shallow water



Image: A collage demonstrating the water resistance capabilities of the Eurotime ET100023 watch, showing it being used while washing hands, in the rain, and during swimming.

Important Precautions:

- **DO NOT press any buttons while the watch is submerged in water.**This can compromise the water seal.
- **DO NOT use the watch in hot water, saunas, or steam rooms.**Extreme temperatures and steam can damage the watch's seals and internal components.
- Avoid prolonged exposure to direct sunlight or extreme cold.

MAINTENANCE

Cleaning:

Wipe the watch case and strap regularly with a soft, damp cloth. For stubborn dirt, a mild soap solution can

be used, followed by rinsing with clean water and drying thoroughly. Avoid harsh chemicals or abrasive materials.

Battery Replacement:

The watch is powered by a high-quality Japanese sports battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is properly maintained.

Storage:

When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Digital Display is Blank or Dim:** The battery may be low or depleted. Replace the battery.
- **Incorrect Time Display:** Re-set the time and date following the instructions in the 'Setup' section. Ensure the 12/24 hour format is correctly selected.
- **Alarm Not Sounding:** Check if the alarm is activated (alarm icon visible). Ensure the alarm time is set correctly.
- **Water Inside the Watch:** If moisture appears inside the watch, stop using it immediately and take it to a professional watch repair service. This indicates a compromised water seal.

If you encounter issues not covered here, please contact customer support.

SPECIFICATIONS

Basic Information

BRAND: EuroTime

MODEL: 1370

WEIGHT: 95g

MOV' T: DIGITAL

MIRROR: RESIN

CASE: ABS

BAND: STAINLESS STEEL

BUCKLE: STAINLESS STEEL

W / P : 50M

FUNCTION: 2 time, Chrono, Alarm, Date, Week, EL, 12/24 hour clock.

Manual measurement, if there is an error, please prevail in kind!
Each product sold to provide quality assurance and after-sales service!

Dial width: 47mm

Dial thickness: 14mm

Band Width: 18mm

Watch length: Adjustable

Image: A graphic displaying the basic information and dimensions of the Eurotime ET100023 watch, including brand, model, weight, movement, and materials.

Feature	Detail
Brand	Eurotime
Model	ET100023
Display Type	Digital Analog
Movement	Quartz
Case Material	Plastic (ABS)
Band Material	Plastic (Polyurethane)
Mirror Material	Metal Glass (Resin)
Water Resistance	50 Meters (5 ATM)

Dial Diameter	38 mm
Band Width	24 mm
Special Features	Alarm, Stopwatch, Luminous, LED Backlight, 12/24 Hour Format, Calendar, Dual Time Display
Power Source	Battery Powered

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the retailer where the watch was acquired. Keep your proof of purchase for any warranty claims.