

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN N2QAYB000142 Replacement Remote Control User Manual

PERFASCIN N2QAYB000142

PERFASCIN N2QAYB000142 Replacement Remote Control User Manual

For Panasonic Audio Systems CH505X, CH717X, SE-CH404X

1. PRODUCT OVERVIEW

This manual provides instructions for the PERFASCIN N2QAYB000142 Replacement Remote Control. This remote is designed to operate specific Panasonic Audio Systems, offering a direct replacement without the need for complex programming.



Figure 1: Front view of the N2QAYB000142 Remote Control.

Compatible Models: This remote control is compatible with the following Panasonic Audio System models:

- CH505X
- CH717X
- SE-CH404X

2. SETUP AND BATTERY INSTALLATION

The PERFASCIN N2QAYB000142 remote control operates using two AAA alkaline batteries (not included). No programming is required; simply install the batteries, and the remote is ready for use with compatible systems.

1. **Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Press down on the tab and slide the cover downwards to open it.



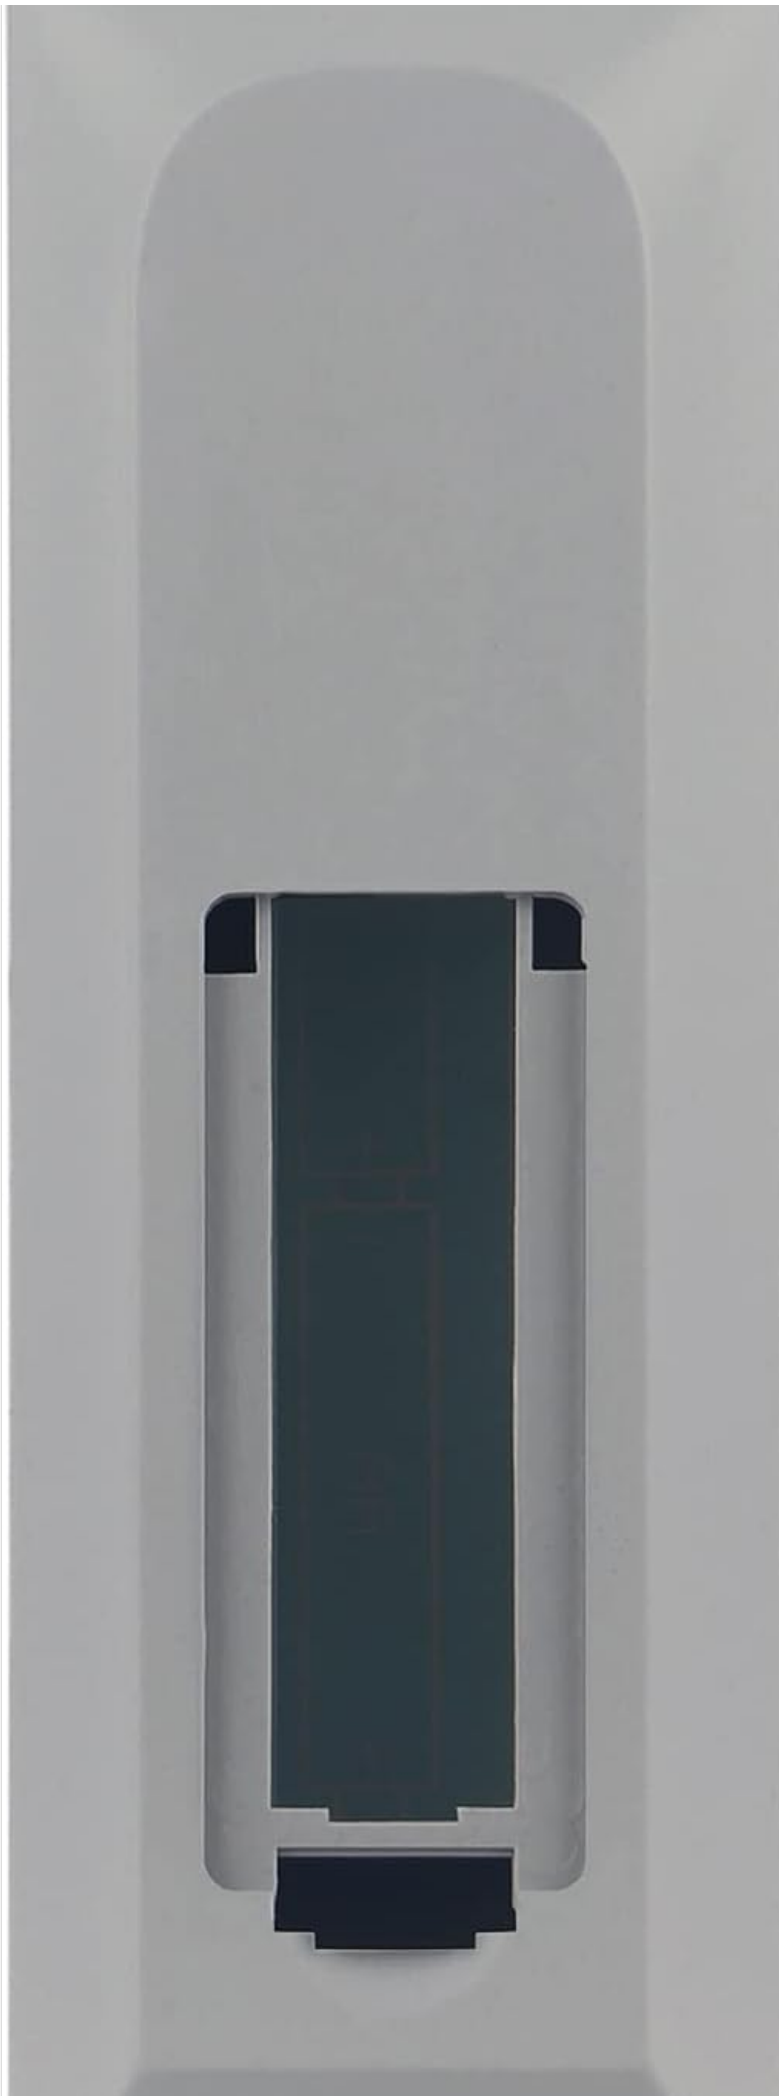




Figure 2: Battery compartment with cover removed.

2. **Insert Batteries:** Insert two new AAA alkaline batteries into the compartment. Ensure that the positive (+) and negative (-) terminals of the batteries align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
3. **Close the Battery Compartment:** Slide the battery cover back into place until it clicks securely.



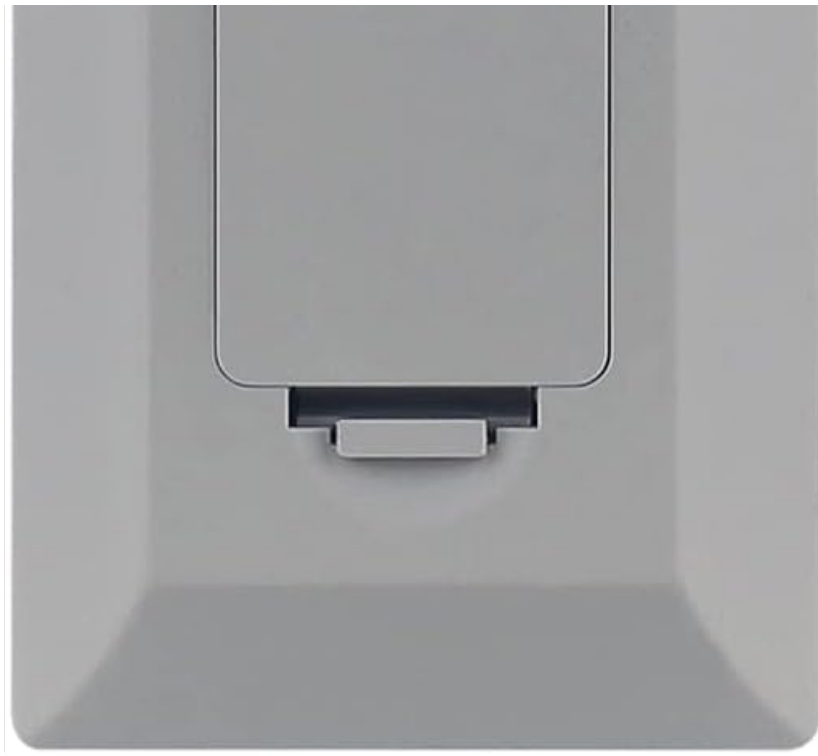


Figure 3: Battery compartment with cover closed.

4. **Test the Remote:** Point the remote control towards your Panasonic Audio System and press the Power button to confirm functionality.

3. OPERATING INSTRUCTIONS

This remote control uses infrared (IR) technology. Ensure there is a clear line of sight between the remote's IR emitter and the IR receiver on your Panasonic Audio System for optimal performance.

Key Functions:

- **Power (●):** Turns the audio system on or off.
- **DISC:** Selects the CD/Disc function.
- **PROGRAM:** Used for programming CD tracks.
- **Numeric Keypad (0-9, +10, ≥10):** For direct track selection or inputting numbers.
- **PLAY MODE:** Changes the playback mode (e.g., random, repeat).
- **REPEAT:** Repeats the current track or album.
- **DEL:** Deletes programmed tracks.
- **CD/II, TAPE:** Selects CD or Tape source.
- **CLEAR:** Clears current selection or input.
- **TUNER/BAND:** Selects tuner function and changes radio bands (AM/FM).
- **EXT-IN:** Selects external input source.
- **VOL +/-:** Adjusts the volume level.
- **◀◀/▶▶ (Skip/Search):** Skips tracks or fast forwards/rewinds during playback.
- **ALBUM ◀/▶:** Navigates between albums or folders.
- **ENTER:** Confirms selections.
- **TITLE SEARCH:** Initiates title search function.
- **MANUAL EQ:** Accesses manual equalizer settings.

- **PRESET EQ:** Cycles through preset equalizer modes.
- **DIMMER:** Adjusts display brightness.
- **HARD BASS:** Enhances bass output.
- **MUTING:** Mutes or unmutes the audio.
- **SLEEP / CLOCK / TIMER:**Accesses sleep timer, clock settings, or other timer functions.
- **PLAY/REC:** Initiates playback or recording (if supported by the audio system).
- **V/REW / A/FF:** Video Rewind / Audio Fast Forward (functions may vary based on system capabilities).
- **DISPLAY:** Changes display information.

Note: Not all functions may be available or fully supported by every compatible Panasonic Audio System model. Refer to your audio system's original manual for specific feature details.

4. MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

- **Remote is not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the audio system's IR receiver.
 - Ensure you are within the effective operating range and pointing the remote directly at the audio system.
- **Certain functions do not work:**
 - Verify that your Panasonic Audio System model is listed as compatible (CH505X, CH717X, SE-CH404X).
 - Some advanced functions may be specific to the original remote or not supported by all compatible audio systems. Refer to your audio system's original manual.

6. SPECIFICATIONS

Feature	Detail
Model Number	N2QAYB000142
Brand	PERFASCIN
Compatibility	Panasonic Audio Systems CH505X, CH717X, SE-CH404X
Connectivity	Infrared (IR)
Batteries Required	2 x AAA Alkaline Batteries (not included)

Special Feature	No Programming Required
Product Dimensions	7 x 2 x 0.6 inches (17.78 x 5.08 x 1.52 cm)
Item Weight	5.3 ounces (150 grams)

7. SUPPORT

If you encounter any issues or have questions regarding the PERFASCIN N2QAYB000142 Replacement Remote Control, please contact the seller or manufacturer for assistance. Refer to your purchase documentation for specific contact details.

"If you have any inquiry about item, contact me freely, thanks in advance."

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09JNHWFC9>

More documents and user manuals: <https://manuals.plus/>