

[Manuals.plus](#) /

› [Owigift](#) /

› [Dryer Lint Filter Screen Trap Replaces For Kenmore Elite 796.61622310 796.69272000 796.69002000 796.61523210 796.61523211 796.61552610 796.61553610 796.61623310 796.69002010 796.69272010 796.69272012](#)

## Owigift 796.61523210

# Owigift Dryer Lint Filter Screen Trap Instruction Manual

Model: 796.61523210

## 1. INTRODUCTION

This manual provides essential information for the installation, maintenance, and troubleshooting of your new Owigift Dryer Lint Filter Screen Trap. This replacement part is designed to maintain the efficiency and safety of your dryer by effectively capturing lint and debris during the drying cycle. Regular maintenance of the lint filter is crucial for optimal dryer performance and to prevent fire hazards.

## 2. PRODUCT OVERVIEW

The Owigift Dryer Lint Filter Screen Trap is a durable replacement component for compatible Kenmore Elite dryer models. It features a fine mesh screen designed to trap lint and other particles, preventing them from accumulating in the dryer's exhaust system. The robust frame ensures a secure fit and long-lasting performance.



Figure 2.1: Front view of the Owigift Dryer Lint Filter Screen Trap, showing the mesh screen and the handle for easy removal.



Figure 2.2: Angled view of the Owigift Dryer Lint Filter Screen Trap, highlighting the sturdy frame and the air vents on the side.

### 3. COMPATIBILITY

---

This lint filter screen trap is a direct replacement for various Kenmore Elite dryer models. Please verify your dryer's model number to ensure compatibility. Compatible models include, but are not limited to:

- 796.61622310
- 796.69272000
- 796.69002000
- 796.61523210
- 796.61523211
- 796.61552610
- 796.61553610
- 796.61623310
- 796.69002010
- 796.69272010
- 796.69272012

### 4. SAFETY INFORMATION

---

Always prioritize safety when working with appliances. Before attempting any installation or maintenance, ensure the dryer is unplugged from its power source to prevent electrical shock. Lint is highly flammable; regular cleaning of the lint filter and dryer vents is essential to prevent fire hazards.

### 5. SETUP AND INSTALLATION

---

Installing the Owigift Dryer Lint Filter Screen Trap is a straightforward process. Follow these steps:

1. **Disconnect Power:** Unplug the dryer from the electrical outlet to ensure safety.
2. **Locate Filter Slot:** The lint filter slot is typically located inside the dryer door opening, at the bottom.
3. **Remove Old Filter:** Grasp the handle of the existing lint filter and pull it straight out of the slot.
4. **Clean Slot (Optional but Recommended):** Use a vacuum cleaner with a narrow attachment to remove any accumulated lint from the filter slot and surrounding area.
5. **Insert New Filter:** Align the new Owigift lint filter with the slot. Push it firmly and gently into place until it is fully seated and flush with the dryer opening. Do not force it.
6. **Restore Power:** Plug the dryer back into the electrical outlet.

Your dryer is now ready for use with the new lint filter.

### 6. MAINTENANCE

---

Regular cleaning of your dryer lint filter is critical for both dryer efficiency and safety. Clean the lint filter after every load of laundry.

- **Daily Cleaning:** After each drying cycle, pull the lint filter out. Peel off the accumulated lint from the screen. Dispose of the lint properly.
- **Deep Cleaning (Monthly/As Needed):** If the filter screen becomes clogged with fabric softener residue or other debris that lint removal alone cannot clear, wash the filter with warm, soapy water. Use a soft brush to gently scrub the mesh. Rinse thoroughly and allow the filter to air dry completely before reinserting it into the

dryer. A clogged filter can restrict airflow, leading to longer drying times and potential overheating.

## 7. TROUBLESHOOTING

If you experience issues related to your dryer's performance after installing the new lint filter, consider the following:

- **Dryer Not Drying Effectively:** Ensure the lint filter is clean and fully seated. A partially inserted or clogged filter can restrict airflow. Also, check the dryer's exhaust vent for blockages.
- **Filter Does Not Fit Properly:** Double-check that the model number of your dryer is listed in the compatibility section. Ensure there is no debris in the filter slot preventing proper insertion.
- **Unusual Noises:** If the filter is not seated correctly, it might vibrate or cause unusual noises. Remove and reinsert the filter, ensuring it clicks or slides firmly into place.

For persistent issues, consult your dryer's main instruction manual or contact a qualified appliance technician.

## 8. SPECIFICATIONS

Feature	Detail
Brand Name	Owigift
Model Info	796.61523210
Compatible Device	Clothes Dryer
UPC	718997264632
Number of Items	1
Unit Count	1 Count

## 9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the official Owigift website or contact the retailer from whom the product was purchased. Keep your proof of purchase for warranty claims.