

[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack Streetwear Digital Watch User Manual

## Fastrack NR38068PP02

# Fastrack Streetwear Digital Watch User Manual

Model: NR38068PP02

## INTRODUCTION

---

This manual provides comprehensive instructions for the Fastrack Streetwear Digital Watch, Model NR38068PP02. Please read this manual carefully to understand the functions and proper operation of your watch. This digital watch is designed for everyday use, featuring a robust build and multiple functionalities.



Figure 1: Front view of the Fastrack Streetwear Digital Watch.

## KEY FEATURES

- **Chronograph Function:** Includes lap operation for timing multiple segments.
- **Alarm Function:** Features a buzzer signal output for alerts.
- **Hourly Chime:** An optional chime that sounds every hour.
- **Time Format:** Switchable between 12-hour and 24-hour formats.
- **Water Resistance:** Rated for 100 meters, suitable for swimming and snorkeling.
- **EL Backlight:** Electro-Luminescent backlight for visibility in low light conditions.
- **Second Time Zone:** Ability to display an additional time zone.
- **Timer:** Countdown timer functionality.



Figure 2: Fastrack Streetwear 2.0 series overview.

## SETUP AND INITIAL CONFIGURATION

### Setting Time and Date

1. Press the **MODE** button (usually on the bottom left) repeatedly until the time setting mode is displayed.
2. Use the **ADJ** button (usually top right) to select the digit you wish to adjust (e.g., hours, minutes, seconds).
3. Use the **SET** button (usually top left) to increase the value. Hold to rapidly advance.
4. Repeat for minutes, year, month, and day.
5. Press **MODE** again to exit the setting mode.

### 12/24 Hour Format

In time display mode, press the **ADJ** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.





Figure 3: Side view of the watch, illustrating button placement for adjustments.

## OPERATING INSTRUCTIONS

---

### Chronograph (Stopwatch)

1. From time display mode, press **MODE** until "CHRONO" or "STW" appears.

2. Press **SET** to start the stopwatch.
3. Press **ADJ** to record a lap time without stopping the main timer.
4. Press **SET** again to pause the stopwatch.
5. Press **ADJ** to reset the stopwatch to zero when paused.



Figure 4: The watch features a chronograph with lap function.

### Alarm Function

1. Press **MODE** until "ALARM" or "AL" appears.
2. Press **ADJ** to select the hour or minute to set.
3. Press **SET** to adjust the value.
4. Press **ADJ** to toggle the alarm ON/OFF. An alarm icon will appear when active.

### Hourly Chime

In alarm setting mode, press **SET** (or a dedicated button, refer to watch markings) to activate or deactivate the hourly chime. A chime icon will indicate its status.

### EL Backlight

Press the **LIGHT** button (usually on the top left or right) to illuminate the display for a few seconds.



Figure 5: The watch display with EL backlight activated.

## Second Time Zone

To set the second time zone, navigate to the Dual Time (or T2) mode using the **MODE** button. Use the **ADJ** and **SET** buttons to set the desired time for the second zone.

## MAINTENANCE AND CARE

---

### Water Resistance (100m)

Your Fastrack watch is water-resistant up to 100 meters (10 ATM). This means it is suitable for recreational swimming, showering, and snorkeling. **Do not operate buttons underwater** as this can compromise the water resistance seal. Avoid exposure to hot water or steam, which can damage the seals.



Figure 6: The watch offers 100-meter water resistance for enhanced durability.

Cleaning

Wipe the watch case and strap regularly with a soft, damp cloth. For silicone straps, mild soap and water can be used. Ensure the watch is completely dry before wearing.

Battery Replacement

When the display dims or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by an authorized service center to ensure proper sealing and water resistance.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable). If submerged, dry the watch thoroughly. If issues persist, contact customer support.
- **Time is incorrect:** Re-adjust the time following the "Setting Time and Date" instructions. Check if the 12/24 hour format is set correctly.
- **Water inside the watch:** Immediately take the watch to an authorized service center. Do not attempt to dry it yourself.

SPECIFICATIONS

| Feature             | Detail              |
|---------------------|---------------------|
| Product Dimensions  | 14 x 7 x 10 cm      |
| Item Weight         | 150 g               |
| Case Diameter       | 56 Millimetres      |
| Case Thickness      | 14 Millimetres      |
| Band Material Type  | Silicone            |
| Band Colour         | Blue                |
| Watch Movement Type | Quartz              |
| Water Resistance    | 100 Meters (10 ATM) |
| Model Number        | NR38068PP02         |

Manufacturer

Titan Co Ltd No



Figure 7: Watch dimensions compared to common objects, showing a case diameter of 56mm.

## WARRANTY AND SUPPORT

Fastrack products typically come with a manufacturer's warranty covering defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Fastrack website. For support, service, or warranty claims, please contact Fastrack customer service or an authorized service center. You may also find additional support and information on the [Fastrack Store on Amazon](#).

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**