

## Fastrack 38068PP01

# Fastrack Streetwear 2.0 Analog-Digital Watch Model 38068PP01 User Manual

This manual provides detailed instructions for the Fastrack Streetwear 2.0 Analog-Digital Watch, model 38068PP01. Please read carefully before use to ensure proper operation and longevity of your watch.

## 1. PRODUCT OVERVIEW

The Fastrack Streetwear 2.0 Analog-Digital Watch combines classic analog timekeeping with modern digital functions, offering versatility and durability. It features a robust design suitable for daily wear and various activities.



**Figure 1.1:** Front view of the Fastrack Streetwear 2.0 Analog-Digital Watch, displaying the digital time, day of the week, and various function indicators. The watch features four control buttons on its sides.

### Button Functions

- **SET Button (Top Left):** Used to enter and confirm settings.
- **MODE Button (Bottom Left):** Cycles through different operational modes (Time, Alarm, Chronograph,

Timer, Second Time Zone).

- **ADJ Button (Top Right):** Used to adjust values during setting.
- **LIGHT Button (Bottom Right):** Activates the EL backlight for illumination.

## 2. SETUP

---

### 2.1 Initial Inspection

Upon unboxing, inspect the watch for any visible damage. Ensure all buttons are functioning correctly by pressing them gently. The watch comes with a pre-installed Lithium Polymer battery.

### 2.2 Setting Time and Date (Digital Display)

1. In normal time display mode, press the **MODE** button repeatedly until the digital display shows the time setting screen (often indicated by flashing digits).
2. Press the **SET** button to select the digit or setting you wish to adjust (e.g., seconds, hour, minute, year, month, day). The selected segment will flash.
3. Use the **ADJ** button to increase the value. Hold the **ADJ** button for faster adjustment.
4. Continue pressing **SET** to cycle through all settings (seconds, hour, minute, 12/24 hour format, year, month, day).
5. Once all settings are correct, press the **MODE** button to exit the setting mode and return to normal time display.

### 2.3 Setting Analog Time

The analog hands are typically set independently. Refer to the crown on the side of the watch (if present) or specific instructions for analog adjustment. For this model, the analog time is usually synchronized with the digital time or set manually via a crown. If a crown is present, pull it out and rotate to set the analog hands, then push it back in.

### 2.4 12/24 Hour Format

During the digital time setting process (Step 2.2), you will encounter an option to switch between 12-hour (with AM/PM indicator) and 24-hour formats. Use the **ADJ** button to toggle between these options.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Mode Navigation

Press the **MODE** button to cycle through the watch's various functions in the following order:

- Normal Time Display
- Chronograph (Stopwatch)
- Alarm Setting
- Timer
- Second Time Zone

### 3.2 Chronograph Function

The chronograph measures elapsed time with lap operation.

1. Press **MODE** until 'CHRONO' or 'STW' appears on the digital display.
2. Press **ADJ** to start the chronograph.
3. Press **ADJ** again to stop the chronograph.
4. To record a lap time while the chronograph is running, press **SET**. The lap time will display briefly, and the chronograph will continue running in the background.
5. To reset the chronograph to zero, ensure it is stopped, then press **SET**.

### 3.3 Alarm Function and Hourly Chime

The watch features an alarm with a buzzer signal and an hourly chime.

1. Press **MODE** until 'ALARM' appears on the digital display.
2. Press **SET** to enter alarm setting mode. The hour digits will flash.
3. Use **ADJ** to set the desired alarm hour.
4. Press **SET** to move to the minute digits and use **ADJ** to set the desired alarm minute.
5. Press **MODE** to exit alarm setting.
6. To activate/deactivate the alarm or hourly chime, in alarm mode, press **ADJ** to toggle these features on or off. Indicators on the display will show their status.

### 3.4 Timer Function

The timer allows for a countdown from a set time.

1. Press **MODE** until 'TIMER' or 'TMR' appears on the digital display.
2. Press **SET** to enter timer setting mode. The hour digits will flash.
3. Use **ADJ** to set the desired countdown hour.
4. Press **SET** to move to the minute digits and use **ADJ** to set the desired countdown minute.
5. Press **SET** to move to the second digits and use **ADJ** to set the desired countdown second.
6. Press **MODE** to exit timer setting.
7. To start the timer, press **ADJ**.
8. To pause/resume the timer, press **ADJ** again.
9. To reset the timer to its initial set time, ensure it is stopped, then press **SET**.

### 3.5 Second Time Zone

This function allows you to keep track of time in another time zone.

1. Press **MODE** until 'T2' or 'DUAL TIME' appears on the digital display.
2. Press **SET** to enter second time zone setting mode. The hour digits will flash.
3. Use **ADJ** to set the desired hour for the second time zone.
4. Press **SET** to move to the minute digits and use **ADJ** to set the desired minute.
5. Press **MODE** to exit second time zone setting.

### 3.6 EL Backlight

To illuminate the digital display in low-light conditions, press the **LIGHT** button (bottom right). The backlight will activate for a few seconds.



Figure 3.1: The watch display with its green EL backlight activated, enhancing visibility in dark environments.

## 4. MAINTENANCE

### 4.1 Cleaning



To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and seals.

## 4.2 Water Resistance Guidelines

This watch is rated for 100 meters (10 ATM) water resistance. This means it is suitable for swimming, snorkeling, and showering. However, it is **not** suitable for scuba diving or high-impact water sports. Avoid operating buttons while the watch is submerged in water to prevent water ingress.



**Figure 4.1:** Rear view of the watch, showing the stainless steel back case with 'WR100M' engraving, indicating 100-meter water resistance.

## 4.3 Battery Information

The watch is powered by 1 Lithium Polymer battery, which is included. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is recommended to have battery replacement performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

## 5. TROUBLESHOOTING

### 5.1 Digital Display is Blank or Dim

- **Possible Cause:** Low battery.
- **Solution:** Replace the battery.

### 5.2 Incorrect Time Display

- **Possible Cause:** Time not set correctly or accidental adjustment.
- **Solution:** Re-set the digital and analog time as per Section 2.2 and 2.3.

### 5.3 Buttons Not Responding

- **Possible Cause:** Watch may be in a locked mode or internal malfunction.
- **Solution:** Try pressing all buttons firmly. If unresponsive, a battery replacement might resolve the issue. If the problem persists, contact customer support.

### 5.4 Water Inside the Watch

- **Possible Cause:** Water resistance compromised due to damage, improper sealing after battery change, or buttons operated underwater.
- **Solution:** Immediately take the watch to a professional watch repair service. Do not attempt to open the watch yourself.

## 6. SPECIFICATIONS







Feature	Specification
Brand	Fastrack
Model Number	38068PP01
Display Type	Analog-Digital
Movement Type	Quartz
Water Resistance	100 meters (10 ATM)
Functions	Chronograph, Alarm, Hourly Chime, 12/24 Hour Format, EL Backlight, Second Time Zone, Timer
Battery	1 Lithium Polymer (included)
Product Dimensions	14 x 7 x 10 cm
Weight	150 g

## 7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Fastrack website. Keep your proof of purchase for any warranty claims.

© 2023 Fastrack. All rights reserved.

## Related Documents - 38068PP01

	<p><a href="#">OY22E Smart Watch User Manual: Setup, Features, and Safety</a></p> <p>Comprehensive user manual for the OY22E Smart Watch by Fastrack. Learn how to set up, pair, use features like Bluetooth calls, health tracking, and understand safety guidelines and specifications.</p>
	<p><a href="#">Fastrack S06 Smartwatch User Manual</a></p> <p>Comprehensive user manual for the Fastrack S06 Smartwatch, covering setup, features, maintenance, and safety information.</p>
	<p><a href="#">Fastrack Reflex Play Smartwatch User Manual: Setup, Features, and Troubleshooting</a></p> <p>Comprehensive user manual for the Fastrack Reflex Play smartwatch, covering setup, app connection, features like fitness tracking, heart rate monitoring, notifications, and troubleshooting guides.</p>
	<p><a href="#">Fastrack Reflex Beat+ Smartwatch User Manual: Features, Pairing &amp; Setup</a></p> <p>Comprehensive user manual for the Fastrack Reflex Beat+ Smartwatch. Learn about its features, app installation, watch pairing, health tracking, and technical specifications.</p>
	<p><a href="#">Fastrack FPods FT7 Truly Wireless Earpods Quick Start Guide</a></p> <p>Get started with your Fastrack FPods FT7 Truly Wireless Earpods. This guide covers setup, controls, features like 3C NitroFast Charge, Quad Mic ENC, and low latency gaming mode.</p>
	<p><a href="#">Fastrack FPods FZ100 Truly Wireless Earbuds Quick Start Guide</a></p> <p>Learn how to set up, use, and care for your Fastrack FPods FZ100 Truly Wireless Earbuds. This guide covers pairing, controls, features like gaming mode and voice assistant, charging, and specifications.</p>