

Kurio C21171

Kurio C21171 Tab Lite Android Tablet User Manual

Model: C21171

INTRODUCTION

Welcome to the Kurio C21171 Tab Lite Android Tablet. This device is designed to provide a safe and engaging digital experience for children, featuring a 7-inch touchscreen, 16GB of expandable memory, and a 2.0 MP FF camera. It comes with a durable silicone case and pre-installed educational apps and games, all running on Android 10 Go. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new tablet, ensuring a secure and enjoyable learning environment for your child.

1. SETUP

1.1 Initial Charging

Before first use, fully charge the tablet using the provided USB cable and a compatible power adapter. The battery indicator on the screen will show charging status.

1.2 Powering On/Off

To power on, press and hold the power button located on the side of the tablet until the Kurio logo appears. To power off, press and hold the power button, then select 'Power off' from the options.

1.3 Initial Configuration

Upon first startup, follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up basic device preferences. A stable Wi-Fi connection is recommended for updates and app downloads.

1.4 Kurio Genius Parental Control Setup

The Kurio Tab Lite 2 comes with Kurio Genius software pre-installed for comprehensive parental controls. This allows you to filter internet content, manage screen time, and authorize applications.



Image: The Kurio Tab Lite 2 displaying its parental control interface, showing options for app management, time control, web access, and other settings.

1. Access the Kurio Genius application from the home screen.
2. Create or log in to your parent account.
3. Configure settings such as daily play time limits, web filtering (child-appropriate content), and app authorization.
4. The tablet also features integrated ear protection for headphone use.

2. OPERATING THE TABLET

2.1 Navigation

The tablet features a responsive 7-inch touchscreen. Use gestures such as tapping, swiping, and pinching to navigate menus, open applications, and interact with content.

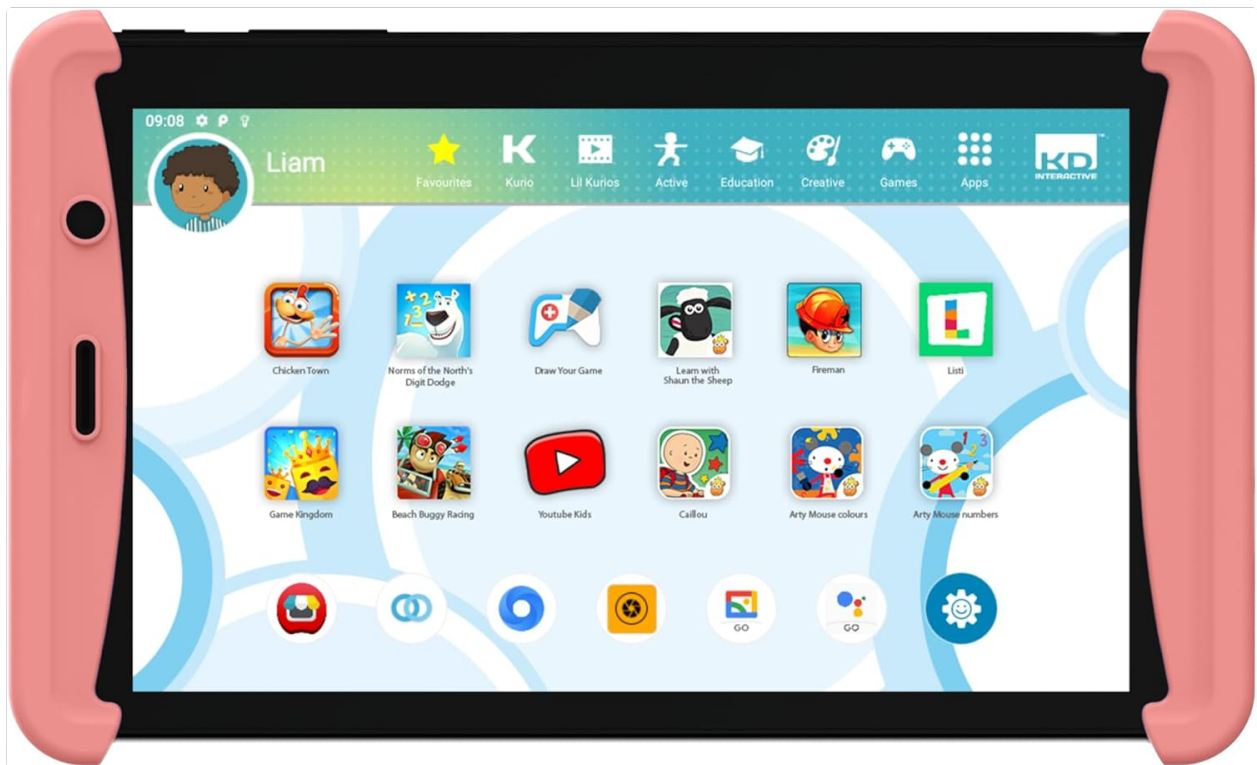


Image: The Kurio Tab Lite 2 showcasing its vibrant home screen with a variety of pre-installed applications and a user profile.

2.2 Using Pre-installed Applications

The tablet comes with over 40 pre-installed educational apps and games. Popular web services like YouTube Kids, Google Classroom, and Koekeltjes are pre-defined for easy access. Additional applications such as Netflix, Videoland, or Disney+ can be downloaded.

2.3 Camera Functionality

The tablet is equipped with a 2.0 MP FF camera. To use the camera, open the camera application from the home screen. You can take photos and record videos directly from the app.



Image: The rear view of the Kurio Tab Lite 2, highlighting its durable pink silicone case and the camera lens.

2.4 Media Consumption

Enjoy videos, music, and e-books. The tablet's integrated ear protection feature helps safeguard your child's hearing when using headphones.



Image: A child wearing headphones and an adult interacting with the Kurio tablet inside a tent, demonstrating portable usage.

3. MAINTENANCE

3.1 Cleaning

To clean the tablet screen, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaner. Avoid harsh chemicals or abrasive materials. The silicone case can be wiped clean with a damp cloth.

3.2 Storage

Store the tablet in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.

3.3 Battery Care

The tablet contains a Lithium-polymer battery. To maximize battery life, avoid fully discharging the battery frequently. Charge the tablet regularly, but do not leave it plugged in for excessively long periods after it's fully charged.

3.4 Software Updates

Periodically check for software updates to ensure optimal performance and security. Updates are typically delivered over Wi-Fi. Please note that information regarding guaranteed software updates is not available.

4. TROUBLESHOOTING

If you encounter issues with your Kurio Tab Lite 2, please refer to the following common solutions:

- **Tablet not turning on:** Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes before attempting to power on again.
- **Screen is black and white:** This is not normal operation. Try restarting the tablet. If the issue persists, it may indicate a hardware problem.
- **Battery drains quickly:** Reduce screen brightness, close unused applications, and disable Wi-Fi when not needed. If the issue is severe, it might indicate a battery degradation.
- **Applications freezing or crashing:** Close the problematic app and reopen it. If the issue continues, try clearing the app's cache or reinstalling it. Ensure the tablet's software is up to date.
- **Wi-Fi connectivity issues:** Ensure your Wi-Fi router is working correctly. Restart both the tablet and the router. Check if the Wi-Fi password entered is correct.

For persistent issues, please contact Kurio customer support.

5. SPECIFICATIONS

Feature	Specification
Brand	Kurio
Model Number	C21171
Operating System	Android 10 Go
Screen Size	7 Inches
Memory Storage Capacity	16 GB (expandable)
RAM Size	1 GB
Processor Brand	MediaTek
Graphics Chipset Brand	Intel or Qualcomm or ARM
Connectivity Type	Wi-Fi
Interface	USB
Color	Pink
Product Dimensions (L x W x H)	19.5 x 1 x 11.5 cm; 580 grams
Battery	1 Lithium-polymer (included)
Manufacturer	Kurio
Country of Origin	China

6. WARRANTY AND SUPPORT

For any questions or support needs, please contact Kurio customer service. While specific warranty details are not provided in this manual, Kurio offers personal customer service. Information regarding the availability of spare parts and guaranteed software updates is not available.

For further assistance, please visit the official Kurio website or contact their support channels.