

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Playmobil](#) /

› [Playmobil 71001 Treehouse with Slide Playset Instruction Manual](#)

## Playmobil 71001

# Playmobil 71001 Treehouse with Slide Playset Instruction Manual

Model: 71001

## INTRODUCTION

Thank you for choosing the Playmobil 71001 Treehouse with Slide playset. This manual provides essential information for the safe assembly, operation, and maintenance of your new toy. Please read these instructions carefully before beginning assembly and keep them for future reference.

The Playmobil 71001 Treehouse with Slide offers numerous play possibilities, including sliding, climbing, and imaginative role-playing around a light-up campfire. This set is designed to provide hours of fun for children aged 4 years and up.

## SAFETY INFORMATION

### **WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.**

This product contains small parts which may pose a choking hazard for children under 3 years of age. Adult supervision is recommended during play, especially with younger children.

- Always ensure all parts are securely assembled before play.
- Keep packaging materials away from children to prevent suffocation.
- Do not modify the product in any way, as this may compromise its safety.
- Retain the manufacturer's address for future reference.

The campfire feature requires 2 x 1.5V AAA batteries (not included). Ensure batteries are inserted correctly according to polarity markings. Do not mix old and new batteries, or different types of batteries. Remove exhausted batteries promptly. Do not short-circuit battery terminals. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the toy before being charged. Dispose of batteries responsibly.

## PACKAGE CONTENTS

The Playmobil 71001 Treehouse with Slide playset includes 29 pieces, designed for comprehensive play. Please verify that all components are present before assembly.

- Treehouse structure with slide and climbing wall
- 4 Playmobil human figures
- 1 Playmobil animal figure (dog)
- Campfire with light-up feature
- Guitar
- Rope
- 2 Bicycles
- Various additional accessories (total of 97 accessories)



Image: The product box displaying the Playmobil 71001 Treehouse with Slide playset, including figures, accessories, and the recommended age range of 4-10 years.

## SETUP AND ASSEMBLY

Assembly of the Playmobil 71001 Treehouse with Slide is straightforward and does not require special tools. Follow the visual instructions provided in the included assembly guide (not detailed here, refer to physical manual for step-by-step diagrams).

1. Unpack all components and verify against the package contents list.
2. Assemble the main treehouse structure, ensuring all connecting pieces click securely into place.
3. Attach the slide and climbing wall to the designated points on the treehouse.
4. Insert 2 x 1.5V AAA batteries into the campfire unit. Ensure correct polarity.
5. Place the figures and accessories as desired to create your play scene.



Image: Playmobil figures interacting with the treehouse, demonstrating the climbing wall and slide features. A dog figure is also present.

## OPERATING INSTRUCTIONS

---

The Playmobil 71001 Treehouse with Slide is designed for imaginative play. Here are some key operational features:

- **Campfire Light Feature:** The campfire unit requires 2 x 1.5V AAA batteries (not included). Once batteries are installed, activate the light by pressing the designated button on the unit. The campfire will emit a flickering light, enhancing the play experience.
- **Slide and Climbing Wall:** Figures can be positioned to climb the wall or slide down the slide. Ensure figures are placed securely to prevent them from falling during play.
- **Accessory Integration:** Utilize the various accessories, such as the guitar, bicycles, and other small items, to create diverse play scenarios.



Image: Playmobil figures enjoying a campfire scene. One figure plays a guitar, another roasts food over the flickering fire, and a third holds a hotdog.

## MAINTENANCE

---

To ensure the longevity and cleanliness of your Playmobil playset, follow these maintenance guidelines:

- **Cleaning:** Wipe the plastic components with a damp cloth. Do not use harsh chemicals or abrasive cleaners, as these may damage the plastic.
- **Storage:** Store the playset in a clean, dry place away from direct sunlight and extreme temperatures to prevent material degradation.
- **Battery Care:** Remove batteries from the campfire unit if the toy is not going to be used for an extended period.

## TROUBLESHOOTING

---

If you encounter any issues with your Playmobil 71001 playset, refer to the following common solutions:

Problem	Possible Cause	Solution
Campfire light does not work.	Batteries are not inserted correctly. Batteries are exhausted. Battery contacts are dirty.	Check battery polarity and reinsert. Replace with new 1.5V AAA batteries. Clean battery contacts with a dry cloth.

Problem	Possible Cause	Solution
Parts do not fit together.	Incorrect orientation of parts. Excessive force being used.	Refer to the assembly guide for correct orientation. Ensure parts are aligned properly; they should click into place with moderate pressure.

## SPECIFICATIONS

---

<b>Model Number</b>	71001
<b>Brand</b>	Playmobil
<b>Number of Pieces</b>	29
<b>Assembly Required</b>	No (refer to manual for component assembly)
<b>Recommended Age</b>	4 - 99 years
<b>Product Dimensions (L x W x H)</b>	38.5 x 28.4 x 9.4 cm (15.16 x 11.18 x 3.7 inches)
<b>Item Weight</b>	200 Grams (0.44 lbs)
<b>Main Material</b>	Plastic
<b>Batteries Required</b>	Yes, 2 x 1.5V AAA batteries for campfire light (not included)
<b>Educational Values</b>	Agility, Creativity, Sociability
<b>Language of Instructions</b>	Multilingual (refer to physical manual)

## WARRANTY AND SUPPORT

---

Specific warranty information for the Playmobil 71001 Treehouse with Slide playset is typically provided within the product packaging or on the official Playmobil website. Please refer to these resources for detailed warranty terms and conditions.

For customer support, missing parts, or further assistance, please contact Playmobil customer service through their official website or the contact information provided in the product packaging. Keep your proof of purchase and model number (71001) handy when contacting support.

You can visit the official Playmobil website for more information: [www.playmobil.com](http://www.playmobil.com)

## OFFICIAL PRODUCT VIDEOS

---

No official product videos from the seller were found to be relevant for inclusion in this instruction manual.