

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Playmobil](#) /

> [Playmobil Air Stunt Show Tiger Propeller Plane \(Model 70902\) Instruction Manual](#)

Playmobil 70902

Playmobil Air Stunt Show Tiger Propeller Plane (Model 70902) Instruction Manual

Your guide to assembly, operation, and care.

1. IMPORTANT SAFETY INFORMATION

WARNING: CHOKING HAZARD. Small parts. Not for children under 3 years.

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

2. WHAT'S IN THE BOX

Verify that all components listed below are present before beginning assembly:

- 1 Pilot Figure
- 1 Mechanic Figure
- 1 Propeller Plane
- 1 Pylon
- 1 Pylon Foot
- 1 Pair of Glove Patches
- 1 Helmet
- 1 Headgear with Headphones
- 1 Walkie-Talkie
- 2 Brake Pads
- 1 Toolbox
- 1 Six-Piece Tool Set
- 1 Gas Can
- 1 Shield
- 1 Holder for Shield

This section details how to interact with your Playmobil Air Stunt Show Tiger Propeller Plane.

4.1 Pre-Flight Checks

- Ensure the propeller is securely attached and rotates freely.
- Confirm all figures are properly seated in the cockpit or positioned on the ground.

4.2 Fueling the Plane

Use the included gas can to simulate fueling the aircraft. The cargo space located just behind the cabin is designed to store the fuel canister when not in use.



Image 4.1: The mechanic figure preparing to fuel the plane.



Image 4.2: The cargo compartment located behind the cockpit.

4.3 Pilot and Co-pilot Placement

The aircraft's cockpit is designed to seat two figures. Carefully place the pilot and co-pilot figures into their

respective seats.



Image 4.3: Pilot figure positioned in the plane's cockpit.

4.4 Stunt Course Creation

Utilize the pylon with its suction feet to establish a dynamic flying course. The pylon can be moved and re-positioned to create various stunt challenges.



Image 4.4: The plane interacting with the pylon during a simulated stunt show.

4.5 Ground Operations

The mechanic figure is equipped with a toolbox and tools to perform simulated inspections and maintenance on the plane after landing or before takeoff.



Image 4.5: The mechanic figure performing ground checks with the toolbox.

5. MAINTENANCE

Proper care will ensure the longevity of your Playmobil set:

- **Cleaning:** Wipe the toy with a damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Storage:** Store the set in a dry, cool place away from direct sunlight to prevent material degradation.
- **Inspection:** Periodically check for any loose or damaged parts. Replace any broken components to maintain safety and functionality.

6. TROUBLESHOOTING

If you encounter any issues with your Playmobil Air Stunt Show Tiger Propeller Plane, refer to the following common solutions:

- **Propeller Not Spinning Freely:**

Solution: Check for any obstructions around the propeller blades. Ensure the propeller is correctly attached to the plane's front.

- **Pylon Not Sticking to Surface:**

Solution: Ensure the surface is clean, smooth, and dry. Press firmly on the pylon's suction feet to create a strong seal. Avoid porous or textured surfaces.

- **Figures Not Fitting in Cockpit:**

Solution: Ensure the figures are correctly oriented and seated. Some accessories (like helmets) may need to be adjusted for proper fit.

7. SPECIFICATIONS

Feature	Detail
Model Number	70902
Product Dimensions (Plane)	12.2 x 11.8 x 4.7 inches (L x W x H)
Pylon Dimensions	3.9 x 3.5 x 13.8 inches (L x W x H)
Item Weight	1.06 pounds
Recommended Age	5 - 12 years
Manufacturer	PLAYMOBIL
Release Date	June 3, 2022

8. WARRANTY AND SUPPORT

For detailed warranty information, product support, or to purchase replacement parts, please visit the official Playmobil website or contact their customer service department.

You can also visit the [Playmobil Store on Amazon](#) for more products and information.