

## MONODEAL CW604FM

# MONODEAL Portable CD Player CW604FM Instruction Manual

Model: CW604FM

## 1. INTRODUCTION

This manual provides detailed instructions for the MONODEAL Portable CD Player Model CW604FM. Please read this manual thoroughly before using the device to ensure proper operation and to maximize its features. This portable CD player is designed for versatile use, including in vehicles and for personal listening at home or while traveling.

## 2. PACKAGE CONTENTS

Please check the package for the following items:

- MONODEAL Portable CD Player (CW604FM)
- USB Charging Cable
- 3.5mm Male-to-Male Audio Cable (AUX Cable)
- Wired Headphones
- FM Transmitter Cable
- User Manual

## 3. PRODUCT FEATURES

- **Rechargeable Battery:** Built-in 1500mAh lithium-ion battery provides up to 15 hours of playback on a full charge.
- **Anti-Skip & Anti-Shock Protection:** Ensures smooth playback even during movement, suitable for travel

and active use.

- **Car Connectivity:** Supports connection to car audio systems via 3.5mm AUX cable or wireless FM transmission.
- **Dual Headphone Jacks:** Allows two users to listen simultaneously.
- **High Compatibility:** Supports CD, MP3 CD, CD-R, and CD-RW disc formats, and music formats including CD-DA, MP3, and WMA.
- **Compact Design:** Portable and easy to carry.

## 4. SETUP

---


### 4.1 Charging the CD Player

Before first use, fully charge the CD player. The device features a built-in 1500mAh rechargeable battery.

1. Connect the provided USB charging cable to the DC 5V IN port on the CD player.
2. Connect the other end of the USB cable to a compatible USB power source (e.g., power bank, laptop, wall adapter, car charger).
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model.

## USB Rechargeable CD Player

Built-in **1500mAH** battery supports up to **12H** playing time

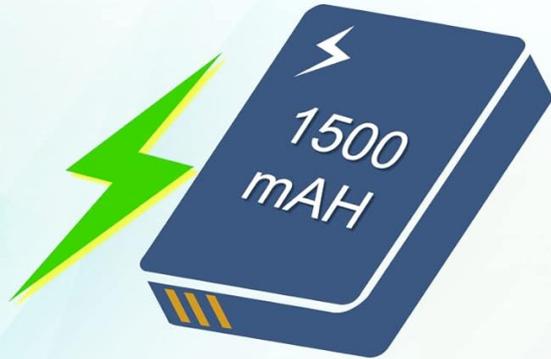


Car Charger



Wall Charger



Power Bank

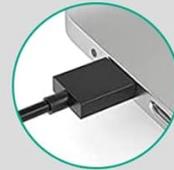

Computer

Image: The MONODEAL Portable CD Player connected via USB for charging. It illustrates various charging methods including car charger, wall charger, power bank, and computer, highlighting the 1500mAh battery capacity.

### 4.2 Inserting a CD

1. Gently slide the OPEN switch to open the CD compartment lid.
2. Place a CD with the label side facing up onto the spindle.
3. Gently press the CD until it clicks into place.
4. Close the CD compartment lid firmly until it latches.

### 4.3 Connecting Headphones

The CD player features dual 3.5mm headphone jacks.

1. Plug your 3.5mm wired headphones into either of the headphone jacks on the device.
2. To share audio, a second pair of headphones can be plugged into the other jack.



## Stereo sounds

Enjoy Audio books, music, novels on CDs



Image: The MONODEAL Portable CD Player demonstrating its dual headphone jacks, allowing two individuals to listen simultaneously. One person is shown wearing headphones connected to the player.

### 4.4 Connecting to Car Audio (AUX or FM)

The CD player can connect to your car's audio system using either the AUX input or an FM transmitter.

#### 4.4.1 AUX Connection

1. Ensure your car has a 3.5mm AUX input jack.
2. Connect one end of the provided 3.5mm male-to-male audio cable to the AUX OUT port on the CD player.
3. Connect the other end of the cable to your car's AUX input jack.
4. Select the AUX input source on your car's stereo system.

#### 4.4.2 FM Connection

1. Connect the FM transmitter cable to the designated FM port on the CD player.
2. Turn on your car's FM radio.
3. On the CD player, press the 'FM' button (or 'EQ/FM' button) to activate FM transmission mode.
4. Tune your car's FM radio to an unused frequency (e.g., 87.5 MHz, 90.0 MHz, 105.9 MHz).
5. Adjust the frequency on the CD player to match your car's selected frequency.

6. Audio from the CD player will now transmit wirelessly to your car's speakers.



Image: The MONODEAL Portable CD Player positioned in a car's center console, demonstrating its ability to connect to the car's audio system via FM transmission. The car's dashboard display shows an FM frequency, indicating successful connection.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Playback

- **Power On/Off:** Slide the POWER switch to ON to turn on the player. Slide to OFF to turn off.
- **Play/Pause:** Press the **PLAY/PAUSE** button to start or pause playback.
- **Next Track:** Press the **NEXT** button to skip to the next track.
- **Previous Track:** Press the **PREV** button to go to the beginning of the current track. Press again to go to the previous track.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the listening volume.

## 5.2 Mode Selection

The player supports different playback modes:

- **Repeat Mode:** Press the **MODE** button repeatedly to cycle through repeat options (e.g., repeat one, repeat all, random play).
- **Program Play:** Refer to the specific instructions in your manual for programming a custom track order.

## 5.3 FM Transmitter Operation

When using the FM transmission feature:

- Ensure the FM transmitter cable is connected.
- Press the **EQ/FM** button to activate FM mode.
- Use the **NEXT** and **PREV** buttons to adjust the FM frequency to match your car radio.

## 6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the CD player. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle CDs by their edges. Keep discs clean and free of scratches. Store them in their cases when not in use.
- **Storage:** Store the CD player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted.	Charge the CD player using the provided USB cable.
Disc does not play.	Disc is dirty, scratched, or inserted incorrectly.	Clean the disc with a soft cloth. Ensure the disc is inserted label-side up and fully seated. Try another disc.
No sound from headphones.	Headphones not properly connected or volume too low.	Ensure headphones are fully plugged into the jack. Increase the volume using the VOL+ button. Test with another pair of headphones.
No sound in car via AUX.	AUX cable not connected or car stereo not on AUX input.	Verify AUX cable connection to both player and car. Select AUX input on car stereo.

Problem	Possible Cause	Solution
No sound in car via FM.	FM frequency mismatch or interference.	Ensure FM mode is active on the player. Match the player's FM frequency to an unused frequency on your car radio. Try a different frequency if interference occurs.
Skipping during playback.	Excessive movement or severely scratched disc.	While the player has anti-skip protection, extreme bumps can still cause skips. Ensure the disc is clean and unscratched.

## 8. SPECIFICATIONS

Feature	Specification
Model Name	CW604FM
Brand	MONODEAL
Battery Capacity	1500mAh Lithium-ion
Playback Time	Up to 15 hours (approximate)
Supported Disc Formats	CD, MP3 CD, CD-R, CD-RW
Supported Audio Formats	CD-DA, MP3, WMA
Connectivity Technology	Auxiliary, FM Transmitter, USB (for charging)
Headphone Jack	Dual 3.5mm Jacks
Item Weight	635 g
Color	Black

# Widely compatible



**Built-in Rechargeable Battery**

**Up to 16 Hours Playback**

## Supported Disc Formats



CD



MP3



CD-R

## Supported Music Formats



CD-DA



MP3



WMA

Image: The MONODEAL Portable CD Player highlighting its wide compatibility with various disc formats (CD, MP3 CD, CD-R) and music formats (CD-DA, MP3, WMA), along with its 1500mAh rechargeable battery offering up to 16 hours of playback.

## 9. WARRANTY AND SUPPORT

The MONODEAL Portable CD Player CW604FM comes with a **30-day return policy** and a **1-year warranty** from the date of purchase.

For technical support, warranty claims, or any questions regarding your product, please contact MONODEAL customer service through the retailer's platform or the official MONODEAL website.

