

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Bayer Chic 2000](#) /
- › Bayer Chic 2000 Fides 3-in-1 Doll Stroller Instruction Manual, Model 645 19

Bayer Chic 2000 645 19

Bayer Chic 2000 Fides 3-in-1 Doll Stroller Instruction Manual

Model: 645 19 | Brand: Bayer Chic 2000

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **WARNING:** Not suitable for children under 3 years due to small parts that may be swallowed.
- This product is a toy and is intended for dolls only. It is not suitable for carrying infants, children, or pets.
- Adult assembly is required.
- Ensure all locking mechanisms are securely engaged before use.
- Regularly inspect the product for any damage or loose parts. Discontinue use if any damage is found.

2. PRODUCT OVERVIEW

The Bayer Chic 2000 Fides 3-in-1 Doll Stroller is a versatile toy designed for dolls up to 52 cm. It offers three modes of use: a classic carrycot, a sports stroller, and a car seat that can be attached to the frame or used separately. The stroller features an adjustable handle, swiveling front wheels for easy maneuverability, and a convenient storage net.



Figure 1: The Fides 3-in-1 Doll Stroller showcasing its carrycot, sports stroller, and car seat modes.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Stroller Frame with Wheels
- Carrycot Attachment
- Sports Stroller Seat Attachment
- Doll Car Seat
- Instruction Manual (this document)

4. ASSEMBLY INSTRUCTIONS

The stroller requires assembly. Follow these steps carefully:

1. **Unfold the Frame:** Carefully unfold the stroller frame until it locks into place. Ensure all frame joints are securely engaged.
2. **Attach the Wheels:** Insert the wheels into their designated slots on the frame. Push firmly until they click into place. Verify that all wheels rotate freely and are securely attached.
3. **Attach the Storage Net:** Secure the fabric storage net to the designated attachment points on the lower part of the frame.
4. **Install Desired Attachment:** Choose between the carrycot, sports stroller seat, or car seat. Align the attachment with the connectors on the stroller frame and press down until it clicks securely into place.



Figure 2: Stroller in Carrycot Mode.



Figure 3: Stroller in Sports Stroller Mode.



Figure 4: Stroller in Car Seat Mode.

5. OPERATING INSTRUCTIONS

5.1 Changing Modes (Carrycot, Sports Stroller, Car Seat)

To change the attachment, locate the release buttons or levers on the sides of the frame where the attachment connects. Press these buttons/levers and lift the current attachment off the frame. Then, align the desired attachment with the frame connectors and push down until it locks into place.

5.2 Sports Stroller Seat Orientation

The sports stroller seat can be positioned to face forward or towards the doll's parent. To reverse the seat,

detach it from the frame, rotate it 180 degrees, and reattach it securely.



Figure 5: Sports Stroller Seat in Parent-Facing Position.

5.3 Handle Height Adjustment

The handle height is adjustable from approximately 60 cm to 85 cm. Locate the adjustment buttons on either side of the handle. Press these buttons simultaneously and move the handle up or down to the desired height. Release the buttons to lock the handle in position.

5.4 Folding the Stroller

To fold the stroller for storage or transport, ensure any attached seat or carrycot is removed first. Locate the folding mechanisms on the frame (refer to diagrams if available on packaging). Engage these mechanisms and collapse the frame until it is in a compact, flat position.



Figure 6: Folded Stroller Frame.

5.5 Using the 3-Point Safety Belt

The sports stroller seat is equipped with a 3-point safety belt. Place the doll in the seat and fasten the belt securely around the doll to prevent it from falling out.

5.6 Swiveling Front Wheels

The front wheels are designed to swivel, allowing for easy steering and maneuverability. This feature is active by default. If the wheels are locked, locate the locking mechanism on each front wheel and disengage it.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the frame with a damp cloth and mild soap. The fabric components can be spot cleaned with a mild detergent. Do not machine wash or tumble dry.
- **Storage:** Store the stroller in a clean, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all screws, bolts, and locking mechanisms to ensure they are tight and functioning correctly.

7. TROUBLESHOOTING

- **Stroller difficult to fold/unfold:** Ensure all attachments are removed before folding. Check for any obstructions in the folding mechanism.
- **Wheels not swiveling:** Check if the front wheels are locked. Ensure no debris is caught in the wheel mechanism.
- **Attachment not securing to frame:** Ensure the attachment is correctly aligned with the frame connectors and push firmly until a click is heard. Check for any damage to the connectors.

8. SPECIFICATIONS

Model Number

645 19

Dimensions (L x W x H)	85 cm x 44.5 cm x 85 cm
Weight	4.6 kg
Suitable Doll Size	Up to 52 cm
Recommended Age	3 to 8 years
Materials	Plastic, Polyester, Steel
Wheel Type	Swiveling Front Wheels

9. WARRANTY AND SUPPORT

Specific warranty information for the Bayer Chic 2000 Fides 3-in-1 Doll Stroller is not provided in the product details. For warranty claims, spare parts, or further support, please contact the manufacturer, Bayer Chic 2000, directly through their official website or customer service channels.