

GUESS GW0334G1

GUESS Men's GW0334G1 Quartz Watch Instruction Manual

Model: GW0334G1

INTRODUCTION

Thank you for choosing the GUESS Men's GW0334G1 Quartz Watch. This manual provides essential information for the proper setup, operation, and care of your timepiece. Please read these instructions carefully to ensure optimal performance and longevity of your watch.





Image 1: Front view of the GUESS Men's GW0334G1 Quartz Watch, showcasing the black dial with exposed screw details, red accents, and a black silicone strap.

SETUP

1. Initial Activation

Your watch may arrive with a small plastic stopper under the crown (the knob on the side). This stopper prevents the battery from draining during storage.

1. Gently pull out the plastic stopper from under the crown.
2. Push the crown fully back into its normal operating position. The watch hands should begin to move.

2. Strap Adjustment

The silicone strap is designed for comfort and can be adjusted using the buckle closure.

1. Place the watch on your wrist.
2. Thread the end of the strap through the buckle.
3. Insert the buckle pin into the desired hole on the strap for a comfortable and secure fit.



Image 2: Close-up view of the silver-tone buckle and the textured black silicone strap, illustrating the adjustment mechanism.

OPERATING INSTRUCTIONS

Your GUESS GW0334G1 watch features time, day, date, and 24-hour international time displays.



Image 3: Side view of the watch, highlighting the crown and the two pushers (buttons) on the right side of the case.

1. Setting the Time

1. Pull the crown out to the **second click position** (farthest out). The second hand will stop.
2. Turn the crown to move the hour and minute hands clockwise until the desired time is set. Ensure the AM/PM is correctly set if your watch has a 24-hour indicator or if setting the date.
3. Push the crown back into the **normal operating position**.

2. Setting the Date and Day

The watch features sub-dials for day and date display.

1. Pull the crown out to the **first click position**.
2. Turn the crown **clockwise** to adjust the date.
3. Turn the crown **counter-clockwise** to adjust the day of the week.
4. Avoid setting the date or day between 9:00 PM and 3:00 AM, as this can interfere with the automatic date change mechanism. If you need to adjust during this period, first set the time outside this window, adjust the date/day, then reset the time.
5. Push the crown back into the **normal operating position**.

3. 24-Hour International Time Display

The watch includes a sub-dial for 24-hour international time. This sub-dial typically synchronizes with the main time display and does not require separate adjustment. It serves as an AM/PM indicator for the main time.

MAINTENANCE

1. Cleaning Your Watch

- Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and perspiration.
- For silicone straps, a mild soap and water solution can be used with a soft brush, then rinse thoroughly and dry completely.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or strap material.

2. Water Resistance

Your GUESS GW0334G1 watch is water resistant to 30 meters (100 feet). This means it is suitable for splashes or brief immersion in water.

- **Do not** operate the crown or pushers when the watch is wet or submerged in water.
- **Not suitable** for swimming, bathing, diving, or prolonged water activities.
- Exposure to hot water (e.g., showers, saunas) can compromise water resistance seals.

3. Battery Replacement

The watch is powered by one Lithium Metal battery. When the battery runs low, the watch may stop or the second hand may skip.

- Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.
- Do not attempt to replace the battery yourself, as this may damage the watch and void the warranty.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running intermittently.	Battery is depleted.	Have the battery replaced by a professional watch technician.
Time is incorrect.	Crown is not fully pushed in, or time was not set correctly.	Ensure the crown is fully pushed in. Re-set the time following the "Setting the Time" instructions.

Problem	Possible Cause	Solution
Date/Day is incorrect.	Date/Day was not set correctly or was set during the restricted period.	Re-set the date/day following the "Setting the Date and Day" instructions. Avoid setting between 9 PM and 3 AM.
Condensation under the crystal.	Exposure to extreme temperature changes or compromised water resistance.	Contact a professional watch service center immediately. Do not attempt to open the watch.

SPECIFICATIONS

- Model Number:** GW0334G1
- Brand:** GUESS
- Movement:** Quartz
- Case Material:** Stainless Steel
- Case Diameter:** 46mm
- Crystal:** Mineral Glass
- Strap Material:** Silicone (Black textured)
- Water Resistance:** 30 meters (100 feet) - Suitable for splashes or brief immersion. Not for swimming or bathing.
- Functions:** Hour, Minute, Second, Day, Date, 24-hour International Time Display
- Battery:** 1 Lithium Metal battery (included)

WARRANTY INFORMATION

GUESS watches typically come with a limited warranty covering manufacturing defects. The specific terms and duration of the warranty may vary by region and purchase location.

For detailed warranty information, including coverage, exclusions, and how to make a claim, please refer to the warranty card included with your watch or visit the official GUESS Watches website. Keep your proof of purchase for warranty service.

CUSTOMER SUPPORT

Should you have any questions, require assistance with your watch, or need to arrange for service, please contact GUESS customer support.

- Visit the official GUESS Watches website for contact information and service center locations.
- Refer to your purchase documentation for specific regional support details.

