

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Amazon Basics](#) /
- › [Amazon Basics Tilt TV Wall Mount User Manual](#)

Amazon Basics AM61TL

Amazon Basics Tilt TV Wall Mount User Manual

MODEL: AM61TL

Brand: Amazon Basics

1. PRODUCT OVERVIEW

The Amazon Basics Tilt TV Wall Mount is designed to securely hold flat-panel televisions ranging from 32 to 86 inches, with a maximum weight capacity of 150 lbs (68 KG). It features a tilt range of +10° to -5° for optimal viewing angles and extends 2.3 inches from the wall for a low-profile appearance. This mount is compatible with concrete, brick, and wood stud walls (16 & 24 inch studs) and supports VESA patterns from 200x100 MM through 600x400 MM.

Key Features:

- Supports TVs from 32 to 86 inches and up to 150 lbs (68 KG).
- Compatible with VESA patterns from 200x100 MM to 600x400 MM.
- Adjustable tilt range from +10° to -5° for comfortable viewing.
- Low-profile design, extending only 2.3 inches from the wall.
- Suitable for concrete, brick, and wood stud walls (16 & 24 inch studs).
- Includes all necessary mounting hardware, mounting template, and user manual.



Figure 1: Amazon Basics Tilt TV Wall Mount (Front View)

2. SETUP AND INSTALLATION

Before beginning installation, ensure you have all components and tools listed in the user manual. It is recommended to have at least two people for safe installation, especially when mounting the TV.

2.1. Check Compatibility and Included Parts

Verify that your TV's size, weight, and VESA pattern are within the mount's specifications. Also, confirm that your wall type is suitable for this mount.



Figure 2: Compatibility details including VESA patterns, TV size/weight, and wall types.

What's included

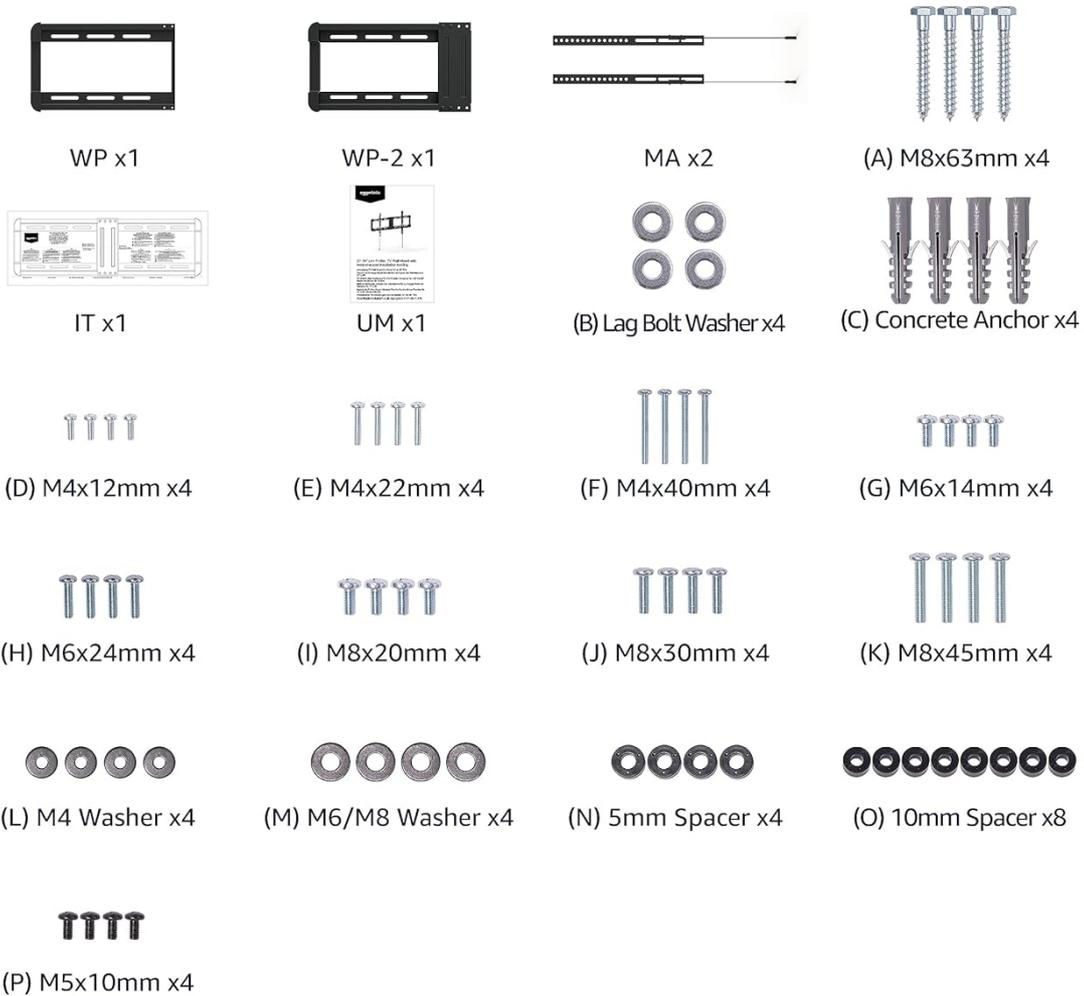


Figure 3: All hardware and components included with the Amazon Basics Tilt TV Wall Mount.

2.2. Prepare the Wall

1. Locate wall studs (for wood stud walls) using a stud finder. Mark the center of the studs. For concrete or brick walls, ensure the wall is solid and capable of supporting the TV's weight.
2. Tape the provided mounting template to the wall at your desired TV height, ensuring it is level.
3. Drill pilot holes through the marked points on the template. Use a 1/4 inch (6.5 mm) drill bit for wood studs and a 3/8 inch (9.5 mm) drill bit for concrete/masonry.


Mounting Template For Easy Installation

amazon basics

(EN) INSTALLATION TEMPLATE
(FR) GABARIT DE POSE
(DE) INSTALLATIONSSCHABLONE
(IT) SCHEMA DI INSTALLAZIONE
(ES) PLANTILLA DE INSTALACION
(NL) INSTALATIESCHABLON
(日本語) 取り付けテンプレート

ASIN: B09WQHQ6, B09WSDQDK

(EN) Check Level Line (FR) Ligne de Niveau (DE) Horizontaler Ausrichtungspfeil (IT) Verificare che la scherma sia parallela al suolo (ES) Analice la línea de nivel (NL) Controleer de waterpaslijn (日本語) 水平ラインを確認して下さい

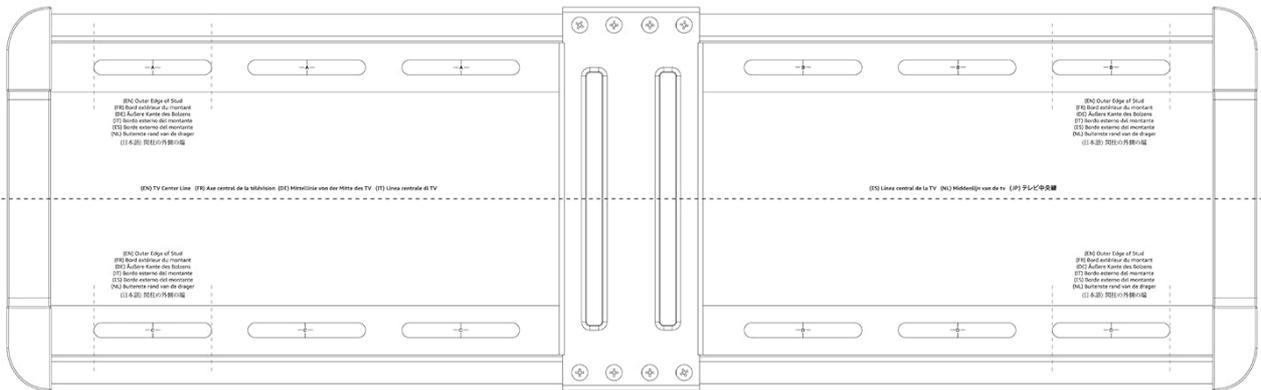

(EN) MOUNTING TO WOOD STUDS:
Wood studs should be 16" x 4" or equivalent.
16" x 17" (41 mm x 43 mm)
Original hole is mounted to 16" x 4" wood studs that are spaced 16" and 24" apart.
SEE INSTALLATION GUIDE FOR MASONRY INSTALLATIONS

- Using a stud finder, locate the edges of wall studs and mark stud edges with a pencil as shown in the installation guide.
- Center installation template over studs, align all pencil marks "16", "24", and "36" with pencil marks. Use a level to ensure the template is straight.
- Use fully drilled four holes through appropriate points "16", "24", and "36".
- Install lag screws (2) for wood, with wall plugs (2) for concrete through the four holes and tighten securely.

(FR) MONTAGE SUR DES MONTANTS EN BOIS :
Les montants en bois doivent mesurer 2 pouces x 4 pouces, ou au minimum 1,5 pouce x 3,5 pouce (38 mm x 89 mm).
Les trous d'origine sont montés sur des montants en bois de 16 pouces x 4 pouces, espacés de 16 pouces et de 24 pouces de centre à centre.
VOIR LE GUIDE D'INSTALLATION POUR LES INSTALLATIONS DE MAÇONNERIE

- À l'aide d'un détecteur de montants, repérez les bords des montants du mur et marquez-les à l'aide d'un crayon, comme illustré dans le Guide d'installation.
- Centrez le gabarit de montage sur les montants, alignez les points de perçage "16", "24" et "36" avec les marques de crayon. Utilisez un niveau afin de vous assurer que le gabarit est droit.
- Percez avec soin quatre trous à travers les points correspondants "16", "24" et "36".
- Installez les vis à tremp (2) pour le bois, avec des chevilles (2) pour le béton à travers les quatre trous et serrez fermement.

(DE) MONTAGE AN HOLZSTÄNDERN:
Die Holzständer sollten 2 Zoll x 4 Zoll, mindestens jedoch 1,5 Zoll x 3,5 Zoll (38 mm x 89 mm) groß sein.
Kantennäherung: Die Bohrlöcher sind auf Holzständer mit 16 Zoll x 4 Zoll und 24 Zoll im Abstand montiert.
SIEHE MONTAGEANLEITUNG ZUR MONTAGE AN MAUERWERK

- Vorarbeiten Sie einen Rahmen, um die Kanten der Holzständer zu finden, und markieren Sie die Kanten mit einem Bleistift, wie in der Montageanleitung dargestellt.
- Zentrieren Sie die Installationsvorrichtung über den Ständern und richten Sie die Bohrmarken "16", "24" und "36" an den Bleistiftmarkierungen aus. Verwenden Sie ein Wasserwaage, um sicherzustellen, dass die Schablone gerade ist.
- Bohren Sie sorgfältig vier Löcher durch die entsprechenden Punkte "16", "24" und "36".
- Stecken Sie die Zugschrauben (2) für Holz in die Bohrlöcher (2) für Beton in die vier Löcher und ziehen Sie sie fest an.

(IT) MONTAGGIO SU MONTANTI DI LEGNO:
I montanti di legno devono essere di 2 pollici x 4 pollici o equivalenti.
1,5 pollici x 3,5 pollici (38 mm x 89 mm)
Prodotti originali sono montati su montanti di legno da 16 pollici x 4 pollici distanzati di 16 e 24 pollici di centro.
VEDERE LA GUIDA PER L'INSTALLAZIONE IN MURATURA

- Utilizzando un rilevatore di materiali, individuate i bordi dei montanti a parete e segnate i bordi con una matita come mostrato nella Guida per l'installazione.
- Centrare la griglia sul montante. Allineare i punti di perforazione "16", "24", "36" con segni a matita. Utilizzare una livella per assicurare che la griglia sia dritta.
- Praticare con cautela quattro fori negli appositi punti "16", "24", "36".
- Installare le viti a fissaggio (2) per legno, con tasselli (2) per cemento, attraverso i quattro fori e serrare saldamente.

(ES) MONTAJE EN MONTANTES DE MADERA:
Los montantes de madera deben ser de 2 pulgadas x 4 pulgadas, y como mínimo 1,5 pulgadas x 3,5 pulgadas (38 mm x 89 mm).
El producto original se monta en montantes de madera de 16 pulgadas x 4 pulgadas, espaciados 16 pulgadas y 24 pulgadas del centro.
CONSULTE LA GUÍA DE INSTALACION PARA INSTALACIONES DE ALBAÑILERIA

- Con un localizador de vigas, localice los bordes de los montantes y márcalos con un lápiz, tal y como se indica en la Guía de instalación.
- Centre la plantilla de instalación en los montantes, alineando todos los perforaciones "16", "24", "36" con las marcas de lápiz que un nivel para asegurarse de que la plantilla está recta.
- Practique con cuidado cuatro agujeros por los puntos adecuados "16", "24", "36".
- Instale los tornillos (2) de fijación (2) para madera, con tacos (2) para cemento en los cuatro agujeros y apriete firmemente.

(NL) MONTAGE OP HOUTEN DRAGERS:
De houten dragers moeten 2 inch x 4 inch, en minimaal 1,5 inch x 3,5 inch (38 mm x 89 mm) zijn.
Oorspronkelijk is het product gemonteerd op houten dragers die 16 inch x 4 inch zijn met een afstand tussen de dragers van 16 inch en 24 inch.
RAADPLEEG DE INSTALLATIEGIDS VOOR MONTAGE OP METSELWERK

- Localiseer de randen van de houten dragers met behulp van een balkzoeker en markeer de randen met een potlood zoals aangegeven in de installatiehandleiding.
- Plaats de installatieplaat in het midden van de dragers, bring de boorputten "16", "24", "36" in lijn met de markering die een niveau voor controle van de platte lijn.
- Boor voorzichtig vier gaten door de punten "16", "24", "36".
- Bring draagbouten (2) voor hout, met muurpluggen (2) voor beton in de vier gaten aan en draai de bouten vast.

(日本語) 壁への取り付け:
壁の木材は、2インチ x 4インチ、最小1.5インチ x 3.5インチ (38mm x 89mm) である必要があります。
元製品は16インチ x 4インチの木材に16インチと24インチの間隔で取り付けられています。
石壁への取り付けについては取り付けガイドをご覧ください。

- 壁の木材の位置を確認するために、木材探知機を使用して壁の木材の位置を特定し、鉛筆でマークします。
- 取り付けテンプレートを木材の中心に合わせ、鉛筆のマーク "16", "24", "36" と一致するようにします。レベルを使用して、テンプレートが真っ直ぐであることを確認します。
- 適切なポイント "16", "24", "36" にドリルで4つの穴を開け、壁に穴を開けます。
- 木材用のドラッグボルト (2) を穴に挿入し、コンクリート用の壁プラグ (2) を穴に挿入し、しっかりと締め付けます。

Figure 4: The included mounting template simplifies marking drill points on the wall.

Fits 16" / 18" / 24" Studs Spacing

Do not mount on Drywall alone

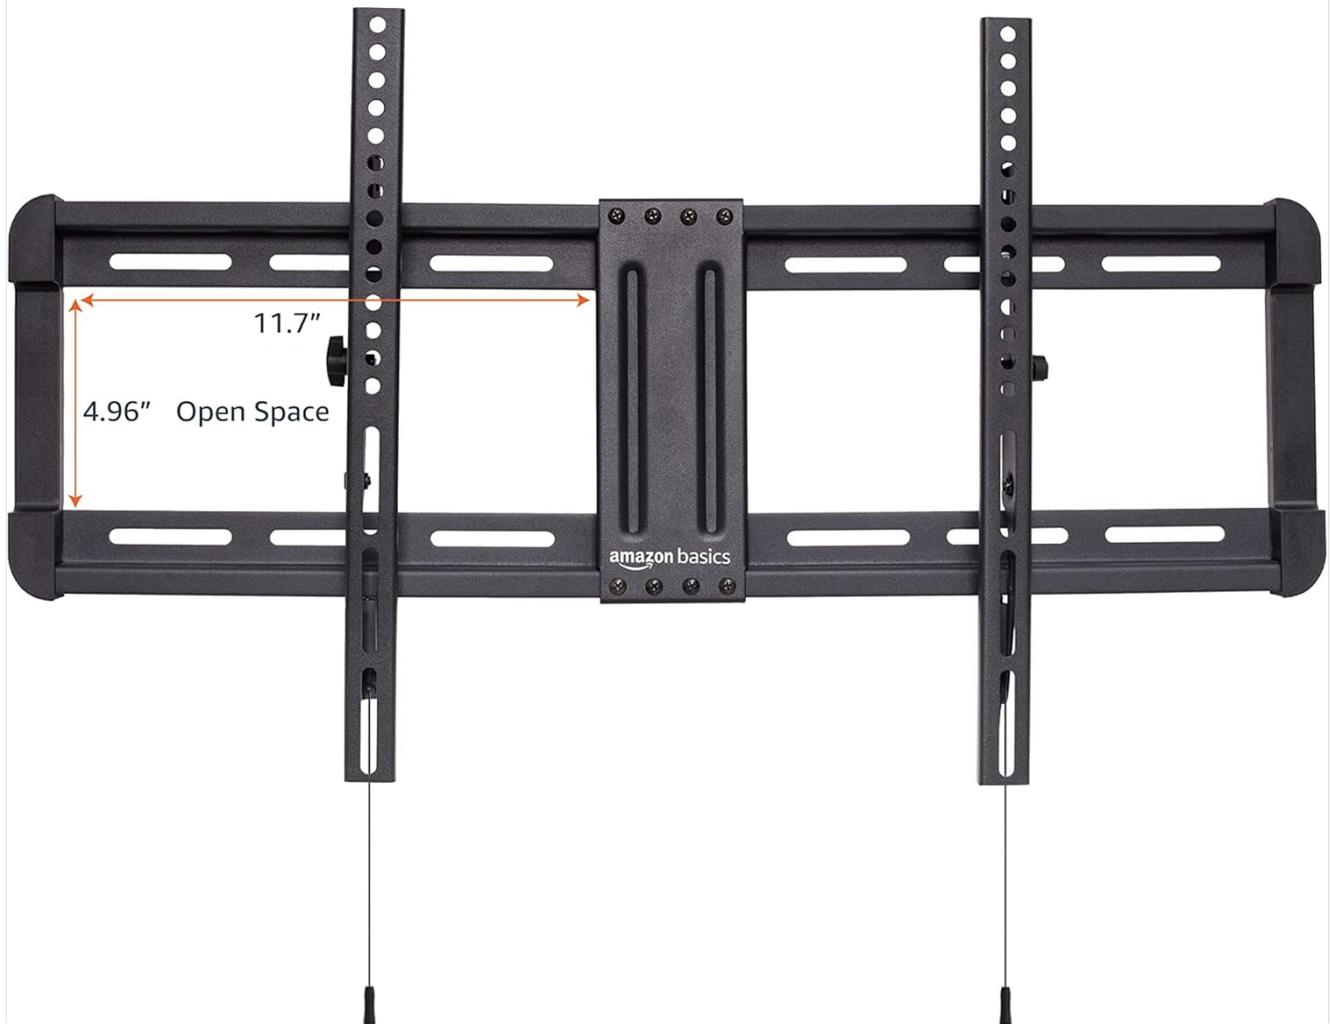


Figure 5: Illustration showing compatibility with 16", 18", and 24" stud spacing. Do not mount on drywall alone.

2.3. Attach Wall Plate

Secure the wall plate to the wall using the provided lag bolts and washers. For concrete/masonry walls, insert the concrete anchors into the pilot holes before securing the lag bolts.

2.4. Attach TV Brackets

Attach the vertical TV brackets to the back of your television using the appropriate screws and spacers from the included hardware. Ensure the brackets are securely fastened and evenly spaced.

Available VESA Patterns

FITS VESA SIZE 200x100 mm, 200x200 mm, 300x200 mm, 300x300 mm, 400x200 mm, 400x300 mm, 400x400 mm, 600x400 mm

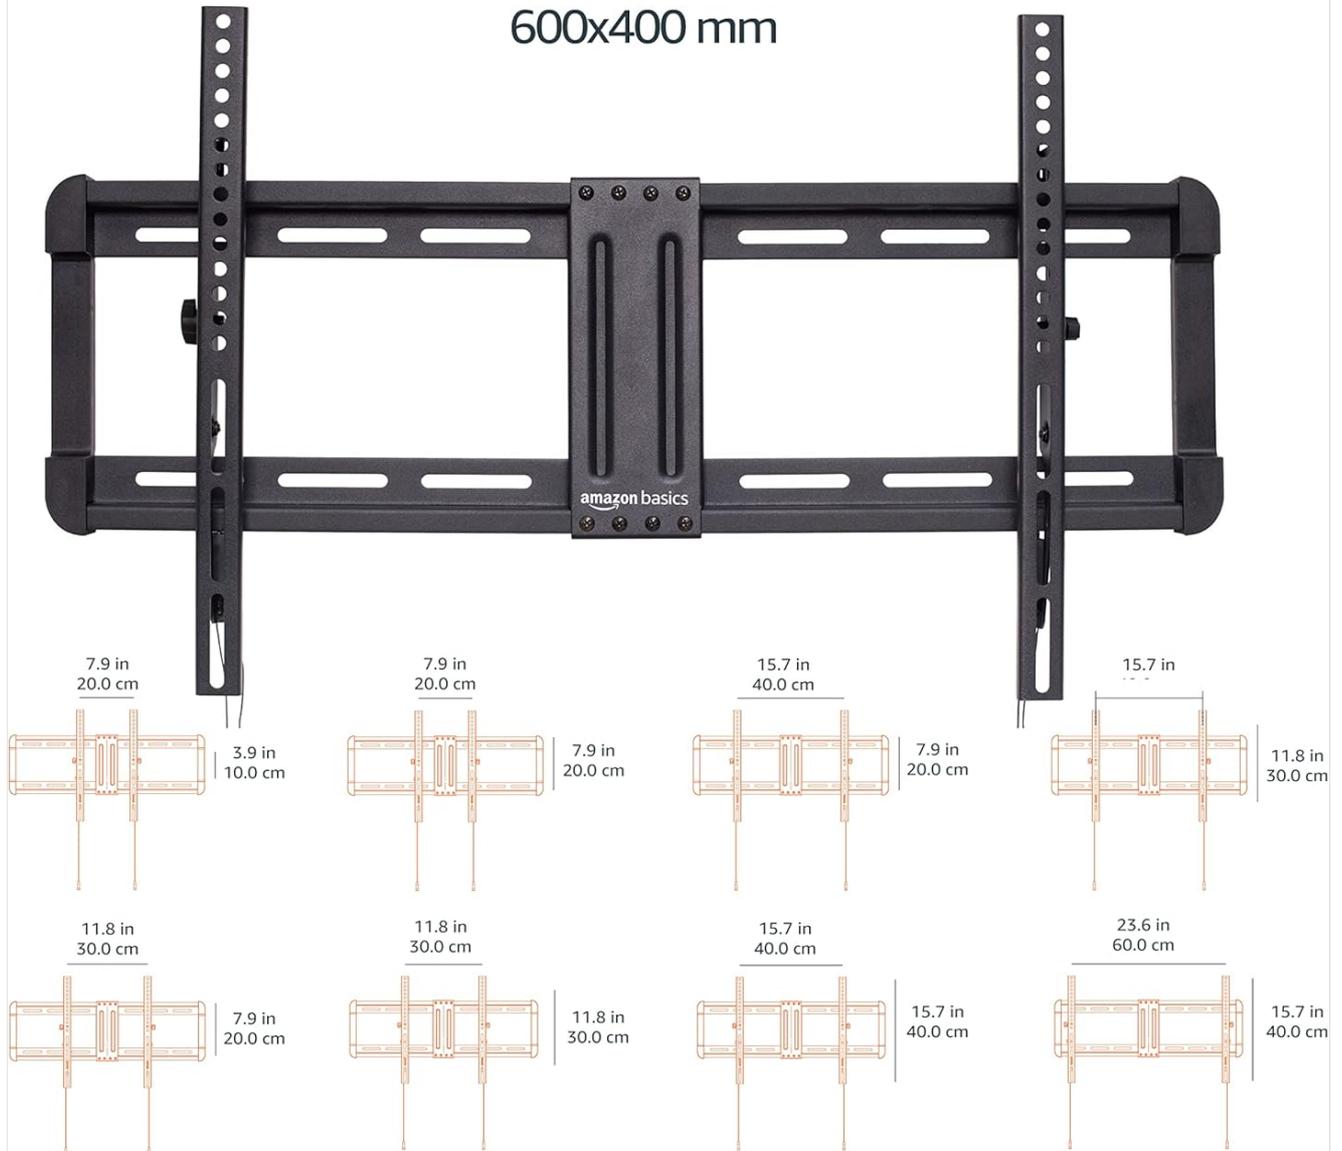


Figure 6: Various VESA patterns supported by the TV mount, indicating screw hole configurations.

2.5. Mount the TV

Carefully lift the television and hook the TV brackets onto the wall plate. Ensure both brackets are properly seated on the wall plate. Secure the TV to the wall plate using the locking screws or pull-down cords, if applicable, to prevent accidental dislodging.

2.6. Installation Video Guide

For a visual step-by-step guide, please watch the official "How To Use" video provided by the seller:

Your browser does not support the video tag.

Video 1: Official "How To Use" guide for the Amazon Basics Tilt TV Wall Mount.

3. OPERATING INSTRUCTIONS

This tilt TV wall mount allows for easy adjustment of your TV's viewing angle. The tilt mechanism provides a range of +10° to -5°.

3.1. Adjusting the Tilt Angle

To adjust the tilt, gently push or pull the bottom of the TV to achieve the desired angle. The mount is designed to hold its position once adjusted. For fine-tuning the level of the TV after installation, you can loosen or tighten the two screws on the bracket as indicated in the user manual.

4. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV wall mount.

- **Cleaning:** Use a soft, dry cloth to wipe down the mount. Avoid abrasive cleaners or solvents that could damage the finish.
- **Periodic Inspection:** Periodically check all screws and bolts to ensure they are tight and secure. Over time, vibrations or movement may cause them to loosen.
- **Weight Limit:** Do not exceed the maximum weight capacity of 150 lbs (68 KG).

5. TROUBLESHOOTING

If you encounter issues during or after installation, refer to the following common solutions:

Problem	Possible Cause	Solution
TV is not level.	Wall plate not level; TV brackets not adjusted.	Ensure the wall plate is perfectly level during installation. Use the fine-tuning screws on the TV brackets to make minor adjustments.
Mount feels unstable.	Screws/bolts are loose; incorrect wall type used; insufficient stud support.	Tighten all mounting screws and bolts. Verify that the mount is installed into solid wood studs or appropriate masonry. Do not install on drywall alone.
TV does not tilt smoothly.	Tightened too much; mechanism needs lubrication.	Check if any screws on the tilt mechanism are overtightened. Apply a small amount of silicone-based lubricant if necessary.

If the issue persists, contact customer support.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	17.6 x 13.11 x 2.64 inches
Item Weight	5.85 pounds
Item Model Number	AM61TL
Mounting Type	Wall Mount
Movement Type	Tilt
Brand	Amazon Basics
Material	Alloy Steel
Maximum Compatible Size	86 Inches
Minimum Compatible Size	32 Inches
Color	Black
Compatible Devices	Television
Maximum Tilt Angle	15 Degrees (+10° to -5°)
UPC	840095882743

7. WARRANTY INFORMATION

For detailed warranty information regarding your Amazon Basics Tilt TV Wall Mount, please refer to the official Warranty document available for download:

[Download Warranty \(PDF\)](#)

8. SUPPORT

If you require further assistance or have questions not covered in this manual, please refer to the full User Manual or contact Amazon Basics customer support.

[Download Full User Manual \(PDF\)](#)

For direct support, please visit the [Amazon Basics Store](#) on Amazon.com.

