

Manuals.plus /
› Lexon /
› Lexon TYKHO 3 Wireless Bluetooth Speaker and FM Radio User Manual

Lexon LA119N1

Lexon TYKHO 3 Wireless Bluetooth Speaker and FM Radio User Manual

Model: LA119N1 | Brand: Lexon

INTRODUCTION

The Lexon TYKHO 3 is an iconic wireless Bluetooth speaker and FM radio, designed for both style and functionality. Its splash-proof rubber finish makes it suitable for various environments, from poolside lounging to bathroom use. Enjoy your favorite FM stations or stream music wirelessly via Bluetooth. This manual provides comprehensive instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your device.



Front view of the Lexon TYKHO 3 Wireless Bluetooth Speaker and FM Radio in black, showcasing its iconic design with the speaker grille, control buttons, and antenna.

WHAT'S IN THE BOX

Upon unboxing your Lexon TYKHO 3, please ensure all the following components are present:

- Lexon TYKHO 3 FM radio - 3W Bluetooth® speaker
- Micro-USB charging cable

BATTERIE LONGUE DURÉE

PROFITEZ DE 20H D'AUTONOMIE



The Lexon TYKHO 3 speaker shown with its Micro-USB charging cable connected to the charging port on the side.

SETUP

Initial Charging

Before first use, fully charge your Lexon TYKHO 3. The device is powered by a Lithium Polymer battery.

1. Locate the Micro-USB charging port on the side of the speaker.
2. Connect the provided Micro-USB cable to the speaker and the other end to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. A full charge takes approximately 4 hours.
4. Once fully charged, the indicator light may change or turn off, depending on the model. Disconnect the charging cable.



The Lexon TYKHO 3 speaker connected to a power source via its Micro-USB cable for charging.

OPERATING INSTRUCTIONS

Power On/Off

- To power on the device, press and hold the power button located on the top.
- To power off, press and hold the power button again.

FM Radio Mode

- Press the "FM" button to switch to FM radio mode.
- Extend the antenna for optimal reception.
- Use the tuning dial (or +/- buttons if applicable) to scan for and select your desired radio station. The frequency range is 88-108MHz.

Bluetooth Speaker Mode

- Press the "Bluetooth" button (often indicated by a Bluetooth icon) to switch to Bluetooth mode. The device will enter pairing mode, indicated by a flashing light or audible prompt.
- On your smartphone or other Bluetooth-enabled device, enable Bluetooth and search for "TYKHO 3" in the list of available devices.
- Select "TYKHO 3" to pair. Once paired, the device will confirm with a sound or steady light.
- You can now play audio from your connected device through the TYKHO 3 speaker. The Bluetooth range is approximately 10 meters.



The Lexon TYKHO 3 speaker positioned next to a smartphone, illustrating its use in Bluetooth mode for playing music.

Volume Control

- Use the volume buttons (+ and -) on the speaker to adjust the audio level.

MAINTENANCE

To ensure the longevity and optimal performance of your Lexon TYKHO 3, follow these maintenance guidelines:

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as they may damage the rubber finish.
- **Splash-Proof Feature:** The TYKHO 3 is splash-proof, meaning it can withstand light splashes of water. Do not submerge the device in water or expose it to heavy rain. Ensure the charging port cover is securely closed when not charging to maintain splash resistance.
- **Storage:** Store the speaker in a cool, dry place when not in use. Avoid extreme temperatures.

- **Battery Care:** For best battery life, avoid fully discharging the battery frequently. Recharge the device regularly, especially if it will be stored for an extended period.

RÉSISTANTE AUX ÉCLABOUSSURES

EMPORTEZ-LA PARTOUT AVEC VOUS



The Lexon TYKHO 3 speaker with water droplets on its surface, highlighting its splash-proof capability, ideal for use in bathrooms or near water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted.	Charge the device using the provided Micro-USB cable for at least 4 hours.

Problem	Possible Cause	Solution
Cannot connect via Bluetooth.	Device is not in pairing mode; Bluetooth is off on source device; too far from source device.	Ensure the TYKHO 3 is in Bluetooth pairing mode. Turn Bluetooth off and on again on your source device. Move the source device closer to the speaker (within 10m).
Poor FM radio reception.	Antenna not extended; weak signal area; interference.	Fully extend the antenna. Try moving the speaker to a different location.
Sound quality is poor or distorted.	Volume too high; low battery; interference.	Reduce the volume. Recharge the speaker. Move away from other electronic devices that may cause interference.

SPECIFICATIONS

Feature	Detail
Product Dimensions	5.51"L x 1.77"W x 3.19"H (14 x 4.5 x 8.1 cm)
Item Weight	10.8 ounces (306 grams)
Model Number	LA119N1
Connectivity Technology	Bluetooth
Tuner Technology	FM
Frequency Range	FM 88-108MHz
Bluetooth Range	10 meters (33 feet)
Power Source	Battery Powered (1 Lithium Polymer battery required)
Battery Life	Up to 20 hours
Charging Time	Approximately 4 hours
Special Features	Portable, Rechargeable, Splash-proof
Manufacturer	Lexon
Country of Origin	China

UNE ICÔNE DU DESIGN



114 x 4,5 x 8,1 cm
5.5 x 1.7 x 3.1"

The Lexon TYKHO 3 speaker in a light blue color, with its dimensions (5.5 x 1.7 x 3.1 inches) clearly indicated on the image.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Lexon website or contact your retailer. Keep your proof of purchase for any warranty claims.

You can also find additional support and product information by visiting the [Lexon Store on Amazon](#).

A PDF version of the user manual is available [here](#).

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What should I do if my Lexon TYKHO 3 (LA119N1) turns on and off by itself or switches to Bluetooth mode unexpectedly?

If your Lexon TYKHO 3 (LA119N1) is turning on or off spontaneously or switching modes without input, it is likely experiencing a power, interference, or hardware issue. Please try the following troubleshooting steps: Check the...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B09JYFBQ7L>

More documents and user manuals: <https://manuals.plus/>