

[Manuals.plus](#) /

› [Jimmyjane](#) /

› JIMMYJANE Chroma Vibrator Instruction Manual

Jimmyjane Chroma JJ10509

JIMMYJANE Chroma Vibrator Instruction Manual

Model: Chroma JJ10509

INTRODUCTION

This manual provides instructions for the safe and effective use of your JIMMYJANE Chroma Vibrator. Please read this manual thoroughly before first use and retain it for future reference. The Chroma is a whisper-quiet, bath-friendly vibrator designed for personal use, featuring multiple vibration modes and intensity levels.



Image: The JIMMYJANE Chroma Vibrator in Pink, showcasing its sleek design.

PRODUCT COMPONENTS

Your JIMMYJANE Chroma package includes the following items:

- JIMMYJANE Chroma Vibrator
- USB Charging Cord
- Instruction Manual (this document)

JIMMYJANE

YOUR PLEASURE
IS OUR PASSION

Image: An overview of the Chroma vibrator and its optional interchangeable sleeves (sold separately).

SETUP

Initial Charging

Before first use, fully charge your Chroma vibrator. A full charge provides approximately 45 minutes of run time.

1. Locate the charging port on the device.
2. Connect the provided USB charging cord to the vibrator and a compatible USB power source (e.g., computer USB port, USB wall adapter).
3. The indicator light will illuminate during charging and turn off or change color when fully charged.
4. Disconnect the charging cord once charging is complete.

First Use Preparation

Clean the device thoroughly before its initial use. Refer to the "Maintenance" section for detailed cleaning instructions.

OPERATING INSTRUCTIONS

The Chroma vibrator features simple, intuitive controls.



- Five vibration modes
- Five intensity levels
- Waterproof

Image: The control panel of the Chroma vibrator, featuring power, plus, and minus buttons.

Power On/Off

- To turn on: Press and hold the power button for two (2) seconds. The device will start on a medium vibrational power setting.
- To turn off: Press and hold the power button for two (2) seconds.

Adjusting Intensity Levels

The Chroma offers 5 intensity levels.

- To increase intensity: Press the **plus (+)** button.
- To decrease intensity: Press the **minus (-)** button.

Changing Vibration Modes

The Chroma features 5 distinct vibration modes.

- To cycle through modes: Press the **power button** briefly (do not hold).

Using with Chroma Sleeves (Optional)

The Chroma vibrator is compatible with JIMMYJANE Chroma Sleeves (sold separately) for varied experiences. To use, simply slide the Chroma vibrator into the sleeve until it is securely seated.



The Chroma With Interchangeable Sleeves

The Chroma is the perfect sleek on-the-go vibrator you need in your rotation. Made with clean, safe non-porous aluminum and intuitive controls, the Chroma is fully submersible and bath-friendly. Easily slip it into one of our three different silicone Chroma Sleeves for a myriad of toe-curling experiences.

Image: Demonstrating how to insert the Chroma vibrator into an interchangeable silicone sleeve.

MAINTENANCE

Cleaning

The Chroma vibrator is bath-friendly and made from clean, safe non-porous aluminum, making it easy to clean.

- Always clean the device before and after each use.
- Wash with warm water and a mild, toy-safe soap.
- Rinse thoroughly and pat dry with a lint-free cloth.
- Do not use harsh chemicals, alcohol-based cleaners, or petroleum-based lubricants, as these can damage the material.

Storage

- Store the Chroma in a clean, dry, and cool place, away from direct sunlight and extreme temperatures.
- Keep it separate from other toys made of different materials to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device using the provided USB cable. Ensure the charging indicator light is active.
Device does not charge.	Faulty charging cable or power source.	Try a different USB port or power adapter. Ensure the charging cable is securely connected.

Problem	Possible Cause	Solution
Vibrations are weak or inconsistent.	Low battery or internal issue.	Fully charge the device. If the problem persists after charging, contact customer support.

SPECIFICATIONS

Model Name	Chroma
Model Number	JJ10509
Dimensions	5.5 x 0.8 x 0.7 inches
Weight	6.74 ounces
Material	Aluminum Alloy & Silicone
Vibration Modes	5
Intensity Levels	5
Battery Life	Up to 45 minutes per charge
Charging	USB Rechargeable
Water Resistance	Bath-friendly (fully submersible)

WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries not covered in this manual, please contact JIMMYJANE customer service. Refer to the product packaging or the official JIMMYJANE website for contact details.

Manufacturer: JIMMYJANE, Inc.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question