

[Manuals.plus](#) /

› [Audio To Go](#) /

› Audio To Go Sydkik L Bluetooth Speaker User Manual

Audio To Go Sydkik L

Audio To Go Sydkik L Bluetooth Speaker User Manual

Model: Sydkik L

1. INTRODUCTION

This manual provides instructions for the safe and efficient operation of your Audio To Go Sydkik L Bluetooth Speaker. Please read this manual thoroughly before using the product and retain it for future reference.

2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble or modify the speaker. This will void the warranty.
- Ensure the charging port cover is securely closed when near water to maintain IPX6 water resistance.
- Use only the provided or a certified charging cable.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Sydkik L Bluetooth Speaker.



Figure 3.1: Front View. This image displays the front of the Sydkik L speaker, featuring a large perforated grille covering the audio drivers and the integrated carry handle at the top.



Figure 3.2: Side View with Charging Port. This image shows the side of the speaker, highlighting the rubberized flap covering the charging port, essential for maintaining its waterproof rating.



Figure 3.3: Top Controls. This image illustrates the top panel of the speaker, where the control buttons for power, volume, and playback are located.



Figure 3.4: Back Panel. This image shows the back of the speaker, displaying the model number (SYDKIK-L), input voltage (5V=2A), and battery capacity (7200mAh).

4. SETUP AND OPERATION

4.1 Charging the Speaker

1. Locate the charging port on the side of the speaker (refer to Figure 3.2).
2. Open the protective rubber flap.
3. Connect the charging cable to the speaker and a suitable USB power adapter (Input: 5V=2A).

4. The charging indicator light will illuminate. Once fully charged, the light will change or turn off.
5. Close the rubber flap securely after charging to maintain water resistance.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button (usually marked with a power symbol) on the top panel until you hear an audible prompt or see an indicator light.
- **To Power Off:** Press and hold the Power button again until the speaker powers down.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in pairing mode (indicated by a flashing LED, refer to product for specific light behavior).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Sydkik L" from the list of found devices.
4. Once paired, the speaker will provide an audible confirmation, and the LED indicator will change to a solid light.
5. The speaker will automatically attempt to reconnect to the last paired device when powered on.

4.4 Audio Playback and Controls

- **Play/Pause:** Press the Play/Pause button (often a triangle or two vertical bars) to start or stop audio playback.
- **Volume Control:** Use the Volume Up (+) and Volume Down (-) buttons to adjust the speaker's volume.
- **Skip Tracks:** Press and hold (or double-press, depending on model) the Volume Up (+) button for next track, and Volume Down (-) for previous track. Refer to specific button markings.

5. MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight when not in use for extended periods.
- **Water Resistance:** The speaker is IPX6 waterproof, meaning it can withstand powerful water jets. It is not designed for submersion. Ensure all port covers are sealed before exposure to water.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode. Turn device Bluetooth off and on. Move device closer to speaker (within 10 meters).
No sound.	Volume too low; speaker not connected; audio source issue.	Increase speaker and device volume. Re-pair Bluetooth. Check audio source on your device.
Sound distortion.	Volume too high; low battery; interference.	Reduce volume. Charge speaker. Move away from other electronic devices.

7. SPECIFICATIONS

- **Model:** Sydkik L
- **Brand:** Audio To Go
- **Connectivity Technology:** Bluetooth
- **Speaker Type:** Portable Bluetooth Speaker
- **Power Source:** Battery Powered
- **Wattage:** 80 watts
- **Battery:** 7200mAh
- **Input:** 5V=2A
- **Water Resistance:** IPX6
- **Product Dimensions:** 15.24 x 5.08 x 5.08 cm (6 x 2 x 2 inches)
- **Item Weight:** 1.73 kg (3.81 Pounds)
- **Compatible Devices:** Laptop, Smartphone

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Audio To Go website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

