

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SOAIY](#) /

› [SOAIY MC7 Karaoke Microphone User Manual](#)

SOAIY MC7

SOAIY MC7 Karaoke Microphone User Manual

Model: MC7

INTRODUCTION

Thank you for choosing the SOAIY MC7 Karaoke Microphone. This manual provides essential information for the safe and effective use of your device. Please read it thoroughly before operation and retain it for future reference.

PACKAGE CONTENTS

Upon unpacking, please ensure all items are present and in good condition:

- SOAIY MC7 Karaoke Microphone (Blue)
- Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW



Figure 1: SOAIY MC7 Karaoke Microphone. This image displays the microphone's overall design, including the blue mesh microphone head, the white control panel with various buttons, and the blue handle.

The SOAIY MC7 is a portable karaoke microphone designed for entertainment. It features an integrated speaker and controls for audio playback, microphone volume, and vocal effects.

Control Panel Layout



Figure 2: Control Panel. This image provides a detailed view of the microphone's control buttons, including those for volume, track navigation, and mode selection.

The control panel typically includes the following functions:

- **Power/Mode Button:** To turn the device on/off and switch between operating modes (e.g., Bluetooth, AUX).
- **Microphone Volume Control:** Buttons to increase or decrease the microphone's vocal volume.
- **Echo/Reverb Adjustment:** Buttons to add or reduce the echo effect for vocals.
- **Music Playback Controls:** Buttons for previous track, next track, and play/pause (when connected to a music source).
- **Other Sound Effects/Modes:** Additional buttons for various vocal effects or accompaniment adjustments.

SETUP

Charging the Microphone

1. Locate the charging port on the microphone (usually at the bottom or side).
2. Connect the provided charging cable to the microphone and a suitable USB power adapter (not included) or a computer USB port.
3. The charging indicator light will illuminate (color may vary, e.g., red) during charging and turn off or change color when fully charged.
4. Allow approximately 2-3 hours for a full charge before first use.

Powering On/Off

- **To Power On:** Press and hold the Power/Mode button for a few seconds until the indicator light turns on and you hear a prompt.
- **To Power Off:** Press and hold the Power/Mode button again for a few seconds until the indicator light turns off and you hear a prompt.

OPERATING INSTRUCTIONS

Bluetooth Connection

1. Ensure the microphone is powered on and in Bluetooth pairing mode (it may automatically enter this mode upon power-on, indicated by a flashing light or voice prompt).
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select "SOAIY MC7" (or similar name) from the list.
4. Once connected, you will hear a confirmation sound or voice prompt.
5. You can now play music from your device through the microphone's speaker and sing along.

Using the Microphone for Karaoke

- **Music Playback:** Use the Play/Pause, Previous Track, and Next Track buttons on the microphone to control your music.
- **Microphone Volume:** Adjust the microphone's vocal volume using the dedicated volume buttons.
- **Echo Effect:** Use the Echo/Reverb buttons to add or reduce the echo effect to your voice for a more immersive karaoke experience.
- **Mode Switching:** Press the Power/Mode button briefly to cycle through available modes (e.g., Bluetooth, AUX, TF Card if supported).

AUX Connection (if applicable)

If your microphone supports an AUX input, you can connect it to an audio source using a 3.5mm audio cable (not included). Switch the microphone to AUX mode and play audio from your connected device.

MAINTENANCE

- Cleaning:** Wipe the microphone with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Storage:** Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use for extended periods.
- Water Exposure:** This device is not waterproof. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Microphone does not power on.	Low battery.	Charge the microphone fully.
Cannot connect via Bluetooth.	Microphone not in pairing mode; device Bluetooth off; too far from device.	Ensure microphone is in pairing mode. Turn on Bluetooth on your device. Move microphone closer to your device (within 10 meters). Forget previous connections on your device and try pairing again.
No sound from microphone.	Microphone volume too low; mute function active; incorrect mode.	Increase microphone volume. Check if microphone is muted. Ensure the correct operating mode is selected.
Music playback issues.	Low battery; poor Bluetooth connection; music source issue.	Charge the microphone. Re-establish Bluetooth connection. Check music playback on your source device.

SPECIFICATIONS

- Brand:** SOAIY
- Model:** MC7
- Color:** Blue
- Connectivity:** Bluetooth (may also support AUX, TF card)
- Power Source:** Rechargeable Battery
- Included Components:** Microphone, Charging Cable

SAFETY INFORMATION

- Do not disassemble or modify the device.
- Keep away from extreme temperatures, direct sunlight, and open flames.
- Avoid dropping or subjecting the device to strong impacts.
- Do not expose to water or other liquids.
- Dispose of the device and its battery responsibly according to local regulations.

