

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [soges](#) /

› [soges Electric Height Adjustable Standing Desk \(Model S1-CZYF-ELT-120W\) User Manual](#)

soges S1-CZYF-ELT-120W

soges Electric Height Adjustable Standing Desk

Model: S1-CZYF-ELT-120W

User Manual

1. INTRODUCTION

Thank you for choosing the soges Electric Height Adjustable Standing Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Please read it thoroughly before use and retain it for future reference.



Image 1.1: The soges Electric Height Adjustable Standing Desk in a typical office environment, showcasing its modern design and functionality.

This electric standing desk is designed to offer a flexible workspace, allowing you to switch between sitting and standing positions effortlessly. It features a sturdy construction, a quiet motor, and a smart control panel with memory presets for personalized height adjustments.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Ensure all components are securely fastened before use.
- Keep children and pets away from the desk during operation.
- Do not place hands or objects near moving parts during height adjustment.
- Do not overload the desk. The maximum load capacity is **80 kg (176 lbs)**.
- Avoid spilling liquids on the control panel or motor components.
- Disconnect power before cleaning or maintenance.
- Use only the provided power adapter.

- If any unusual noise or malfunction occurs, discontinue use immediately and contact customer support.

3. PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, please contact customer service.

- Desktop (120cm x 60cm)
- Desk Legs/Frame Components
- Motor and Control Box
- Control Panel with LED Display
- Power Adapter and Cable
- Headphone Hook
- Wire Eyelets (2)
- Assembly Hardware (screws, tools if included)
- User Manual

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. It is recommended to have two people for assembly. Clear a spacious area and lay out all components before starting.

1. **Prepare the Desktop:** Carefully unbox the desktop and place it upside down on a soft, clean surface to prevent scratches.
2. **Attach the Legs:** Securely attach the desk legs to the designated mounting points on the underside of the desktop using the provided hardware. Ensure all screws are tightened.
3. **Install the Motor and Control Box:** Mount the motor and control box to the frame according to the instructions provided with the hardware. Connect the motor cables to the control box.
4. **Connect the Control Panel:** Attach the control panel to the front edge of the desk or a convenient location, and connect its cable to the control box.
5. **Install Accessories:**
 - **Headphone Hook:** Attach the headphone hook to the side of the desk frame as desired.
 - **Wire Eyelets:** Insert the wire eyelets into the pre-drilled holes on the desktop to manage cables.
6. **Cable Management:** Route all cables neatly using any included cable ties or clips to prevent tangling and ensure safe operation.
7. **Final Check:** Once assembled, carefully flip the desk upright. Ensure stability and that all connections are secure.

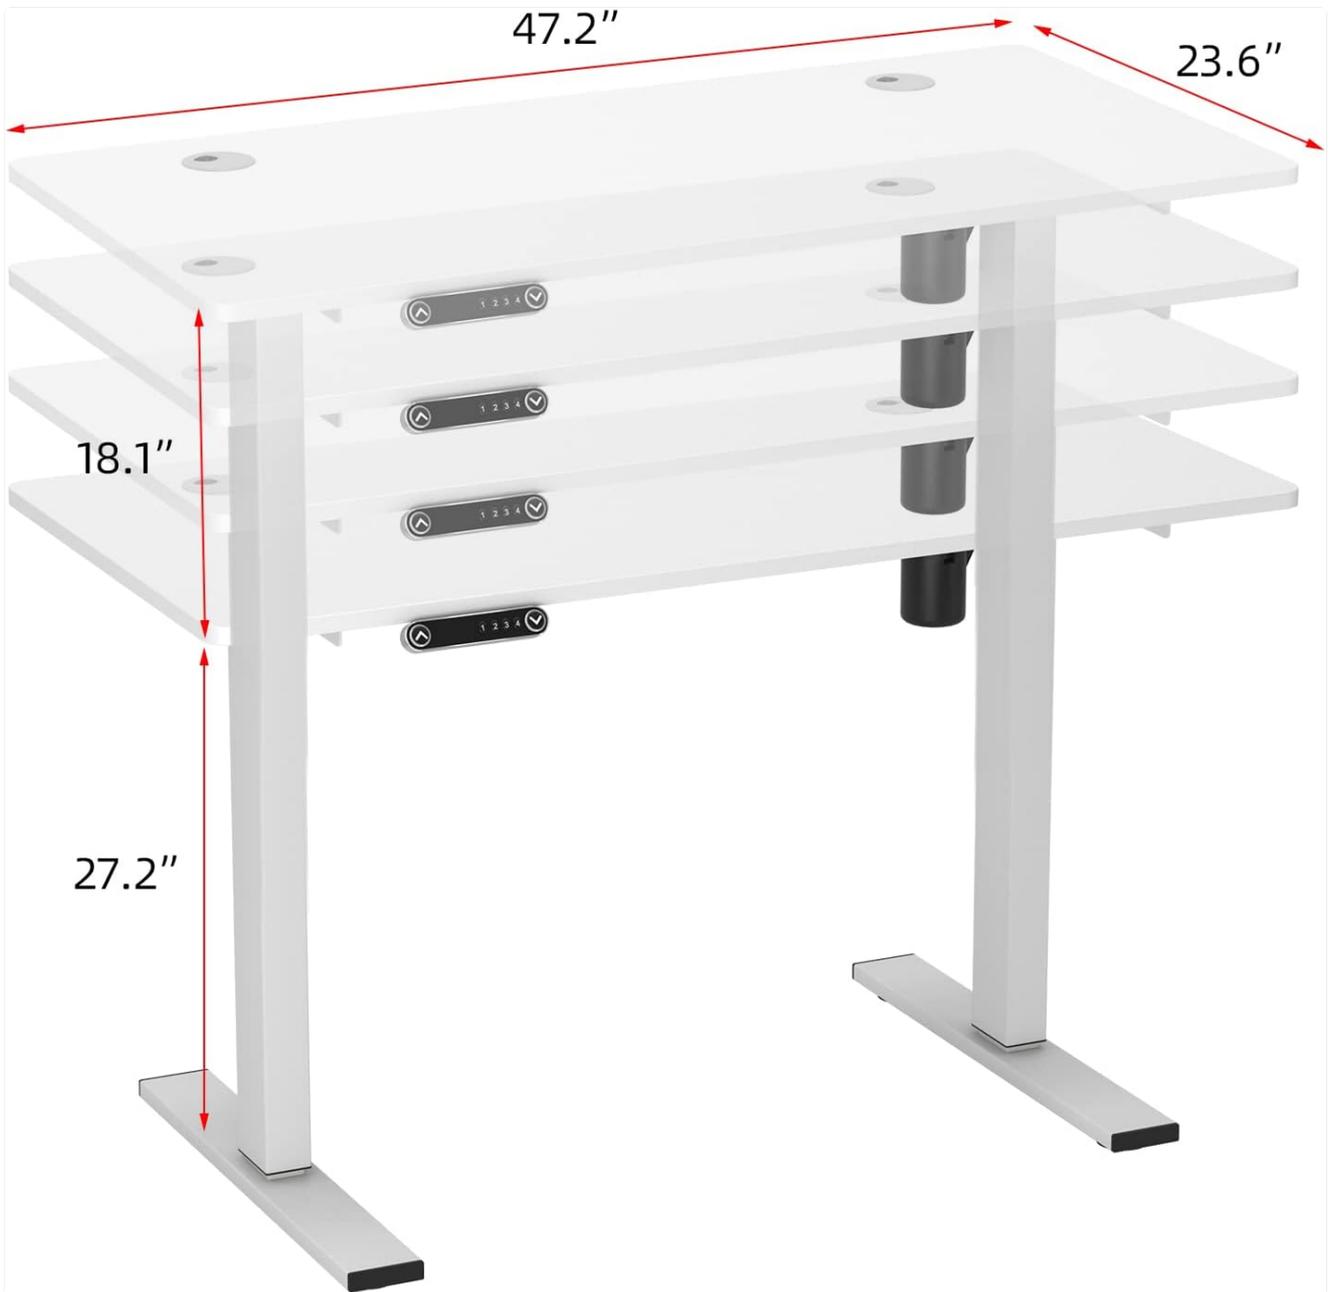


Image 4.1: Dimensional overview of the desk, indicating a desktop size of approximately 47.2 inches (120cm) by 23.6 inches (60cm).



DESK HOOKS

Each hook can hook your bag, headphones, and jacket very easily.

Image 4.2: Detail of the desk hook, designed for hanging headphones, bags, or jackets.

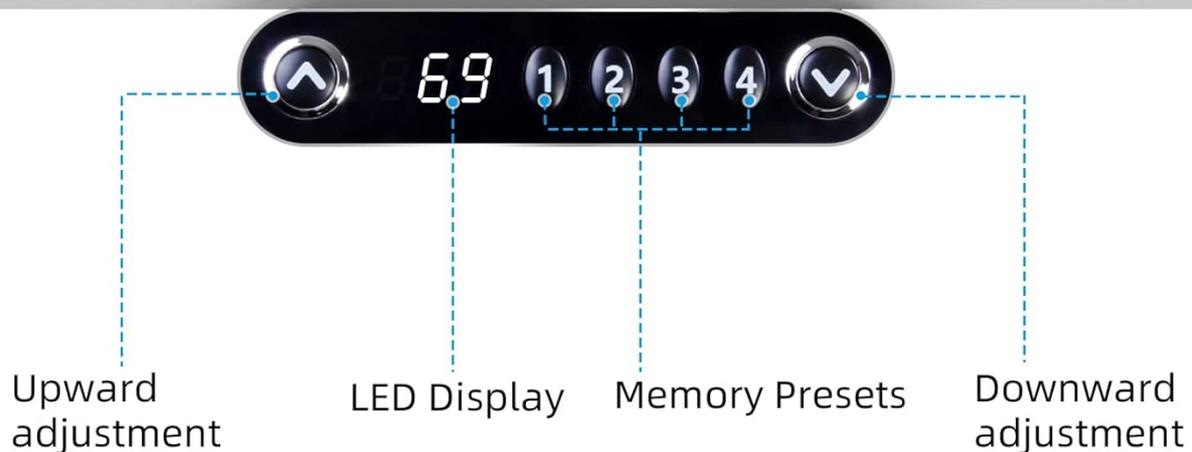


Image 4.3: Detail of a wire eyelet on the desktop, used for organizing and routing cables.

5. OPERATING INSTRUCTIONS

The soges Electric Standing Desk features an intuitive control panel for easy height adjustment and memory preset functions.

5.1. Control Panel Overview



ALL-IN-ONE KEYPAD

Raise and lower your desk in jiffy.

Image 5.1: The 'ALL-IN-ONE KEYPAD' control panel, showing buttons for upward adjustment, LED display, memory presets (1-4), and downward adjustment.

- **Upward Adjustment Button (^):** Press and hold to raise the desk height.
- **Downward Adjustment Button (v):** Press and hold to lower the desk height.
- **LED Display:** Shows the current desk height in centimeters. The display automatically turns off when the desk is stationary to conserve power.
- **Memory Presets (1, 2, 3, 4):** Allows you to save and recall up to four preferred desk heights.

5.2. Adjusting Desk Height

To adjust the desk height:

- Press and hold the **Upward Adjustment Button (^)** to raise the desk.
- Press and hold the **Downward Adjustment Button (v)** to lower the desk.
- Release the button when the desired height is reached. The desk adjusts at a speed of approximately 20 mm/s.

5.3. Setting Memory Presets

To save a preferred height to a memory preset:

1. Adjust the desk to your desired height using the Upward/Downward Adjustment Buttons.
2. Press and hold one of the **Memory Preset Buttons (1, 2, 3, or 4)** until the LED display flashes or indicates that the height has been saved.
3. The height is now stored. To recall this height, simply press the corresponding Memory Preset Button. The desk will automatically move to the saved position.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your desk:

- **Cleaning:** Wipe the desk surface and frame with a soft, damp cloth. Avoid abrasive cleaners or solvents. Ensure the desk is unplugged before cleaning.
- **Cable Management:** Periodically check that all cables are securely routed and not pinched or damaged.
- **Fasteners:** Occasionally check and tighten any loose screws or bolts on the frame and legs.
- **Motor:** The motor is maintenance-free. Do not attempt to open or lubricate it.

7. TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk does not move.	No power, loose cable, overload.	Check power connection. Ensure all cables are securely plugged in. Reduce weight on the desk.
Desk moves unevenly or makes unusual noise.	Obstruction, uneven load, loose components.	Check for obstructions. Redistribute weight evenly. Inspect and tighten any loose screws.
Memory presets not working.	Presets not saved correctly.	Re-save the desired heights following the instructions in Section 5.3.
LED display is off.	Power saving mode.	This is normal. The display turns off when stationary. Press any button to activate.

If the problem persists after attempting these solutions, please contact soges customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Model Number	S1-CZYF-ELT-120W
Desktop Dimensions (W x D)	120 cm x 60 cm (47.24" x 23.62")
Height Adjustment Range	70 cm to 118 cm (27.56" to 46.45")
Adjustment Speed	20 mm/s
Maximum Load Capacity	80 kg (176 lbs)
Material	Splicing board desktop, sturdy metal frame

Feature	Detail
Color	White
Motor Type	Electric, low noise
Memory Presets	4 programmable heights
Assembly Required	Yes
Item Weight	29.12 Kilograms (64.2 lbs)

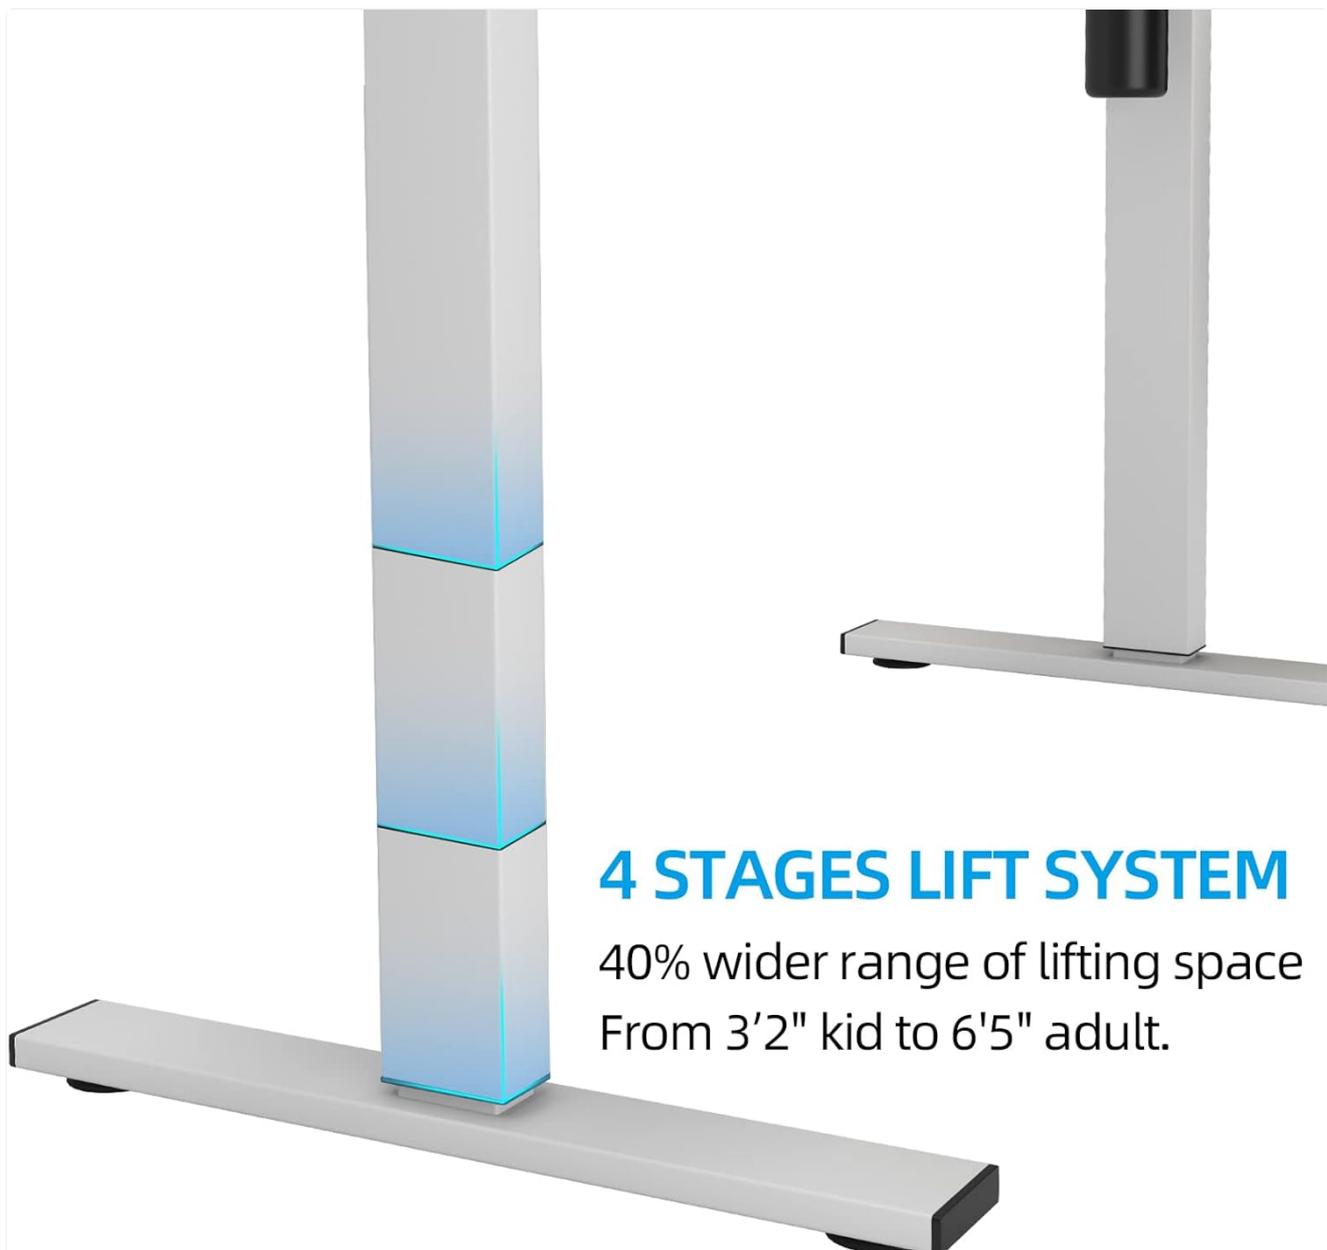


Image 8.1: Illustration of the 4-stage lift system, providing a wide range of height adjustment.

9. WARRANTY AND SUPPORT

soges products are manufactured to high-quality standards. For warranty information, technical support, or replacement parts, please refer to the warranty card included with your purchase or contact soges customer service directly. Please have your model number (S1-CZYF-ELT-120W) and purchase details ready when contacting support.

