



Manuals.plus /

› IRIS USA /

› IRIS USA WOOZOO 1500-Watt Oscillating Portable Ceramic Heater (Model 302929) User Manual

IRIS USA 302929

IRIS USA WOOZOO 1500-Watt Oscillating Portable Ceramic Heater

Model: 302929

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your IRIS USA WOOZOO 1500-Watt Oscillating Portable Ceramic Heater. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1: IRIS USA WOOZOO Portable Ceramic Heater with Remote

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- **Tip-Over Protection:** The unit is equipped with a safety feature that automatically shuts off the heater if it is tipped over or tilted at an angle of 45 degrees or more.
- **Child Safety Lock:** To prevent unintended operation by children, a child lock feature is included. Activate/deactivate by pressing and holding two specific buttons on the control panel.
- **Automatic Shutdown:** For energy saving and safety, the heater will automatically shut down after 3 hours of continuous operation.
- Do not cover the heater or block air inlets/outlets.
- Do not use in wet or damp locations.

- Keep flammable materials at least 3 feet (0.9 meters) away from the heater.

PRODUCT OVERVIEW

Components

- Main Heater Unit
- Remote Control
- Power Cord

Key Features


- **Motion Sensor:** Activates the heater when motion is detected, contributing to energy efficiency.
- **Three Fan Modes:** Fan Only, Medium Heat (750W), Turbo Heat (1500W).
- **Oscillation:** 80-degree oscillation for wider heat distribution.
- **Adjustable Vent:** 45-degree adjustable vent to direct airflow.
- **Built-in Thermometer:** Displays current room temperature.



Motion Sensor

When motion is detected,
the heater activates, effectively
heating up your living space.

Figure 2: Motion Sensor Detail

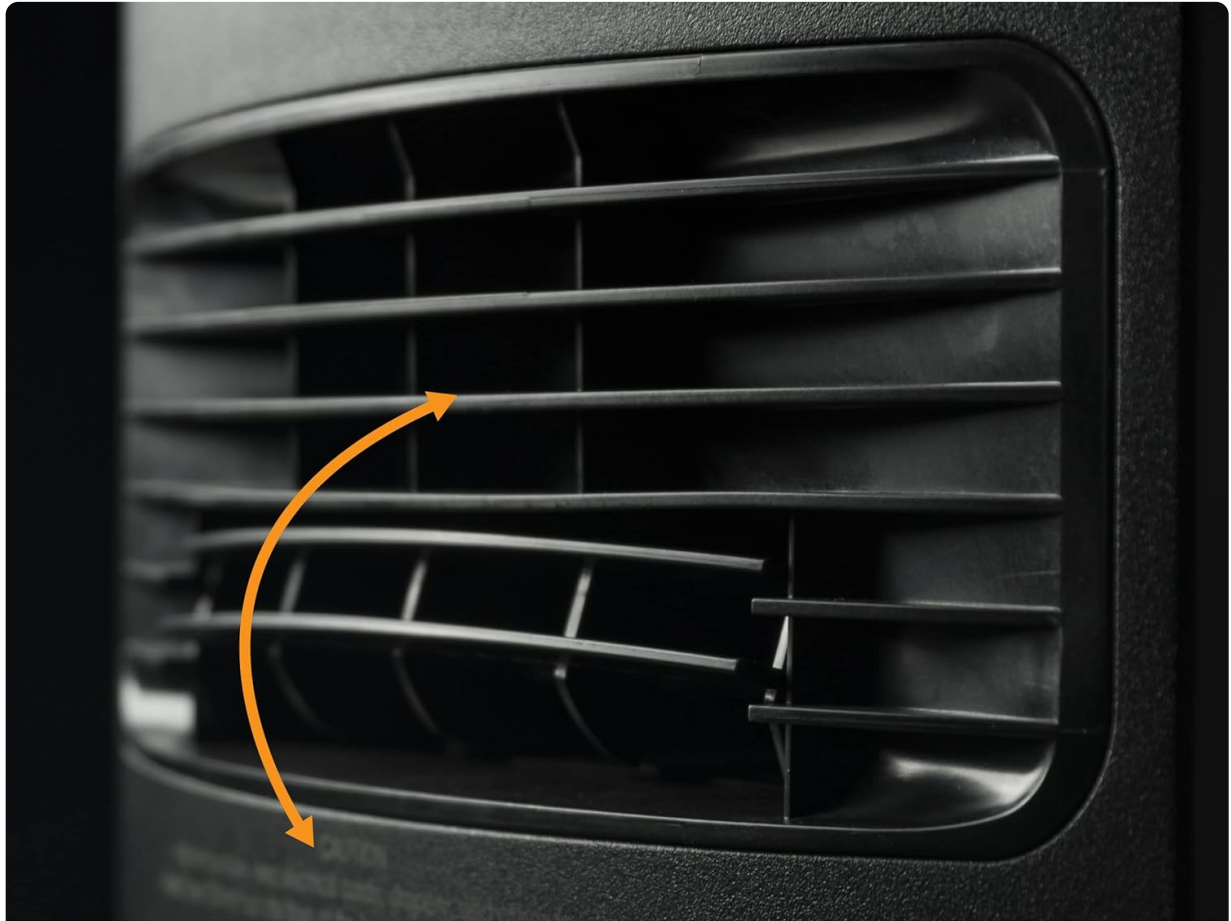

45° Adjustable Vent

Aim the heat where you need it with the adjustable vent.

Figure 3: 45-degree Adjustable Vent

SETUP

1. **Unpack:** Carefully remove the heater and all components from the packaging. Retain packaging for storage or return if necessary.
2. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 3 feet (0.9 meters) of clear space around the heater from walls, furniture, and other objects. Do not place it directly under a power outlet.
3. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet. Ensure the outlet is in good condition and not overloaded.

OPERATING INSTRUCTIONS

Control Panel and Remote

The heater can be operated using the control panel on the unit or the included remote control.



Three Convenient Modes

Choose from three modes: fan, medium, or turbo, to get the best heat coverage for your space. In your living room or bedroom, from circulating to rapid heating, WOOZOO has you covered.

Figure 4: Heater Control Panel



Fully Functional Remote

No need to get up! The included remote puts the controls at your fingertips, wherever you are.

Figure 5: Remote Control

Power On/Off

- Press the **Power On/Off** button on the control panel or remote to turn the heater on or off.

Selecting a Mode

Press the **Mode** button repeatedly to cycle through the available settings:

- **Fan Only (45 Watts):** Circulates air without heat.
- **Medium Heat (750 Watts):** Provides moderate heating.
- **Turbo Heat (1500 Watts):** Provides maximum heating for faster warm-up.



Figure 6: Full Room Circulation

Oscillation Function

- Press the **Oscillate** button to activate or deactivate the 80-degree oscillation feature, which helps distribute heat more evenly across a room.



Oscillating Base

With 80-degree oscillation, the WOOZOO Ceramic Fan Heater heats up the whole room evenly. So you can stay warm and comfy all winter, with no more cold spots.

Figure 7: Oscillating Heat Distribution

Motion Sensor

- The motion sensor automatically turns the heater on when movement is detected, and off after a period of inactivity. This feature helps conserve energy.
- Motion sensor settings (e.g., 90 sec, 5 min, 10 min) can be adjusted via the control panel.

Child Safety Lock

- To activate the child lock, press and hold two specific buttons on the control panel simultaneously for 3 seconds. Repeat the action to deactivate.



Tip-Over Protection and Child Lock

If tipped over 45 degrees or further, the unit will shut off. Child lock disables buttons to keep children safe from inadvertent setting changes.

Figure 8: Tip-Over Protection and Child Lock

Built-in Thermometer

- The digital display on the control panel shows the current room temperature.



Built-in Thermometer

Keeps you up to date on the temperature in the room, so you can keep it just where you want it.

Figure 9: Built-in Thermometer Display

MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your heater.

1. **Cleaning:** Always unplug the heater before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or allow water to drip into the heater.
2. **Storage:** If storing the heater for an extended period, unplug it and allow it to cool completely. Store it in a cool, dry place, preferably in its original packaging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	No power, tip-over switch activated, child lock engaged.	Check power connection. Ensure heater is upright. Deactivate child lock.
Heater turns off unexpectedly.	Tip-over protection activated, automatic 3-hour shutdown, overheating.	Ensure heater is on a stable surface. Heater may have reached 3-hour limit. Unplug and allow to cool if overheating is suspected.
Motion sensor not responding.	Obstruction, incorrect setting.	Ensure sensor is clear. Check motion sensor settings on control panel.
Remote control not working.	Dead batteries, obstruction.	Replace remote batteries. Ensure clear line of sight to heater.

SPECIFICATIONS

Feature	Detail
Brand	IRIS USA
Model Number	302929
Power Output	1500 Watts (Turbo), 750 Watts (Medium), 45 Watts (Fan Only)
Voltage	120 Volts (AC)
Amperage	12.5 Amps
Heating Coverage	Up to 200 Sq. Ft.
Dimensions (D x W x H)	10.24" x 7.28" x 16.14"
Item Weight	6.83 pounds
Special Features	Motion Detection, Oscillating, Remote Control, Tip-Over Protection, Child Safety Lock, Built-in Thermometer, Automatic 3-hour Shutdown
Color	Black
Indoor/Outdoor Usage	Indoor

WARRANTY

This IRIS USA WOOZOO heater comes with a **1-Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, modification, or unauthorized repair.

SUPPORT

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact IRIS USA customer support. Refer to the product packaging or the official IRIS USA website for current contact information.