

Oursson MO4530/DC

Oursson MO4530/DC Mini Electric Oven Instruction Manual

Model: MO4530/DC | Brand: Oursson

INTRODUCTION

Thank you for purchasing the Oursson MO4530/DC Mini Electric Oven. This appliance is designed for versatile cooking, featuring convection and rotisserie functions within a compact 45-liter capacity. To ensure safe and efficient operation, please read this instruction manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and other similar materials.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place sealed or airtight containers in the oven.
- Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.

New CE Safety Standart

Safe & Economical



Image: Safety temperature indicators for the Oursson Mini Electric Oven. Shows interior at 200°C, housing at 60°C, glass at 70°C, and knobs at 50°C, indicating safe exterior temperatures during operation.

PRODUCT OVERVIEW

The Oursson MO4530/DC is a 45-liter mini electric oven designed for versatile cooking. It features convection heating for even cooking and a rotisserie function for roasting. The oven is equipped with double-glazed glass for improved insulation and an interior light for visibility.

Components and Accessories

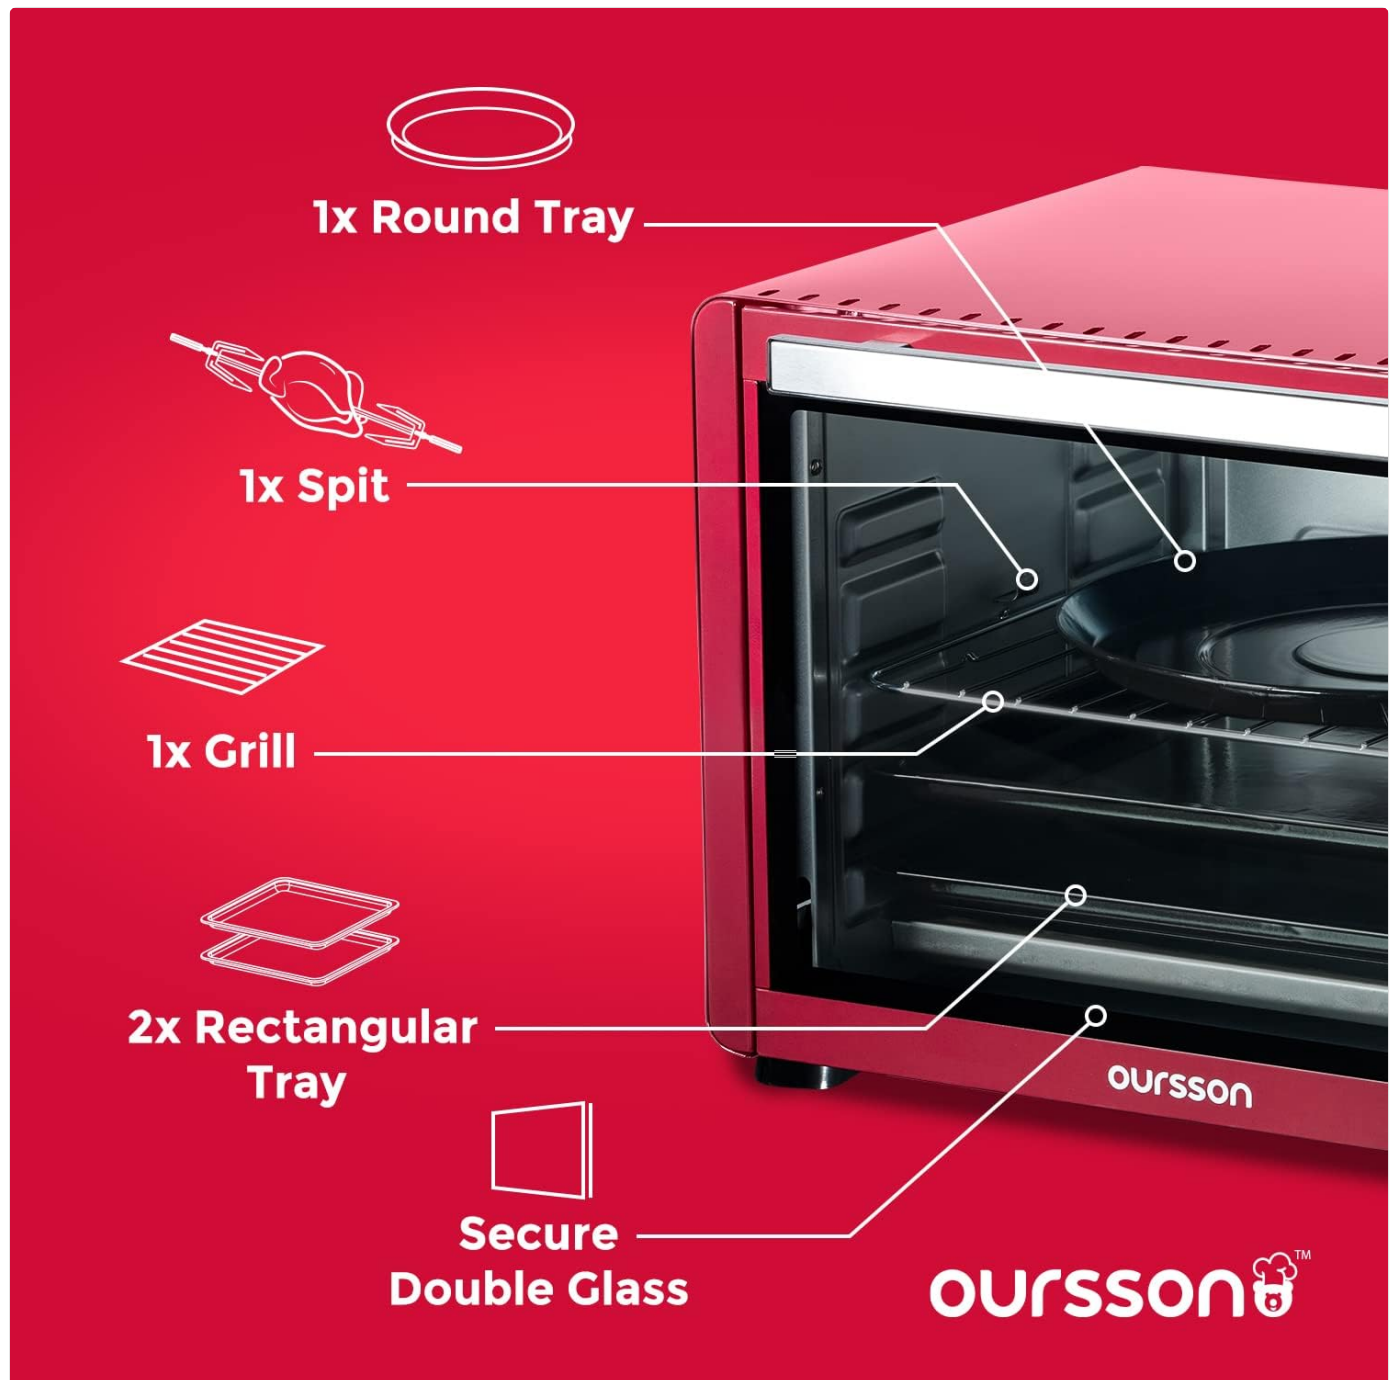


Image: Diagram showing the Oursson Mini Electric Oven and its included accessories: one round tray, one rotisserie spit, one grill rack, two rectangular trays, and secure double glass.

- **Oven Unit:** Main body with heating elements, fan for convection, and interior light.
- **Control Panel:** Knobs for temperature, function, and timer settings.
- **Oven Door:** Double-glazed glass door for insulation and visibility.
- **Round Tray (1x):** For baking pizzas, quiches, or other round dishes.
- **Rotisserie Spit (1x):** For roasting whole chickens or other meats.
- **Grill Rack (1x):** For grilling, toasting, or placing baking dishes.
- **Rectangular Trays (2x):** For baking, roasting, or collecting drips.

Control Panel



Image: Close-up of the Oursson Mini Electric Oven's control panel, highlighting the power, convection, temperature regulation (100-230°C), 12 cooking modes, and 60-minute timer knobs.

1. **Temperature Control Knob:** Adjusts temperature from 100°C to 230°C.
2. **Function Selector Knob:** Selects cooking modes (e.g., top heat, bottom heat, convection, rotisserie). The oven offers 12 distinct cooking modes.
3. **Timer Knob:** Sets cooking time up to 60 minutes. Features an automatic stop function.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the oven and all accessories from the packaging. Remove any protective films or stickers.

2. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate clearance (at least 10-15 cm) on all sides for proper ventilation. Do not place near flammable materials.
3. **Cleaning:** Before first use, wipe the interior and accessories with a damp cloth. Wash the trays and grill rack in warm, soapy water, rinse, and dry thoroughly.
4. **Initial Burn-in:** To eliminate any manufacturing odors, operate the empty oven for approximately 15 minutes at the maximum temperature (230°C) using the 'Bake' function. Ensure the room is well-ventilated during this process. A slight odor or smoke is normal during initial use.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications on the appliance rating label.

OPERATING INSTRUCTIONS

General Operation

1. **Preheating:** Turn the Function Selector Knob to the desired cooking mode and the Temperature Control Knob to the desired temperature. Allow the oven to preheat for 10-15 minutes.
2. **Placing Food:** Carefully place food into the oven using the appropriate tray or rack.
3. **Setting Time:** Turn the Timer Knob to the desired cooking duration (up to 60 minutes). The oven will automatically turn off when the timer reaches zero.
4. **Monitoring:** Use the interior light to monitor cooking progress without opening the door.
5. **Removing Food:** Once cooking is complete, carefully remove food using oven mitts.

Cooking Modes and Functions

The Oursson MO4530/DC offers 12 cooking modes, including:

- **Top Heating:** Ideal for browning and crisping the top of dishes.
- **Bottom Heating:** Suitable for baking bases, such as pies and pizzas.
- **Top & Bottom Heating:** Standard baking for most dishes.
- **Convection (Fan-Assisted):** Activates the internal fan for even heat distribution, reducing cooking time and ensuring uniform results.
- **Rotisserie:** Engages the rotisserie spit for slow, even roasting of poultry or other meats.
- **Convection + Rotisserie:** Combines even heat distribution with rotisserie rotation for perfectly roasted and browned results.
- **Grill:** High heat from the top element for grilling meats, vegetables, or toasting.



Image: Examples of dishes prepared in the oven, including toast, pizza, and grilled chicken, demonstrating the oven's versatility.



Image: Further examples of dishes prepared in the oven, such as roast meat, bread, and cookies, showcasing its capability for various culinary tasks.

Using the Rotisserie Function

The Perfect Flavor Start with the Perfect Electric Oven!

Convection & Rotisserie Included



Image: The Oursson Mini Electric Oven with a whole roasted chicken on the rotisserie spit, illustrating the rotisserie function in use.

1. Prepare the food (e.g., a whole chicken) and secure it onto the rotisserie spit using the forks provided.
2. Insert the pointed end of the spit into the rotisserie drive socket on the right side of the oven interior.
3. Rest the square end of the spit onto the support on the left side.
4. Place a rectangular tray on the bottom rack to catch drips.
5. Select the 'Rotisserie' or 'Convection + Rotisserie' function and set the desired temperature and time.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

1. **Always Unplug:** Before cleaning, ensure the oven is unplugged from the power outlet and has completely cooled down.

- 2. **Exterior Cleaning:** Wipe the exterior surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
- 3. **Interior Cleaning:** Wipe the interior walls with a damp cloth. For stubborn stains, use a non-abrasive oven cleaner designed for conventional ovens. Avoid spraying cleaner directly onto heating elements or the fan.
- 4. **Door Cleaning:** Clean the double-glazed glass door with a glass cleaner or a damp cloth.
- 5. **Accessories:** Wash the grill rack, trays, and rotisserie spit in warm, soapy water. Rinse thoroughly and dry before storing or reusing.
- 6. **Crumb Tray:** Regularly remove and clean the crumb tray (if applicable) to prevent grease buildup and potential fire hazards.
- 7. **Storage:** When not in use, store the oven in a clean, dry place.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure plug is securely in outlet; check circuit breaker; set the timer knob.
Food not cooking evenly.	Incorrect temperature/mode; overcrowding; fan malfunction (convection).	Verify settings; avoid overcrowding; ensure convection fan is operating if selected.
Rotisserie spit not rotating.	Spit not correctly inserted; rotisserie function not selected; food too heavy.	Ensure spit is properly seated in drive socket and support; select rotisserie mode; reduce food weight if necessary.
Excessive smoke during cooking.	Food residue or grease buildup; fatty food.	Clean oven interior and accessories thoroughly; use a drip tray for fatty foods.
Grill racks do not fit securely.	Incorrect placement; manufacturing defect.	Ensure racks are placed on the correct support rails. If issue persists, contact customer support.

SPECIFICATIONS

Very Spacious Interior

Ideal for everyday use

45
Liters



oursson™

Image: Diagram illustrating the dimensions of the Oursson Mini Electric Oven. External dimensions are approximately 55.2 cm (width) x 40 cm (depth) x 36 cm (height). Interior dimensions are approximately 40 cm (width) x 31.5 cm (depth) x 23 cm (height), with a total capacity of 45 liters.

Feature	Detail
Brand	Oursson
Model Number	MO4530/DC
Capacity	45 Liters
Power	2000 Watts
Product Dimensions (D x W x H)	40 cm x 55.2 cm x 36 cm
Material	Metal
Color	Red

Feature	Detail
Temperature Range	100°C - 230°C
Timer	Up to 60 minutes with automatic shut-off
Special Features	Convection, Rotisserie, Interior Light, Double Glazing, Automatic Stop
Control Type	Knobs

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact Oursson customer service directly. Keep your purchase receipt as proof of purchase. You can typically find contact information on the manufacturer's official website or through the retailer where the product was purchased.

© 2024 Oursson. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

