

ZTE 0416Z02HSJJ

ZTE Cymbal U Link II Z2335CC User Manual

Model: 0416Z02HSJJ

1. INTRODUCTION

This user manual provides essential information and instructions for operating your ZTE Cymbal U Link II Z2335CC Unlocked 4G Flip Phone. Please read this manual thoroughly before using your device to ensure proper function and safety. This phone is designed for reliable communication with 4G cellular technology.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or damage to the device. Keep the phone away from water and excessive moisture. Avoid exposing the phone to extreme temperatures. Use only approved batteries, chargers, and accessories. Do not attempt to disassemble or modify the phone.

- Do not use the phone while driving.
- Turn off the phone in restricted areas, such as aircraft or hospitals.
- Dispose of batteries properly according to local regulations.
- Keep the phone out of reach of small children.

3. WHAT'S IN THE BOX

Upon opening the package, verify that all items are present and in good condition:

- ZTE Cymbal U Link II Z2335CC Phone
- Battery
- Charger (may vary by region)
- Quick Start Guide (not included in this manual)

4. PRODUCT OVERVIEW

Familiarize yourself with the physical components of your ZTE Cymbal U Link II Z2335CC phone.



Figure 4.1: Front view of the ZTE Cymbal U Link II Z2335CC when closed, showing the external display with time and status icons.



Figure 4.2: Front view of the ZTE Cymbal U Link II Z2335CC when open, revealing the main screen and the alphanumeric keypad.



Figure 4.3: Back view of the ZTE Cymbal U Link II Z2335CC when closed, showing the textured casing and the ZTE logo.

Key Components:

- **External Display:** Shows time, date, notifications, and signal strength when the phone is closed.
- **Main Display:** The primary screen for navigating menus, viewing messages, and making calls.
- **Keypad:** Alphanumeric keys for dialing and text input, along with navigation and function keys.
- **Camera:** Located on the back of the phone (2MP).
- **Speaker:** For audio output during calls and media playback.
- **Microphone:** For voice input during calls.

- **Charging Port:** USB port for charging the device.
- **3.5 mm Audio Jack:** For connecting headphones.

5. SETUP

5.1. Battery Installation and Charging

1. Remove the back cover of the phone.
2. Insert the battery into the battery compartment, aligning the gold contacts.
3. Replace the back cover.
4. Connect the charger to the phone's USB port and plug it into a power outlet.
5. Allow the phone to charge fully before first use. A full charge provides approximately 8 hours of talk time.

5.2. SIM Card Installation

Your ZTE Cymbal U Link II Z2335CC requires a SIM card to connect to a cellular network. Ensure the phone is powered off before inserting or removing the SIM card.

1. Remove the back cover and battery.
2. Locate the SIM card slot.
3. Insert the SIM card with the gold contacts facing down and the notched corner aligned with the slot.
4. Reinstall the battery and back cover.

5.3. Powering On/Off

- **To Power On:** Press and hold the Power/End Call key until the screen lights up.
- **To Power Off:** Press and hold the Power/End Call key until the power options appear, then select "Power off".

6. OPERATING YOUR PHONE

6.1. Basic Navigation

Use the navigation pad (up, down, left, right) and the center selection key to move through menus and select options. The left and right soft keys perform functions indicated on the screen directly above them.

6.2. Making and Receiving Calls

- **To Make a Call:** Enter the phone number using the keypad and press the Call key (green button).
- **To Answer a Call:** Press the Call key when the phone rings.
- **To End a Call:** Press the End Call key (red button).

6.3. Messaging (SMS/MMS)

To send a text message, navigate to the 'Messages' menu, select 'New Message', enter the recipient's number or select from contacts, type your message, and send. The phone supports both SMS (text only) and MMS (multimedia messages with images or audio).

6.4. Contacts

Store frequently called numbers in your phone's contacts list. Access the 'Contacts' menu to add, edit, or delete entries. You can assign names and multiple numbers to each contact.

6.5. Camera

Your phone is equipped with a 2MP camera. To take a photo, open the 'Camera' application from the main menu. Frame your shot

using the display and press the center selection key to capture the image. Photos are saved to the phone's internal memory (8GB).

6.6. Connectivity

The ZTE Cymbal U Link II Z2335CC supports 4G cellular technology, including GSM, LTE, and UMTS networks. It features USB connectivity for data transfer and charging, and a 3.5 mm audio jack for wired headsets.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's exterior. Avoid using liquid cleaners or aerosols.
- **Battery Care:** Do not expose the battery to extreme temperatures. If the phone will not be used for an extended period, store it in a cool, dry place with a partial charge.
- **Storage:** Store the phone in a safe place, away from direct sunlight, dust, and moisture.

8. TROUBLESHOOTING

If you encounter issues with your phone, refer to the following common problems and solutions:

Problem	Possible Solution
Phone does not turn on	Ensure the battery is properly installed and charged. Connect the charger and try again.
No network signal	Check if the SIM card is correctly inserted. Move to an area with better network coverage. Contact your service provider.
Cannot make or receive calls	Verify network signal. Check if call barring is enabled. Ensure sufficient balance if using a prepaid service.
Keypad unresponsive	Restart the phone. If the issue persists, contact customer support.

9. SPECIFICATIONS

Detailed technical specifications for the ZTE Cymbal U Link II Z2335CC:

Feature	Detail
Model Number	0416Z02HSJJ
Dimensions (Package)	4.84 x 3.27 x 2.36 inches
Item Weight	8.4 ounces
Display Size	2.8 Inches (Standing screen display size)
Resolution	320 x 240
Battery Capacity	1600 Milliamp Hours
Phone Talk Time	8 Hours
Memory Storage Capacity	8 GB
Camera	2MP (Rear)
Wireless Communication Technologies	Cellular (4G)

Feature	Detail
Wireless Network Technology	GSM, LTE, UMTS
Connectivity Technology	USB
Audio Jack	3.5 mm
Form Factor	Flip
Color	Black
Manufacturer	ZTE
Date First Available	October 24, 2021

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official ZTE website. Keep your proof of purchase for warranty claims.

ZTE Customer Service: Please visit www.zteusa.com/support/ for the most up-to-date support resources, FAQs, and contact information.

© 2024 ZTE Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question