

HOMCOM 800-084

HOMCOM 10 Liter 750W Electric Tabletop Oven

Model: 800-084

Instruction Manual

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged from the power outlet before cleaning or when not in use.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Ensure adequate ventilation around the oven during operation. Do not place the oven near walls or under cabinets.
- The exterior surfaces of the oven become very hot during use. Use oven mitts when handling hot parts.
- **Warning:** Avoid placing any plastic containers or utensils inside the oven. The extreme heat can cause plastic to melt, potentially damaging the oven and the container.

PRODUCT OVERVIEW

The HOMCOM 10 Liter Electric Tabletop Oven is a compact and versatile appliance designed for various cooking tasks, including toasting, baking, and roasting. It features adjustable temperature and a convenient timer for precise cooking control.



Front view of the HOMCOM 10 Liter Electric Tabletop Oven, showcasing its compact design and control knobs.

Key Features:

- **Adjustable Temperature:** Easily set temperatures from 100°C to 230°C.
- **60-Minute Timer:** Integrated timer for precise cooking duration.
- **10 Liter Capacity:** Suitable for pizzas up to 22 cm in diameter or 4 slices of bread.
- **Functional Design:** Glass door for monitoring cooking progress and 2 adjustable tray positions.
- **Easy Cleaning:** Removable bottom plate for convenient cleaning.
- **Accessories:** Includes 1 rack and 1 tray with a handle.

SETUP


1. **Unpacking:** Carefully remove the oven and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the oven on a stable, flat, and heat-resistant surface. Ensure there is at least 10-15 cm of clear space on all sides and above the oven for proper ventilation. Do not place it directly against a wall or under cabinets.
3. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash the baking tray and wire rack in warm, soapy water, then rinse and dry thoroughly.
4. **First Use (Burn-off):** To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at the maximum temperature (230°C) with the timer set. Ensure the area is well-ventilated during this process. A slight smoke or odor is normal during the first use.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your oven.



Ensure the oven is placed on a stable surface with adequate clearance for ventilation.

OPERATING INSTRUCTIONS

This section details how to use your HOMCOM tabletop oven for various cooking needs.

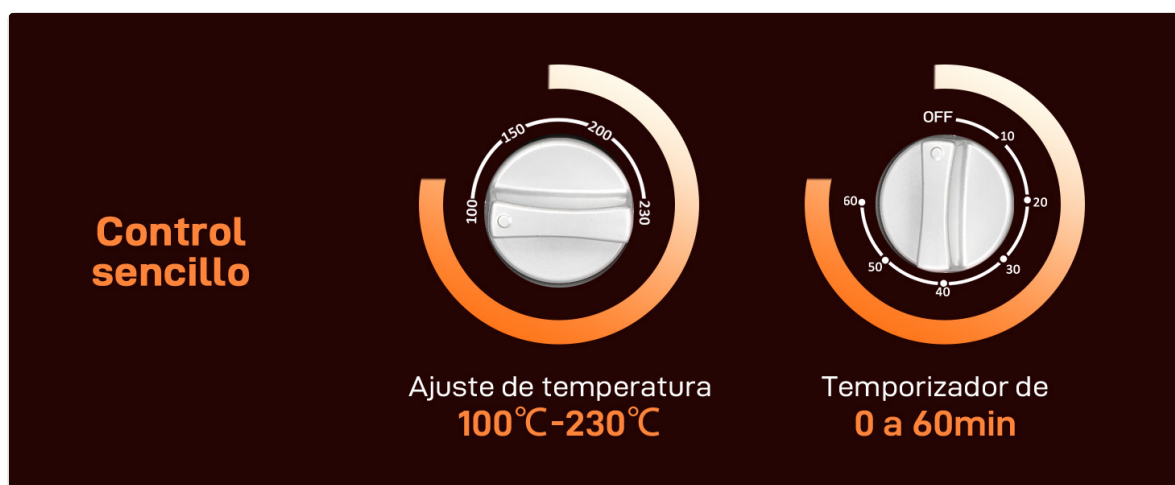

The two control dials for temperature and timer settings.

1. **Prepare Food:** Place your food on the baking tray or wire rack. For best results, use oven-safe bakeware.
2. **Insert Tray/Rack:** Open the oven door and slide the tray or rack into one of the two available positions. The lower position is generally for larger items or for more bottom heat, while the upper position is for smaller items or for more top heat.



Carefully place food inside the oven using the provided tray and rack.

3. **Set Temperature:** Turn the upper control knob to select the desired cooking temperature, ranging from 100°C to 230°C.
4. **Set Timer:** Turn the lower control knob to set the cooking time, up to 60 minutes. The oven will begin heating immediately. The indicator light will illuminate when the oven is operating.
5. **Monitor Cooking:** The glass door allows you to monitor the cooking process without opening the oven, helping to maintain consistent temperature.
6. **Completion:** Once the set time has elapsed, the oven will automatically turn off, and a bell will sound. If you need to stop cooking before the timer finishes, turn the timer knob to the 'OFF' position.
7. **Remove Food:** Using oven mitts, carefully open the door and remove the baking tray or wire rack with the cooked food. Be cautious of hot steam.

Cooking Tips:

- For optimal results, preheat the oven for 5-10 minutes before placing food inside.
- Adjust cooking times and temperatures based on your specific recipe and desired doneness.
- Avoid overcrowding the oven to ensure even cooking.

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and longevity of your oven.

1. **Safety First:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Interior Cleaning:**
 - The bottom plate of the oven can be opened outwards for easier access to crumbs and spills.
 - Wipe the interior walls and bottom plate with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner designed for ovens can be used.
 - Do not use abrasive cleaners, scouring pads, or sharp objects, as these can damage the interior surfaces.
3. **Accessories:** Wash the baking tray and wire rack in warm, soapy water. Rinse thoroughly and dry completely before storing or reusing.
4. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use harsh chemicals or

abrasive materials.

- 5. **Glass Door:** Clean the glass door with a glass cleaner or a damp cloth. Avoid scratching the surface.
- 6. **Storage:** When not in use, ensure the oven is clean and dry. Store it in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the oven is securely plugged into a working outlet. Check your home's circuit breaker.
Food is not cooking evenly.	Oven overcrowded; incorrect tray position; preheating not done.	Avoid overcrowding. Try a different tray position. Always preheat the oven.
Oven produces smoke during first use.	Residual manufacturing oils burning off.	This is normal. Ensure good ventilation. It should subside after the initial burn-off.
Timer not working.	Timer knob not set correctly.	Ensure the timer knob is turned past the 10-minute mark and then back to the desired time.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Brand	HOMCOM
Model Number	800-084
Capacity	10 Liters
Wattage	750 Watts
Temperature Range	100°C - 230°C
Timer	0 - 60 Minutes
Dimensions (LxWxH)	36.5 cm x 26 cm x 22 cm
Interior Dimensions (LxWxH)	25.7 cm x 21.6 cm x 17.8 cm
Material	Metal, Stainless Steel, Tempered Glass
Control Type	Button Control
Weight	2.9 Kilograms

WARRANTY AND SUPPORT

This HOMCOM Electric Tabletop Oven comes with a **3-year warranty** from the date of purchase, covering manufacturing defects under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact the retailer or manufacturer directly. Please have your model number (800-084) and proof of purchase ready when contacting support.

Manufacturer: SPANISH AOSOM