

[Manuals.plus](#) /

> [Gevi](#) /

> Gevi 20 Bar Compact Professional Espresso Coffee Machine with Milk Frother/Steam Wand for Espresso, Latte and Cappuccino, Stainless Steel, 35 Oz Removable Water Tank (Machine)

Gevi GECME418E-U

Gevi 20 Bar Compact Professional Espresso Coffee Machine User Manual

Model: GECME418E-U

Brand: Gevi

PRODUCT OVERVIEW

The Gevi 20 Bar Compact Professional Espresso Coffee Machine is designed to deliver high-quality espresso, latte, and cappuccino. Featuring a powerful 20-bar Italian pump and a rapid heating system, it ensures optimal flavor extraction and rich crema. The integrated milk frother/steam wand allows for versatile milk preparation, while its compact stainless steel design fits seamlessly into any kitchen.



Image: Front view of the Gevi 20 Bar Espresso Machine, showing two espresso shots being dispensed into glass cups, alongside a stainless steel milk frothing pitcher.

Video: An overview of the Gevi 5418-20 Bar Compact Espresso Maker with Milk Frother, highlighting its features and design.

SETUP AND INITIAL USE

Before first use, it is crucial to perform an initial cleaning and system flush to ensure optimal performance and hygiene.

1. Water Tank Installation and Filling

Ensure the removable 35 oz water tank is properly seated at the back of the machine. Fill the tank with fresh, filtered water up to the MAX level indicated. The tank features a silicone cover to protect the valve at the bottom.



Image: Close-up view of the Gevi Espresso Machine highlighting its removable water tank, drip tray, and cup warming plate.

2. Initial System Flush

After filling the water tank, turn on the machine. Once the machine is pre-heated (indicated by the main switch light becoming solid blue), place a cup under the steam wand. Rotate the steam knob to release hot water through the wand for a few seconds. This helps to prime the pump and clean the internal system. Repeat this process for the brew head by placing a cup under the portafilter and pressing the single shot button to dispense hot water.

Video: Detailed instructions on precautions for the Gevi GECME418E-U Machine during its first use, including initial flushing and tank handling.

OPERATING INSTRUCTIONS

1. Making Espresso

For optimal espresso, use fine-ground coffee beans. Fill the portafilter basket with the desired amount of ground coffee (1 spoon for single shot, 2 spoons for double shot). Tamp the grounds lightly and evenly, ensuring they are below the MAX line. Attach the portafilter to the brew head and lock it into place. Place your espresso cup(s) on the drip tray. Once the machine is ready (all blue lights solid), press the single or double shot button to begin brewing. Monitor the pressure gauge for optimal extraction (within the espresso range).

Fresh Coffee Ground Made Quick And Easy



How To Use The Coffee Machine



- STEP 1 -
Add filtered water
to the water
tank.



- STEP 2 -
Add coffee grounds
to the filter and
tamp.



- STEP 3 -
Install portafilter and make
sure that it's locked
in place.



- STEP 4 -
Choose Single/short cup dose
selection or Double/long cup
dose selection.



- STEP 5 -
The machine will
automatically brew
coffee.

Image: Steps for preparing fresh ground coffee and brewing espresso using the Gevi machine.

Video: A comprehensive guide on how to make perfect espresso coffee with the Gevi GECME418E-U Espresso Machine.

2. Frothing Milk

Fill a stainless steel pitcher with cold milk (41-45°F). Position the steam wand just below the surface of the milk. Rotate the steam knob to activate the steam. Move the pitcher up and down to create microfoam. Once the milk has doubled in volume and reached the desired temperature (around 140-150°F), close the steam knob. Immediately clean the steam wand after use.

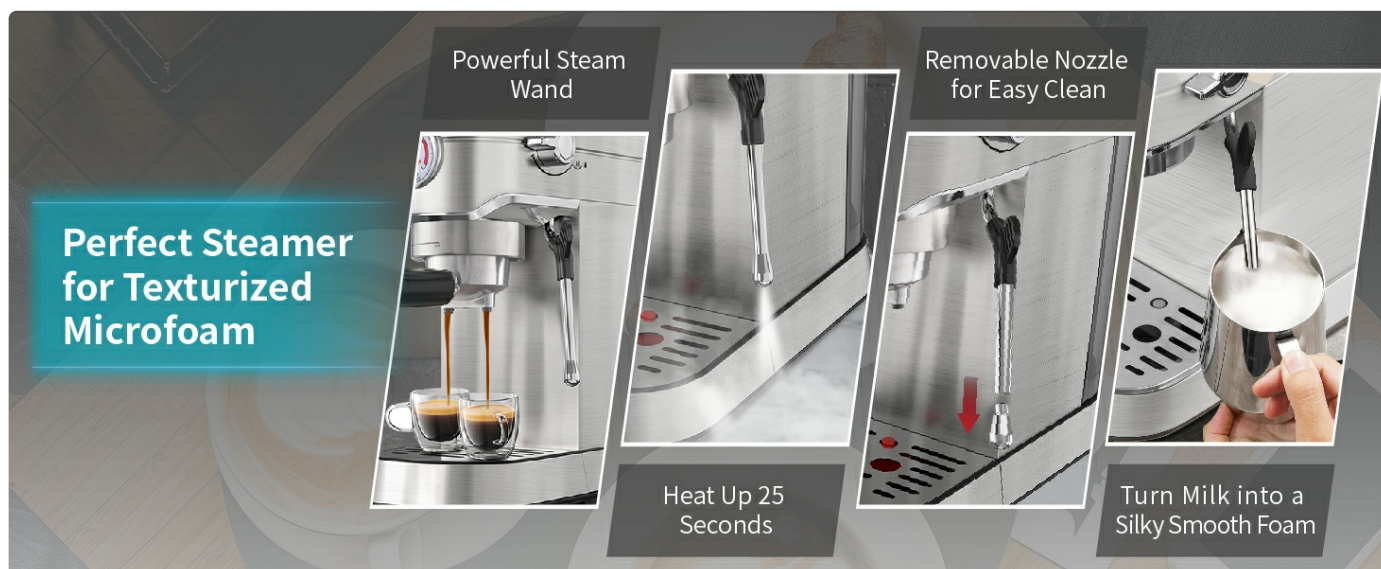


Image: Sequence of images demonstrating the milk frothing process using the Gevi machine's powerful steam wand.

Video: Instructions on how to froth milk effectively with the Gevi GECME418E-U Espresso Machine.

3. Hot Water Function

The hot water function is ideal for making Americanos, hot teas, or warming cups before brewing espresso. Simply place a cup under the steam wand and rotate the steam knob to dispense hot water.



Hot Water Function

Hot water is designed for making long black coffee, hot drinks such as tea, instant soups, and for warming cups prior to making espresso.

Image: The Gevi Espresso Machine demonstrating its hot water dispensing function.

4. Customizing Brew Settings

The machine comes with factory default settings for single (25-60ml) and double (60-130ml) shots. To customize these volumes, press and hold the desired brew button (single or double) until the desired amount of espresso is dispensed. Release the button to save the new setting. The machine will emit a beep to confirm the new volume. To reset to factory defaults, press and hold the single shot and power buttons simultaneously for more than 3 seconds.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance are essential for the longevity and optimal performance of your espresso machine.

1. Daily Cleaning

After each use, remove the portafilter and discard the used coffee grounds. Rinse the portafilter and filter basket under running water. Empty and clean the drip tray. Wipe down the exterior of the machine with a damp cloth. For the steam wand, immediately after frothing, wipe it with a damp cloth and purge a small amount of steam to clear any milk residue from the nozzle.



Image: Step-by-step guide for cleaning the brewer and frother of the Gevi Espresso Machine after each use.

2. Descaling

The machine features a descaling function to remove mineral buildup. The machine will indicate when descaling is needed (e.g., power button and steam button blue light flashing simultaneously for 10 seconds, with a buzzer sound). Follow the instructions in the full user manual for the complete descaling process using a suitable descaling solution.

To Clean the Brewer



— Step 1 —
Prepare water and add descaler. Mix them evenly. Fill the water tank




— Step 2 —
Choose Single/short cup to dispense some descaling solution.



— Step 3 —
Let the descaling solution soaks the limescale inside the machine for 60 minutes.



— Step 4 —
Long press the Single/short cup button, Double/long cup button, and Steam button simultaneously for 3 seconds to clean.

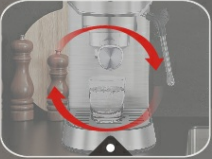

— Step 5 —
Repeat the 1-4 steps with clean water for several times until there is no descaler smell.

How to Deeply Clean Your Machine



— Step 1 —
Use the cleaning pins to clear the froth nozzle.




— Step 2 —
Detach the froth nozzle with a damp cloth, and soak it in a container for a while.



— Step 3 —
Turn the Steam/water Knob to the steam icon.



— Step 4 —
Turn the Steam/water Knob to the horizontal position until all of the descaling solution flows out.

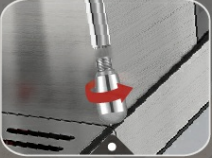

— Step 5 —
Attach froth nozzle back to the steam wand.

Image: Detailed steps for deeply cleaning and descaling the Gevi Espresso Machine.

TROUBLESHOOTING

If your Gevi espresso machine is not functioning as expected, please check the following common issues:

- **No Power:** Ensure the machine is properly plugged into a working electrical outlet.
- **No Water Dispensing:** Check if the water tank is filled and correctly seated. Perform a system flush as described in the Initial Use section.
- **Weak Espresso/No Crema:** Ensure you are using fresh, finely ground coffee. Check that the coffee is tamped correctly and the portafilter is securely locked.
- **No Steam/Weak Steam:** Allow the machine sufficient time to pre-heat for steam. Ensure the steam wand is not clogged and is properly purged after each use.

For more detailed troubleshooting, please refer to the full user manual.

SPECIFICATIONS

Feature	Detail
Brand	Gevi
Product Dimensions	7.1"D x 15.9"W x 13.4"H
Item Weight	10.12 pounds
Special Feature	Removable Tank, Milk Frother
Coffee Maker Type	Espresso Machine

Filter Type	Reusable
Operation Mode	Fully Automatic
Item Model Number	GECME418E-U

WARRANTY AND SUPPORT

For detailed warranty information, technical support, or to download the complete Instructions for Use (IFU) manual, please visit the official Gevi website or refer to the PDF document provided with your product.

You can also access the Instructions for Use (IFU) PDF [here](#).

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference. Always ensure the machine is unplugged before cleaning or maintenance. Do not immerse the machine in water or any other liquid. Keep out of reach of children. Use only as directed in this manual.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question